



H3 Insert Double Hung Picture
71 1/2"x83 1/2" Frame Size
Thru-Frame Installation / Non-Impact

TEST REPORT SUMMARY:

OVERALL BASIC UNIT SIZE:

71 1/2"(1816mm)x83 1/2"(2121mm)

- OVERALL DESIGN PRESSURE: ± 40.10 psf

- STRUCTURAL TEST PRESSURE: ± 60.15 psf

- RATING: LC-PG40

CCL Listing# 436-H-674.16-.20

Element Test Report Number: **ESP033996P-2572.2**

H3 Insert Double Hung Clad/Wood Composite Picture
Thru-Frame Installation / WDMA Instructions

PAGE 1 of 2

UPDATED 11/04/2020

DRAWN BY: B.K.

INSTALLATION NOTES:

1. USE 2" x _ WOOD BUCK

2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL, JAMBS. PLACE WOOD SHIMS 6-10".



3. INSTALL #8 X 3" PPH SCREWS ANGLE DRIVEN THRU-FRAME AT THE HEAD AND SIDE JAMBS, 4" FROM EACH CORNER AND 16" ON CENTER AT THE HEAD AND 15" ON CENTER AT THE SIDES.

4. APPLY BACKER ROD WITH A CONTINUOUS BEAD OF SEALANT BETWEEN THE FRAME AND ROUGH OPENING, ON ALL FOUR SIDES.

5. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL.

6. WINDOW SIZE: OVERALL FRAME SIZE 71 1/2"(1816mm)X83 1/2"(2121mm)

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening should allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific web site, www.sierrapacificwindows.com / Professionals / Design Resource, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others.

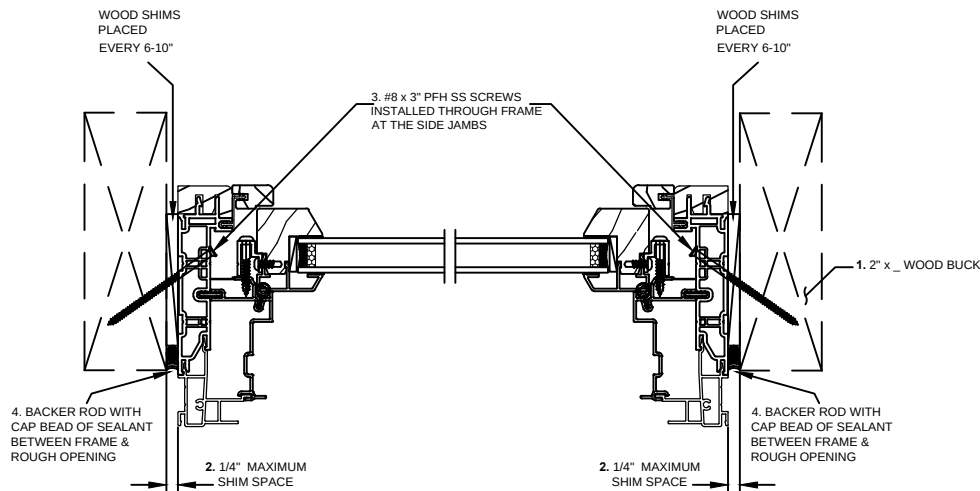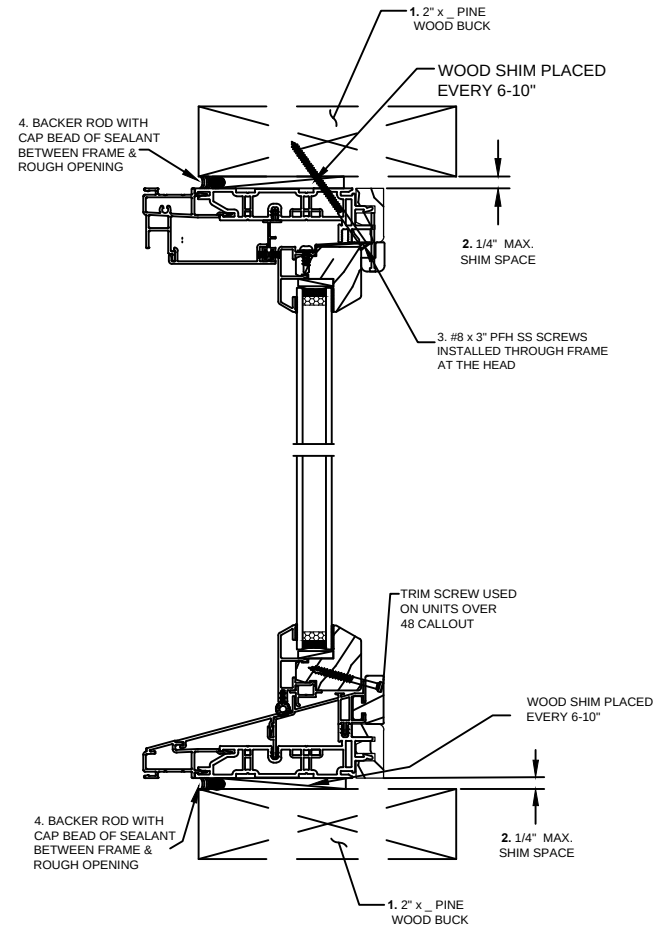



H3 Insert Double Hung Picture
71 1/2"x83 1/2" Frame Size
Thru-Frame Installation / Non-Impact

TEST REPORT SUMMARY:

OVERALL BASIC UNIT SIZE:

71 1/2"(1816mm)x83 1/2"(2121mm)

- OVERALL DESIGN PRESSURE: ± 40.10 psf

- STRUCTURAL TEST PRESSURE: ± 60.15 psf

- RATING: **LC-PG40**

CCL Listing# 436-H-674.16-.20

Element Test Report Number: **ESP033996P-2572.2**

H3 Insert Double Hung Clad/Wood Composite Picture
Thru-Frame Installation / WDMA Instructions

PAGE 2 of 2

UPDATED 11/04/2020

DRAWN BY: B.K.

**ELEVATION SHOWING
FASTENER LOCATION & SPACING
(TYP.)**

