



H3 Double Hung Pocket Fixed
71 1/2"x83 1/2" Frame Size
Thru-Frame Installation / Non-Impact

TEST REPORT SUMMARY:

OVERALL BASIC UNIT SIZE:

71 1/2"(1816mm)x83 1/2"(2121mm)

- OVERALL DESIGN PRESSURE: **±50.10 psf**

- STRUCTURAL TEST PRESSURE: **±75.20 psf**

- RATING: **CW-PG50**

CCL Listing# 436-H-674.21-.25

Quast Consulting & Testing #: **QCT20-6052.02**

H3 Double Hung Pocket Clad/Wood Composite Fixed
Thru-Frame Installation / WDMA Instructions

PAGE 1 of 2

UPDATED 02/23/2021

DRAWN BY: B.K.

INSTALLATION NOTES:

1. USE 2" x _ WOOD BUCK

2. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL, JAMBS. PLACE WOOD SHIMS 6-10".



3. INSTALL #8 X 2 1/2" PFH SCREWS ANGLE DRIVEN THRU-FRAME AT THE HEAD AND SIDE JAMBS, 6" FROM EACH CORNER AND 15" ON CENTER AT THE HEAD AND SIDES.

4. APPLY BACKER ROD WITH A CONTINUOUS BEAD OF SEALANT BETWEEN THE FRAME AND ROUGH OPENING, ON ALL FOUR SIDES.

5. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL.

6. WINDOW SIZE: OVERALL FRAME SIZE 71 1/2"(1816mm)X83 1/2"(2121mm)

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening should allow a maximum of 1/4" shim space at head, sill and jambs.
- Consult full installation instructions found on the Sierra Pacific web site, www.sierrapacificwindows.com / Professionals / Design Resource, for all recommended installation procedures.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others.

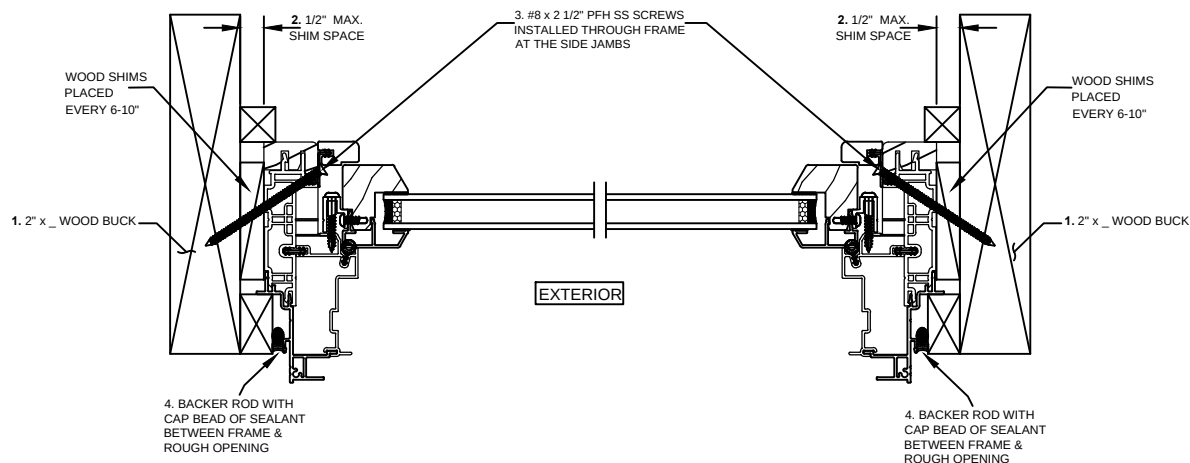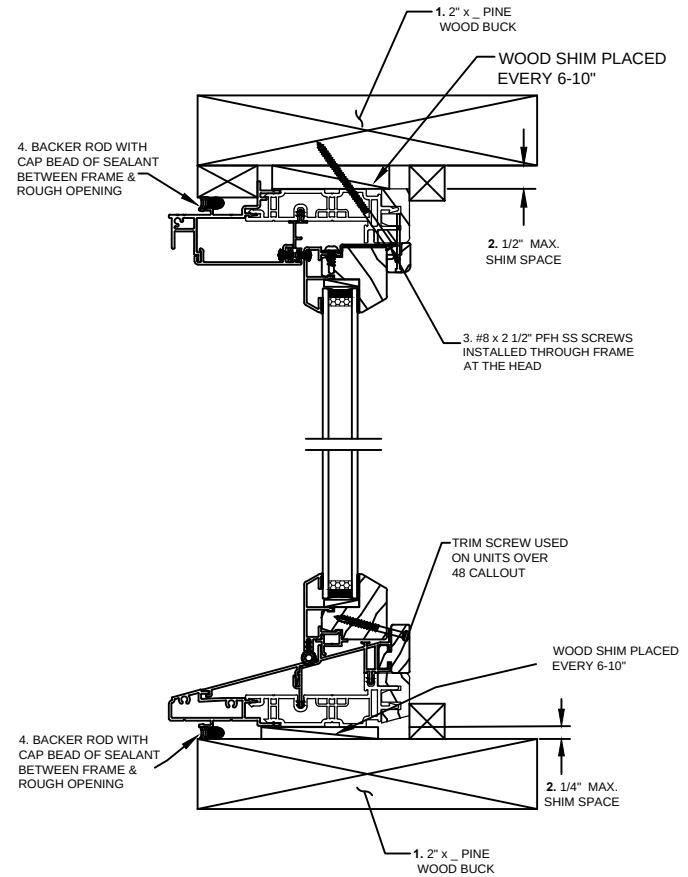



H3 Double Hung Pocket Fixed
71 1/2"x83 1/2" Frame Size
Thru-Frame Installation / Non-Impact

TEST REPORT SUMMARY:

OVERALL BASIC UNIT SIZE:

71 1/2"(1816mm)x83 1/2"(2121mm)

- OVERALL DESIGN PRESSURE: ± 50.10 psf

- STRUCTURAL TEST PRESSURE: ± 75.20 psf

- RATING: **CW-PG50**

CCL Listing# 436-H-674.21-.25

Quast Consulting & Testing #: **QCT20-6052.02**

H3 Double Hung Pocket Clad/Wood Composite Fixed
Thru-Frame Installation / WDMA Instructions

PAGE 2 of 2

UPDATED 02/23/2021

DRAWN BY: B.K.

**ELEVATION SHOWING
FASTENER LOCATION & SPACING
(TYP.)**

