



All-Wood Casement Operating 2-Wide
72 3/8" x 72 3/16" Overall Frame Size
Brickmould Installation / Non-Impact

TEST REPORT SUMMARY:

- MAXIMUM OVERALL FRAME SIZE:
SINGLE: 36 3/16" (919mm) x 72 3/16" (1834mm)
TWIN: 72 3/8" (1838mm) x 72 3/16" (1834mm)
- OVERALL DESIGN PRESSURE: ± 40.1 psf
- STRUCTURAL TEST PRESSURE: ± 60.1 psf
- RATING: CW-PG40

CCL Listing #436-H-675.13-16

Quast Consulting & Testing #: QCT22-6599.02

All-Wood Casement Operating/Operating
Brickmould Installation / WDMA Instructions / Non-Impact

SHEET: 1 OF 2 FL41866

UPDATED: 7/26/2022

DRAWN BY: B.K.

INSTALLATION NOTES:



1. USE 2" x PINE FOR WOOD BUCK
2. PLACE WOOD SHIMS EVERY 6-10"
3. 1/4" MAXIMUM SHIM SPACE AT HEAD, SILL AND EACH JAMB
4. PLACE A CONTINUOUS BEAD OF SEALANT BETWEEN THE BRICKMOULD AND THE BUCK.
5. PRE-DRILL AND INSTALL #9 X 2 1/2" TRIM HEAD DECK SCREWS THROUGH THE BRICKMOULD SPACED 2" FROM CORNERS AND 8-9" MAX ON CENTER THEREAFTER.
6. 1" MINIMUM FASTENER EMBEDMENT INTO FRAMING MATERIAL
7. MAXIMUM WINDOW SIZE: B.U.S. (Basic Unit Size) =
SINGLE: 36 3/16" (919mm) x 72 3/16" (1834mm)
TWIN: 72 3/8" (1838mm) x 72 3/16" (1834mm)

GENERAL INSTALLATION NOTES:

- Check rough opening for proper size, plumb, level and square.
- Make all necessary adjustments to ensure rough opening is plumb, level & square.
- Sill must be flat, level and capable of supporting the weight of the unit.
- Opening must allow a maximum of 1/4" shim space at head, sill and jambs.
- Wood buck, framing, fasteners, sealant and all wall system materials are provided by others

FLASHING

- For units that have to meet a specific DP (Design Pressure) rating, any kind of building wrap must be folded and taped away from each rough opening before the unit is installed. Unit must come in contact with the building's bare sheathing. A bead of silicone must be applied to the backside of the nail fin where it meets the unit, at head and jambs.
- Once unit is installed and flashed properly, the building wrap must be reapplied and trimmed flush with the unit's exterior. A bead of sealant must be placed along the seam joint of the building wrap and the unit. Tape the corner cuts in the building wrap.

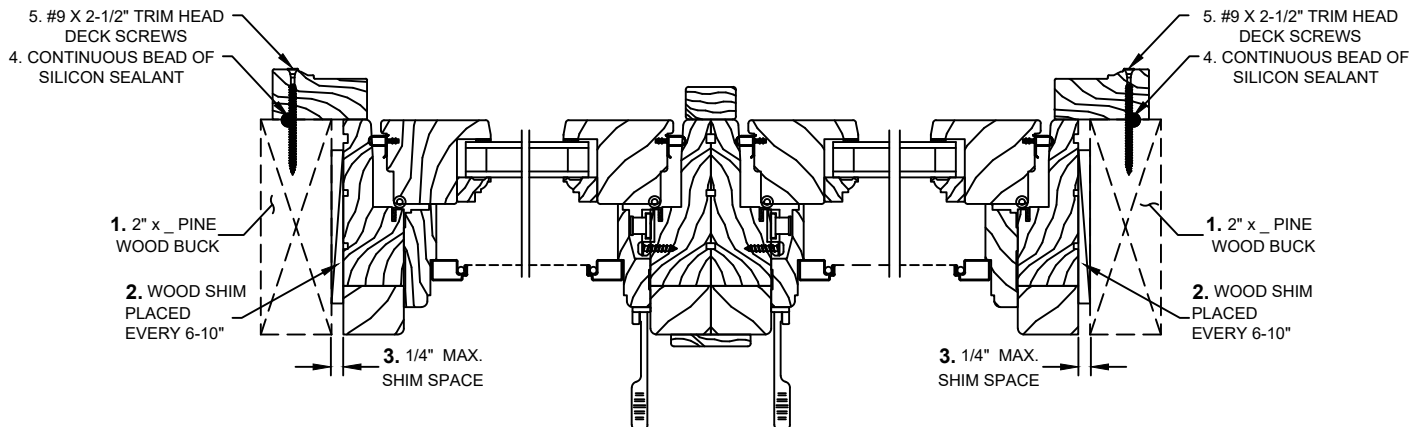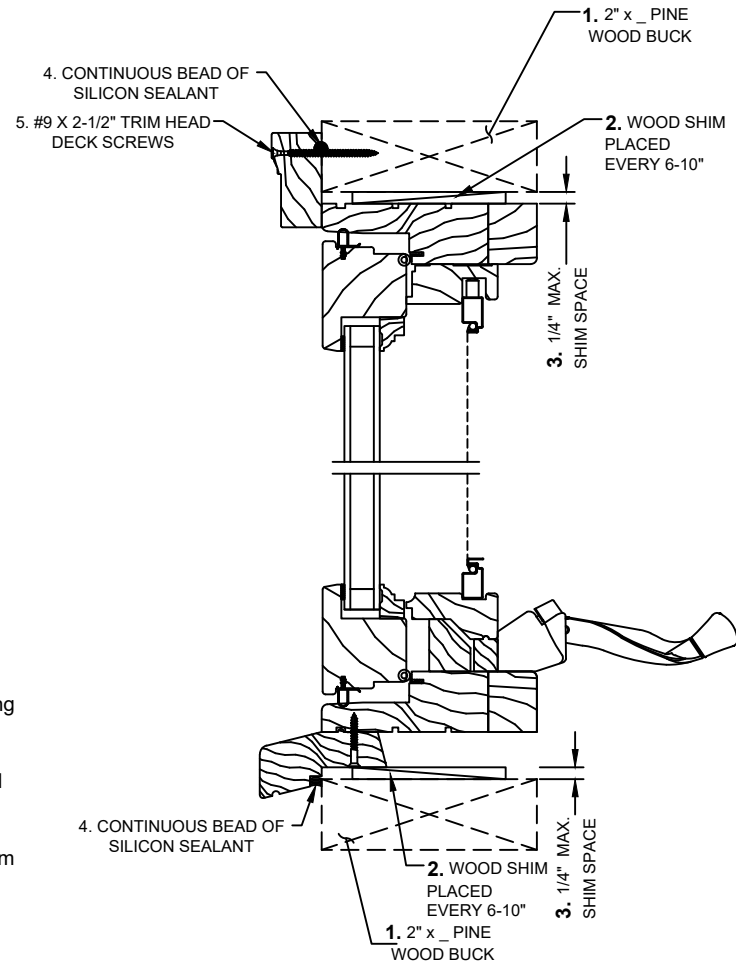



All-Wood Casement Operating 2-Wide
72 3/8" x 72 3/16" Overall Frame Size
Brickmould Installation / Non-Impact

TEST REPORT SUMMARY:

- MAXIMUM OVERALL FRAME SIZE:
SINGLE: 36 3/16" (919mm) x 72 3/16" (1834mm)
TWIN: 72 3/8" (1838mm) x 72 3/16" (1834mm)
- OVERALL DESIGN PRESSURE: ± 40.1 psf
- STRUCTURAL TEST PRESSURE: ± 60.1 psf
- RATING: CW-PG40

CCL Listing #436-H-676.02-.05

Quast Consulting & Testing #: QCT22-6599.01

All-Wood Casement Operating/Operating
Brickmould Installation / WDMA Instructions / Non-Impact

SHEET: 2 OF 2

UPDATED: 7/26/2022

DRAWN BY: B.K.

ELEVATION SHOWING FASTENER LOCATION & SPACING (TYP.)

