

BOTTOM PANEL LAPS 0'-6"
ABOVE PURLIN
TOP PANEL LAPS 0'-2"
BELOW PURLIN

TOP SHEET OR RIDGE CAP

BOTTOM SHEET

1" MASTIC TAPE ON
SPLICES & RIDGE CAPS

3/8" MASTIC TAPE
AT SIDE LAPS
(ROOF ONLY)

AT 1'-0" O.C.
TYP. INSTALLATION OF
1 1/4" TEK SCREWS

0'-8"
TOTAL LAP

RIDGE
PURLIN

(2) PER 1'-0"
AT RIDGE PURLIN

INTERMEDIATE
PURLIN

(TYP) LAPTEK DRILLER
1'-8" O.C. MAX. ON ROOF

INTERMEDIATE
PURLIN

1'-0" O.C.
TYP. AT PURLINS

(TYP) SELF DRILLERS @
INTERMEDIATE PURLINS

EAVE STRUT

(2) PER 1'-0"
AT EAVE STRUT


(TYP) SCREW PATTERN @ TOP
BOTTOM & SPLICE PURLINS

LAP W/EAVE TRIM 4"

LAP W/GUTTER 3"


1'-0" 1'-0" 1'-0" 1'-0" 1'-0" 1'-0"
3'-0" 3'-0"

SHEETING DIRECTION

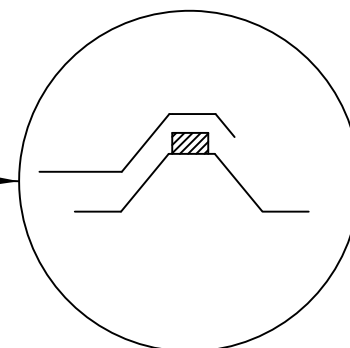

ERECTOR NOTE:

SWEEP ROOF DAILY
TO REMOVE ALL
METAL SHAVINGS

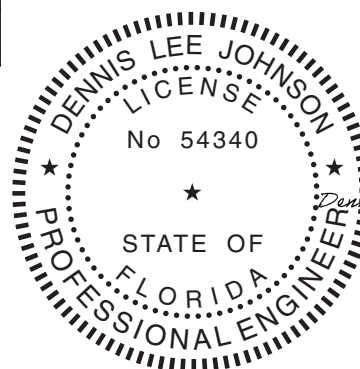

*** THIS SCREW PATTERN IS RATED FOR UL 90 ***

S.S.I. (TYP.) ROOF PANEL INSTALLATION