




BRICKMOULD/FLAT CASING INSTALLATION METHOD FOR ALL WOOD WINDOW PRODUCTS

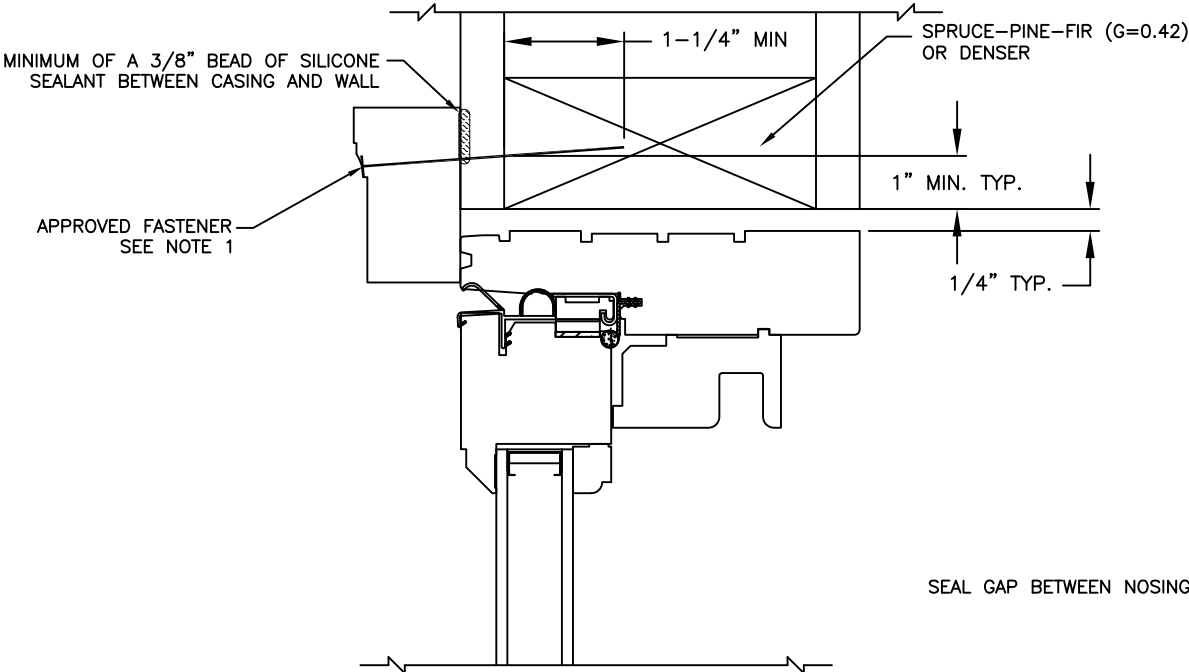

TYPICAL BRICKMOULD/FLAT CASING WINDOW HEAD JAMB

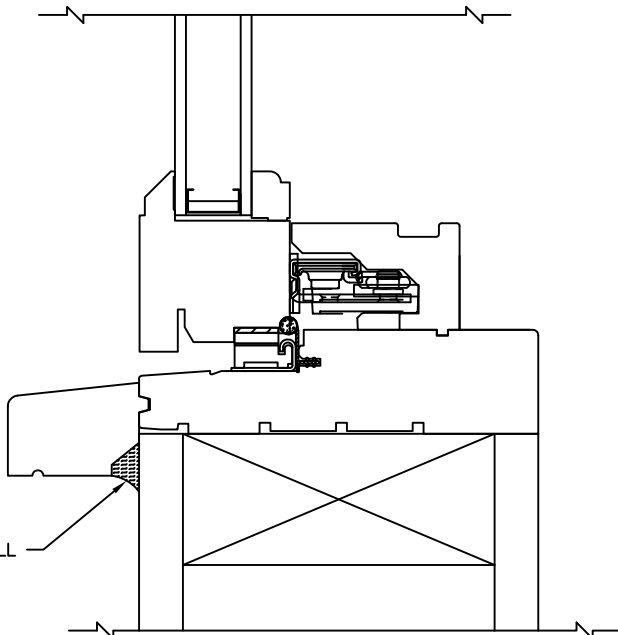

TYPICAL BRICKMOULD/FLAT CASING WINDOW SILL

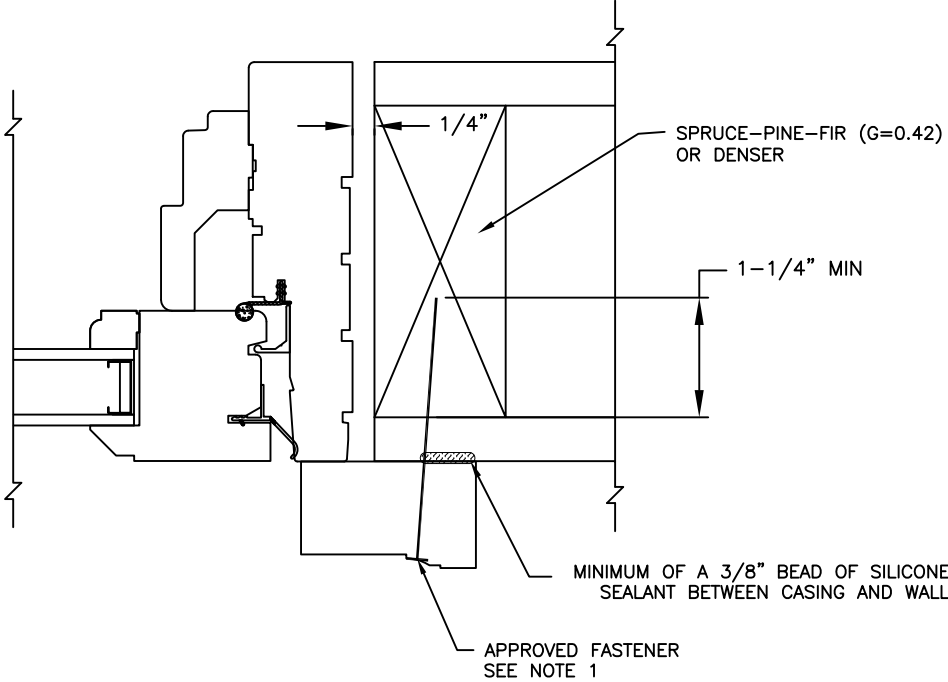

TYPICAL BRICKMOULD/FLAT CASING WINDOW SIDE JAMB


1. Approved Fasteners are:

- #6 x 3" Wood Screw conforming to ANSI/ASME B18.6.1 and NDS-2012 (Impact)
- #8 x 3" Wood Screw conforming to ANSI/ASME B18.6.1 and NDS-2012 (Impact)

Fastener length shall be sufficient to guarantee 1-1/4" penetration into wood buck. Fastener edge distance shall be at least 1".

- All frame anchors securing window frame to pressure treated bucks or wood framing shall be capable of resisting corrosion caused by the pressure treating chemicals in the wood.
- All anchors shall be installed as specified on this drawing.
- Wood buck installations are assumed 2x S-P-F (G=0.42) or denser.
- Tapered or partial bucks are not allowed
- Wood buck shall be secured to structure to resist all design loads
- Number of anchors may be proportionately reduced for smaller windows provided depicted spacings are maintained.
- A continuous bead of sealant must be applied around the perimeter of the rough opening between the back of the wood brickmould / casing and the wall and between the bottom of the sill nosing and the wall.
- Non-impact products installed in Wind-Borne Debris Regions require approved impact resistance covering. Products are not approved for use in High Velocity Hurricane Zone (HVHZ).
- This installation verified for all sizes and design pressures in FL4572. See product approval documentation for actual size and design pressures associated with product.
- Any geometric shape that fits within the size of the rectangular product tested is qualified by the by the rectangular product provided that the frame, sash, leaves, panels, hardware, hardware location, components and construction remain the same.

This drawing depicts the details necessary to meet the structural load requirements. It does not address the air infiltration, water penetration/intrusion or thermal performance requirements of the installation. See installation instructions provided with the window or door unit

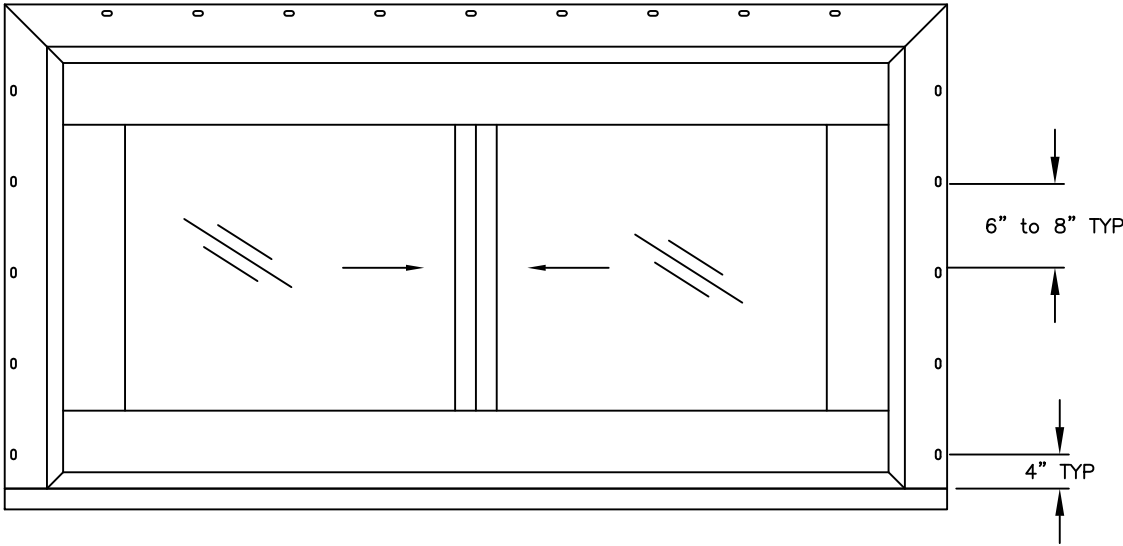

JOSEPH A. REED
LICENSED
No. 58920
STATE OF
FLORIDA
PROFESSIONAL ENGINEER


Digitally Signed by: Joseph A. Reed

2015.03.02 14:58:12 -05'00'

Joseph A. Reed, PE
Architectural Testing, Inc.
130 Derry Ct.
York, PA 17404
(717) 765-7700
FL COA 29274
Project E5692.01-122-34

The information contained herein is PROPRIETARY to and considered a trade secret of Lincoln Wood Products, Inc., a Merrill, WI based firm, and shall not be reproduced in whole or in part without the written authorization of LINCOLN WOOD PRODUCTS INC.

TOLERANCES (UNLESS NOTED)	REVISIONS		DATE	BY	Lincoln Windows		
	1.	REVISED PER 2014 FBC	02/24/15	JAR			
	2.				701 N. State St. Merrill, WI 54452 (715) 536-2461		
	3.				ITEM: BRICKMOULD/FLAT CASING WINDOW INSTALLATION		
	4.				DRAWN BY: JJK SCALE: NONE DATE: 11/05/09		
	5.				DIRECTORY: DWG. NAME: BRICKMOULD WINDOW INSTALLATION		