



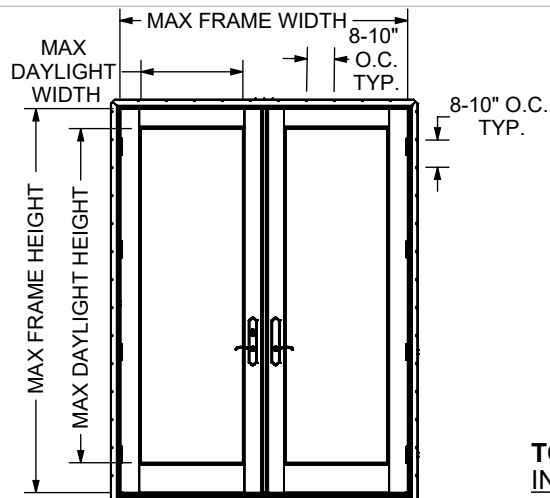

8610 Outswing French Door
W/Butt Hinges Side Hinge Door
Nailing Fin Installation

TOP VIEW
INTERIOR

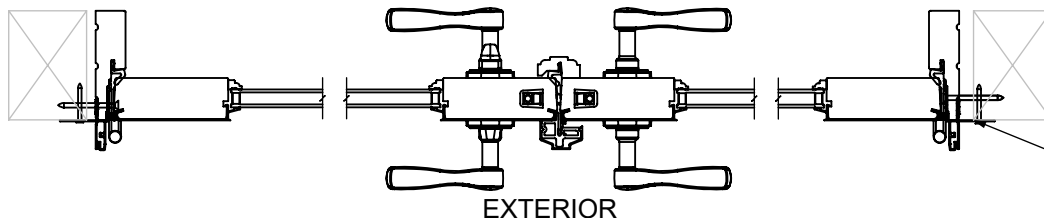

EXTERIOR

SECURE TO BUCK WITH
#7X 1-5/8" PFH WOOD SCREWS 2-4"
FROM CORNER AND 8"-10" ON
CENTER THROUGH NAILING
FIN AT HEAD AND SIDES TYP.
PERIMETER SEALANT
ON HEAD AND SIDES
BY OTHER TYP.

.750" MIN DISTANCE TYP.

SIDE VIEW
EXTERIOR

1.500 MIN. EMBEDMENT
INTO SUBSTRATE

[6.35]
.250 MAX
SHIM

SECURE TO BUCK
WITH (3) #10 X 3-1/2"
NON-CORROSIVE
SCREW PLACED
THROUGH THE HEAD
STRIKE PLATE
AND THROUGH
THE HEAD
JAMB INTO THE
BUCK.

INTERIOR

SECURED TO BUCK WITH
(2) #8 X 2-1/2" FH NON-
CORROSIVE SCREWS
PLACED THROUGH EACH
HINGE PLATE AND
THROUGH THE FRAME
INTO THE BUCK. TYP.

SILL SET INTO A
CONTINUOUS BED OF
SILICONE SEALANT

Description	Max Frame Size		Max Daylight Opening		Design Pressure (psf)	Frame Material	Installation Method
	Width (IN)	Height (IN)	Width (IN)	Height (IN)			
8610 OUTSWING FRENCH DOOR W/ BUTT HINGES SIDE HINGE DOOR	73.69	86.03	25.358	70.506	+/-50	ALUM/WOOD	THRU NAIL FIN

GENERAL NOTE(S):

- THESE UNITS HAVE BEEN TESTED, ANALYZED, HALLMARK CERTIFIED AND FBC APPROVED. THE PRODUCT SHOWN HEREIN IS DESIGNED AND MANUFACTURED TO COMPLY WITH THE CURRENT EDITION FLORIDA BUILDING CODE (FBC), EXCLUDING HVHZ. THE PRODUCT HAS BEEN EVALUATED TO THE FOLLOWING.
 - AAMA/WDMA/CSA 101/I.S.2/A440-17
 - AAMA/WDMA/CSA 101/I.S.2/A440-22
- THIS SCHEDULE ADDRESSES ONLY THE FASTENERS REQUIRED TO ANCHOR THE DOOR(S) TO ACHIEVE THE RATED DESIGN PRESSURE. THOROUGHLY READ AND FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS RECEIVED WITH UNIT. THIS GUIDE DOES NOT ADDRESS THE SEALING CONSIDERATIONS THAT MAY ARISE IN DIFFERENT WALL CONDITIONS.
- FASTENERS, ANCHORS, AND CONNECTORS SHALL COMPLY WITH THE CORROSION RESISTANCE REQUIREMENTS OF THE 2026 FLORIDA BUILDING CODE, SECTION 1711, BASED ON EXPOSURE CONDITIONS AND PROXIMITY TO A SALTWATER SHORELINE AND NOT ALL THE ONES SHOWN HERE NECESSARILY APPLY.

MATERIAL:		Weather Shield <i>Windows & Doors</i>	
DIV./ORDER #:			
DATE ORDERED:			
Q.C. COMPARATOR CHECK: ☐			
FINISH:			
CUT STOCK SIZE:		PRODUCTS: 8610 OUTSWING FRENCH DOOR BUTT HINGE SIDE HINGE	
ECO OR W.S. #:		TITLE: INSTALLATION INSTRUCTIONS	
TYP. WALL THICKNESS:		DWG. NO. 85-2634-07	
AREA:		REV. .1	
WT./FT.:		SCALE: 1/8" = 1'-0" SHEET NAME: Sheet1	
FILE PATH:		SHEET 1 OF 1	
DO NOT SCALE DRAWING		DRAWN BY: JMK DATE: 6/26/09	

REVISION	DATE	DESCRIPTION	WHITE SLIP NUMBER	ENG.