
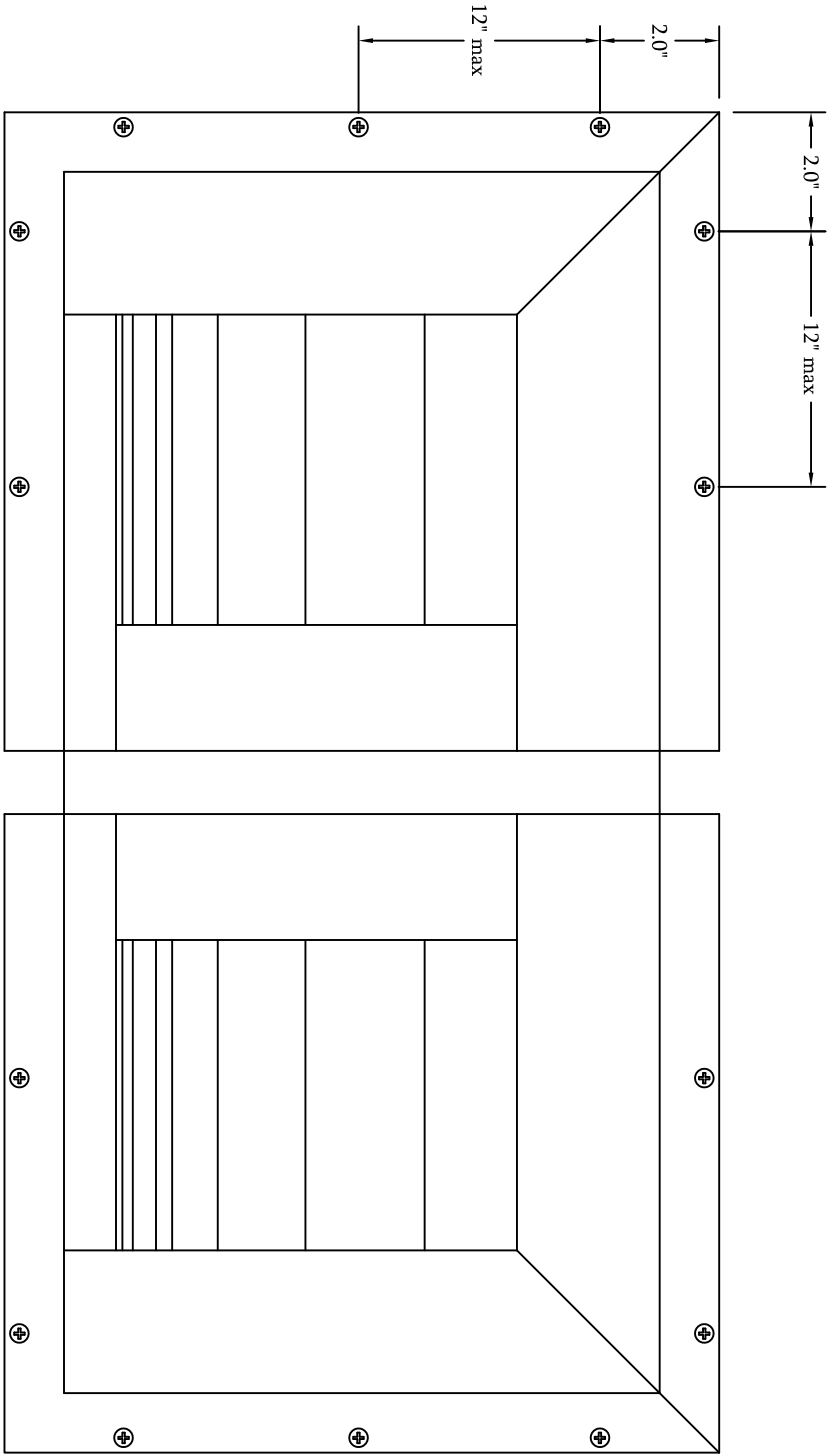
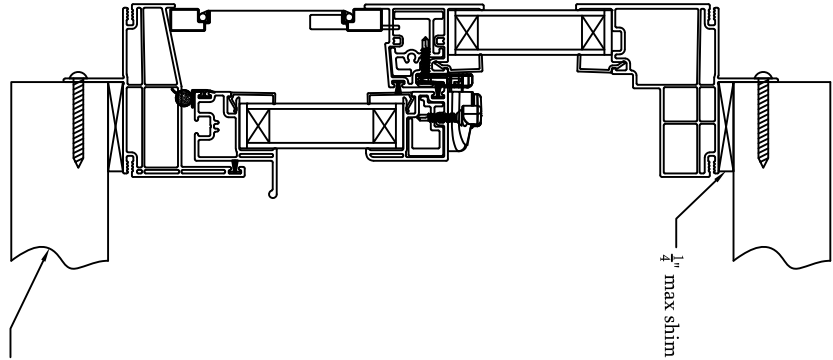


Apply Silicone Between Frame Nail Fin and 2 BY Wood Around Full Perimeter.

Fasten in 2 By Wood Frame with #8 x $\frac{1}{2}$ " Screw or Larger, 2" from each end of Nail Fin and Spaced every 12" max. on Centers.

Make Sure that Window is in the Closed and Locked Position During Installation. Make Sure that the Sill is Level and the Jambs are Plumb.

NOTE: Fasteners must have a minimum of 1" embedment into framing and be a minimum of $\frac{1}{2}$ " from the edge of the rough opening.

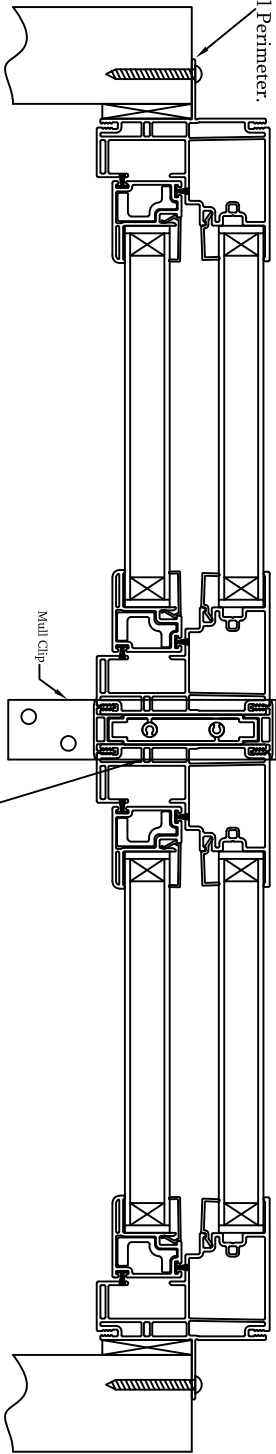

THIS DRAWING AND ITS CONTENTS ARE THE SOLE PROPERTY OF ELEVATE WINDOWS AND DOORS. ANY UNAUTHORIZED USE OR REPRODUCTION IS STRICTLY PROHIBITED.



INSPIRE S.H. TWIN
INSTALLATION

DRAWN BY:	DESIGNED BY:	DATE	SCALE
XXX		2/7/19	NTS
CHECKED BY:	APPROVED BY:	DRAWING No.	
		XXX	