




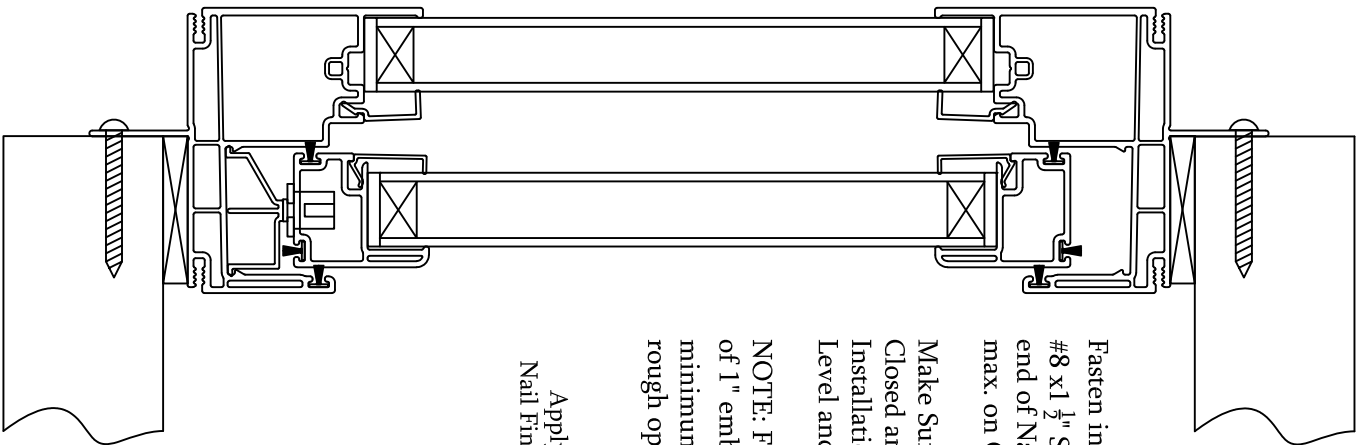


Fasten in 2 By Wood Frame with #8 x1 1/2" Screw or Larger, 2" from each end of Nail Fin and Spaced every 12" max. on Centers.

Make Sure that Window is in the Closed and Locked Position During Installation. Make Sure that the Sill is Level and the Jambs are Plumb.

NOTE: Fasteners must have a minimum of 1" embedment into framing and be a minimum of 1/2" from the edge of the rough opening.

Apply Silicone Between Frame Nail Fin and 2 BY Wood Around Full Perimeter.

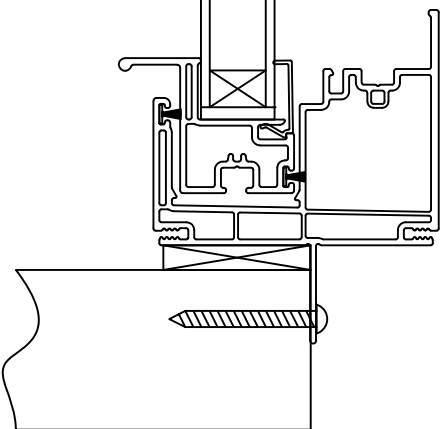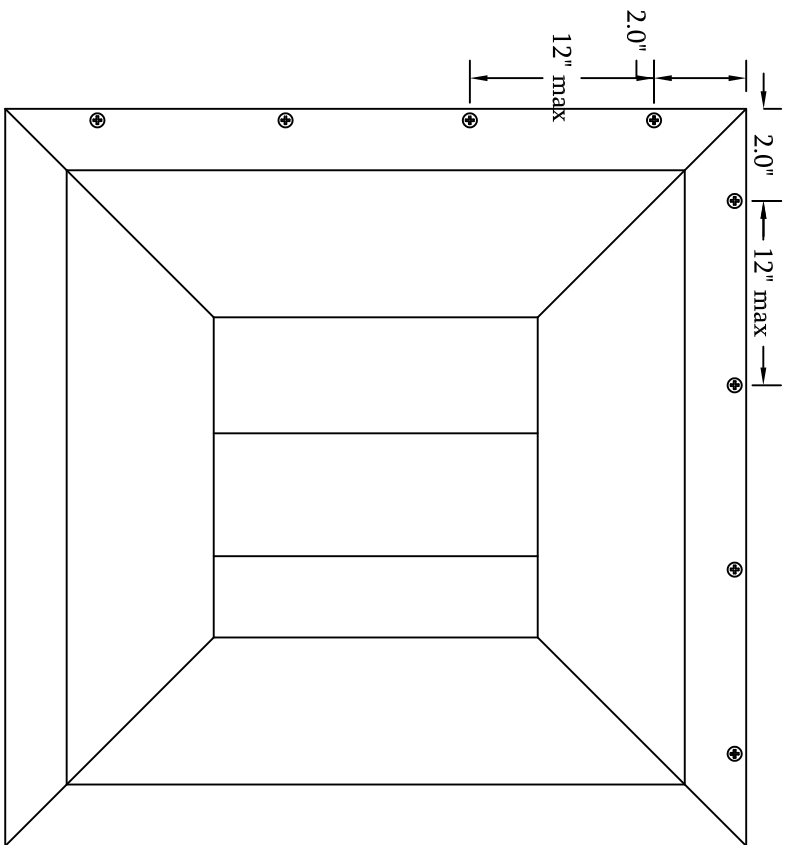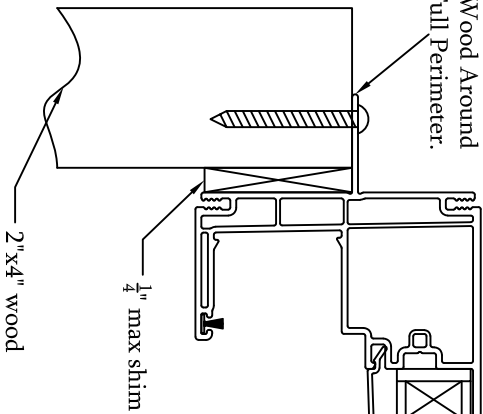



COPYRIGHT 2018
THIS DRAWING AND ITS CONTENTS ARE THE SOLE PROPERTY OF ELEVATE WINDOWS AND DOORS. ANY UNAUTHORIZED USE OR REPRODUCTION IS STRICTLY PROHIBITED.

INSPIRE H.S.
INSTALLATION

DRAWN BY:	DESIGNED BY:	DATE	SCALE
XXX		4/1/2019	NTS
CHECKED BY:	APPROVED BY:	DRAWING No.	
		XXX	