



Apply Silicone Between Frame
Nail Fin and 2 BY Wood Around
Full Perimeter.

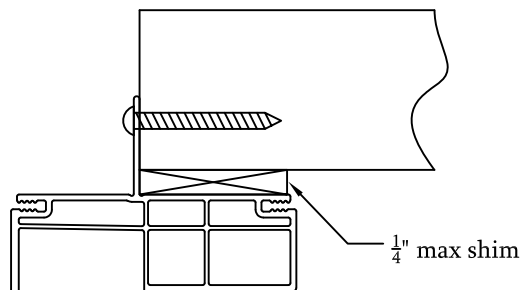

Fasten in 2 By Wood Frame with
#8 x 1 1/2" Screw or Larger, 2" from each
end of Nail Fin and Spaced every 12"
max. on Centers.

Make Sure that Window is in the
Closed and Locked Position During
Installation. Make Sure that the Sill is
Level and the Jambs are Plumb.

NOTE: Fasteners must have a minimum
of 1" embedment into framing and be a
minimum of 1/2" from the edge of the
rough opening.

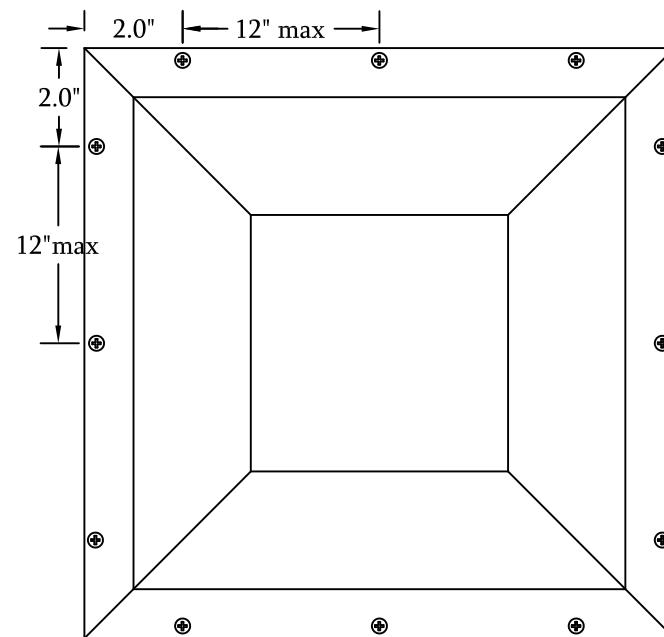

2"x4" wood



COPYRIGHT 2018
THIS DRAWING AND ITS CONTENTS ARE THE SOLE PROPERTY
OF ELEVATE WINDOWS AND DOORS. ANY UNAUTHORIZED
USE OR REPRODUCTION IS STRICTLY PROHIBITED.

Inspire Picture Window Installation

DRAWN BY: XXX	DESIGNED BY:	DATE 2/4/19	SCALE NTS
CHECKED BY:	APPROVED BY:	DRAWING No. XXX	