


Apply Silicone Between Frame Nail Fin and 2 By Wood Around Full Perimeter.


$\frac{1}{4}$ " max shim

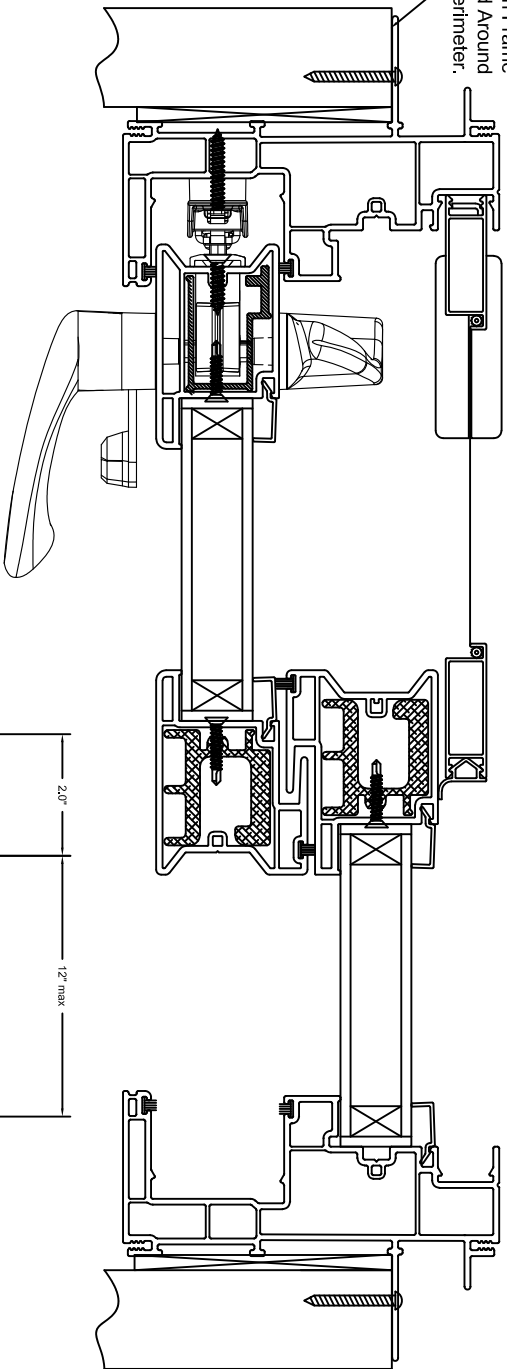


Fasten in 2 By Wood Frame with #8 x $1\frac{1}{2}$ " Screw or Larger, 2" from each end of Nail Fin and Spaced every 12" max. on Centers.

Make Sure that Door is in the Closed and Locked Position During Installation. Make Sure that the Sill is Level and the Jambs are Plumb.

NOTE: Fasteners must have a minimum of 1" embedment into framing and be a minimum of $\frac{1}{2}$ " from the edge of the rough opening.

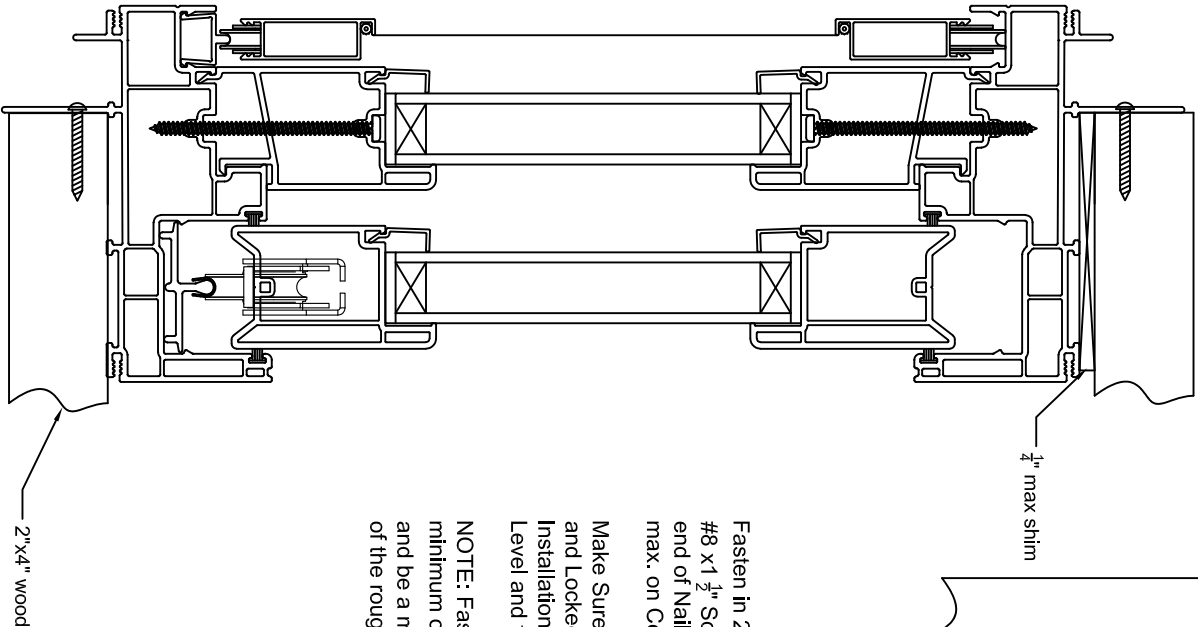

2"x4" wood

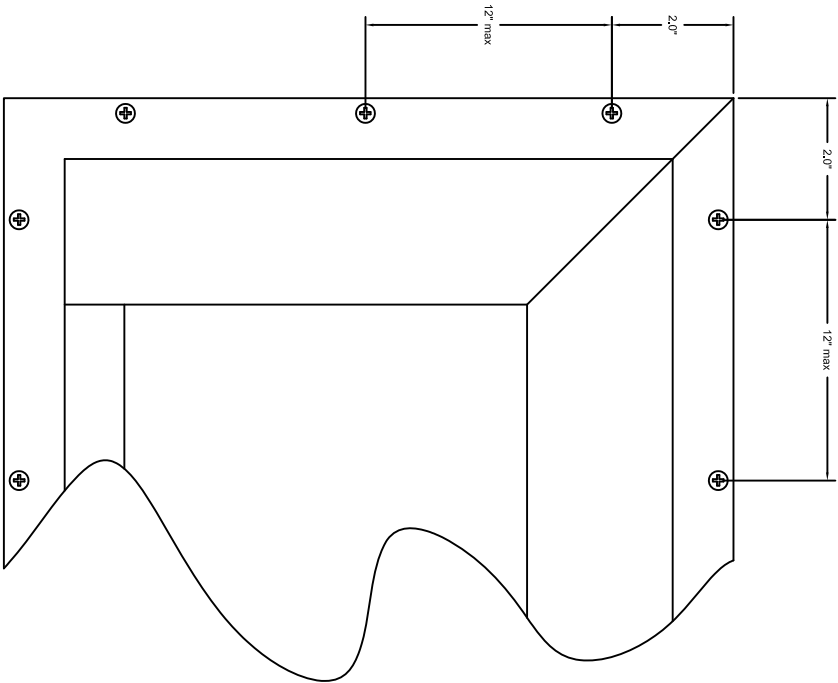

Inspire Sliding Glass Door Installation

DRAWN BY:	DESIGNED BY:	DATE	SCALE
XXX		XXX	XXX
CHECKED BY:	APPROVED BY:	DRAWING No.	
		XXX	

THIS DRAWING AND ITS CONTENTS ARE THE SOLE PROPERTY OF ELEVATE. NO PARTS OF THIS DRAWING MAY BE REPRODUCED OR REPRODUCED IN ANY MANNER WITHOUT THE WRITTEN PERMISSION OF ELEVATE. USE OR REPRODUCTION IS STRICTLY PROHIBITED.