




SHINGLE

DRYER VENT

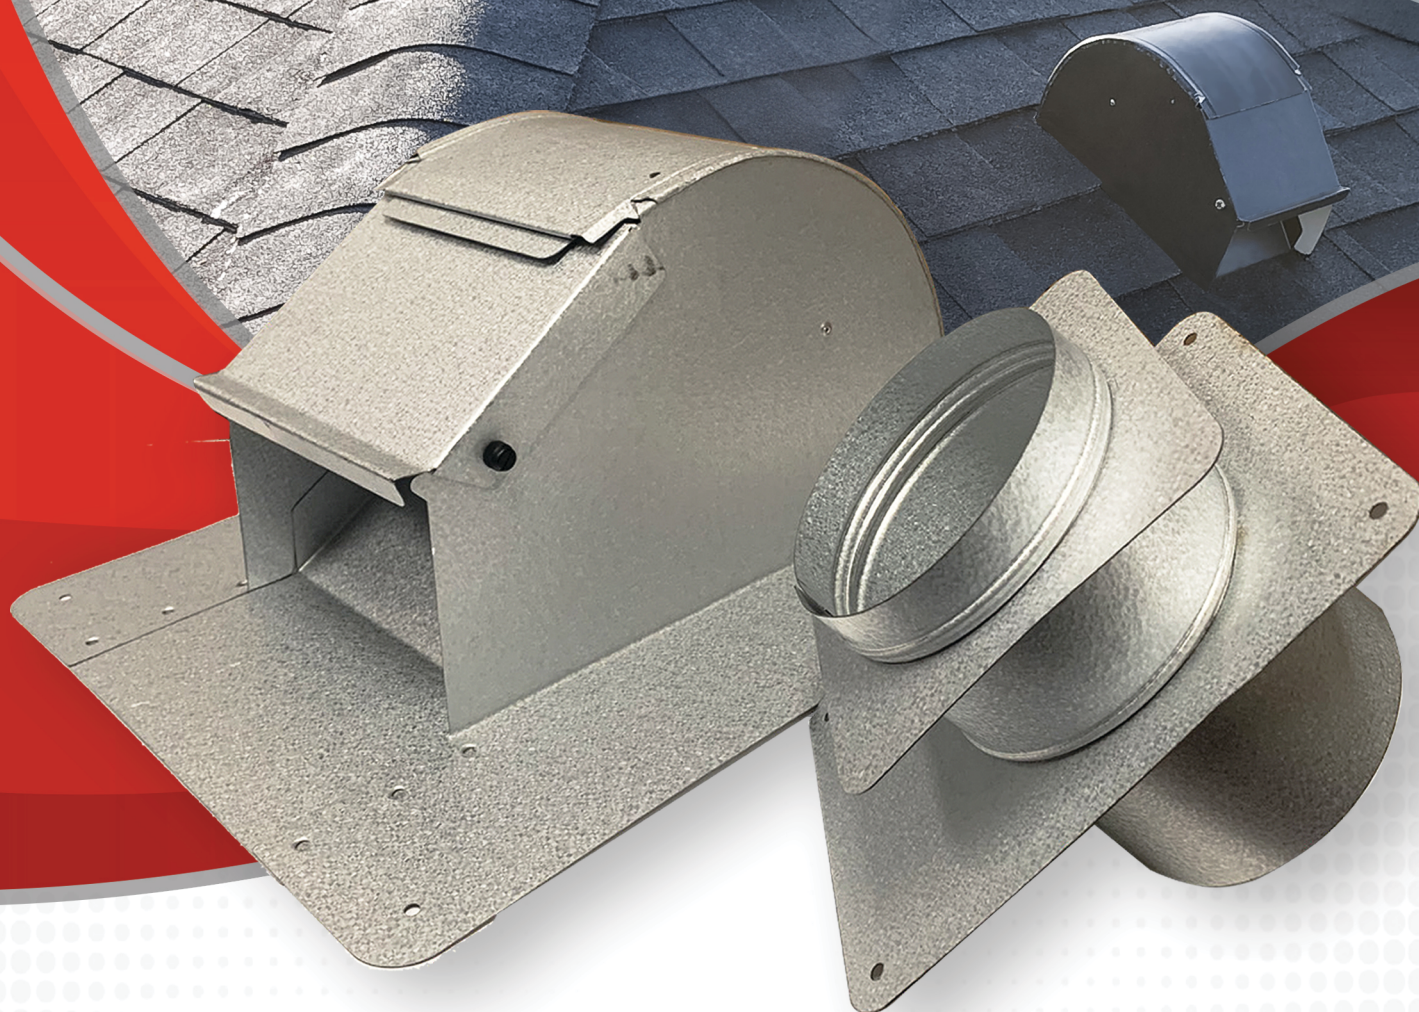

PROTECT YOUR ROOF AND EVERYTHING UNDERNEATH

*By removing hot, moist air and lint buildup
from your dryer to the outdoors.*

*Removeable Cap for
Easy Cleaning*

*Dryer Vent Collar
Included*

*110 MPH Wind
Driven Rain Tested*

Easy to Install

*Eliminate Call Backs
From Leaks*

INSTALLATION INSTRUCTIONS

LOCATION OF DRYER VENT


1. It is recommended to position dryer vent on roof deck directly above location of the dryer or as close as possible for most efficient exhaust of lint.
2. Once location is determined cut hole in roof deck (5"x5" hole or 5" round).
3. Insert the collar into hole and fasten to roof deck with at least 4 nails.
4. Apply roof cement on the side and top flanges of the collar. Completely cover flanges and approximately 2" beyond flanges onto underlayment with 1/4" thick bed of plastic roof cement.
5. Attach dryer duct to collar on attic side of roof deck.

POSITION AND SECURE

1. Place vent so that inner tube attaches to attic tube.
2. Install shingles so that the bottom flange on vent covers over the unexposed portion of the shingle.
3. Apply an industry approved sealant under the front flange of the vent.
4. Using the holes provided on the flanges, fasten side and top flanges securely with minimum 1.25" standard roofing nails.

SHINGLE INSTALLATION

1. Apply roof cement on the side and top flanges. Completely cover flanges and approximately 2" beyond flanges onto the underlayment with 1/4" thick bed of plastic roof cement.
2. Install shingles, cut to fit so flanges are completely covered. Press into place to ensure a complete bond of cement to shingles. Fasten shingles with nails as per shingle manufacturer's instructions. However, do not place any nails within 3" of the body of the vent.

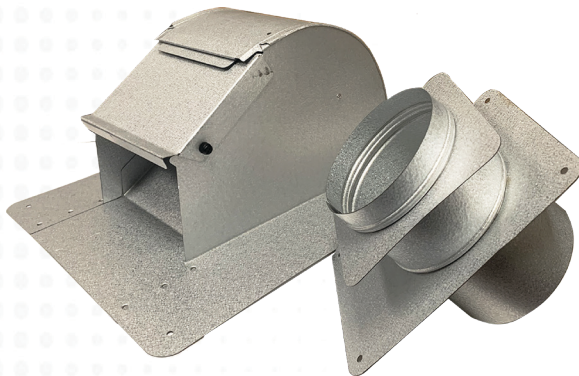

INCLUDED IN BOX

- One Dryer Vent and Collar per box.

AVAILABLE COLORS

- Black • Galvalume • Weatherwood • Other



PATENT
PENDING



NOTES

- Installers may want to pre-cut shingles to fit prior to applying roof cement. Once the shingles have been pre-cut, remove the cut pieces, apply roof cement, and install shingles as described above.
- It is highly recommended that the dryer duct be attached to the collar and the vent attached to the cover for the most efficient exhaust of lint. However, some re-roof situations may not accommodate the use of the collar; using the collar is optional where duct is exiting through the roof deck.

PROUDLY MADE IN NORTH AMERICA



1-800-800-8590 / Marcoindustries.com



Roofing Ventilation & Accessories