

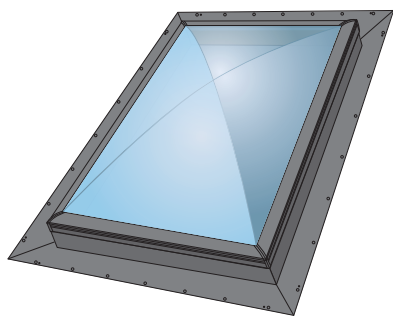
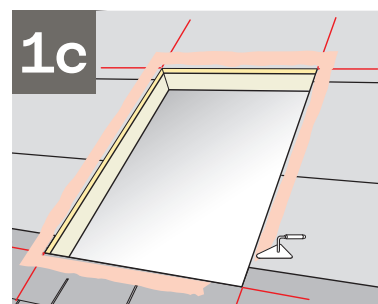


SFHD/SFHG Installer Guide



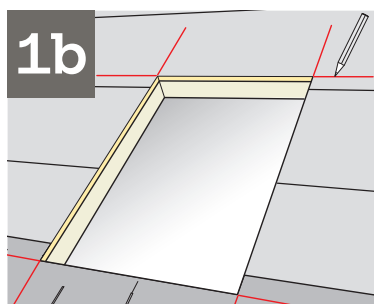


Standard sizes	2222	2246	2270	3434	4646
(W-in. x H-in.)					
Rough opening/ finished frame	22½ x 22½	22½ x 46½	22½ x 70½	34½ x 34½	46½ x 46½




EN: For shingles
ES: Para tejas no perfiladas

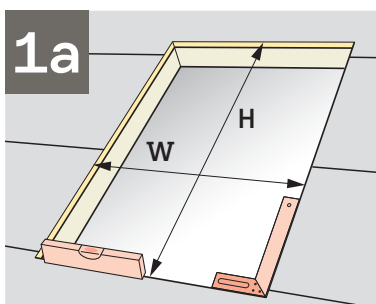

EN: For tiles
ES: Para tejas perfiladas

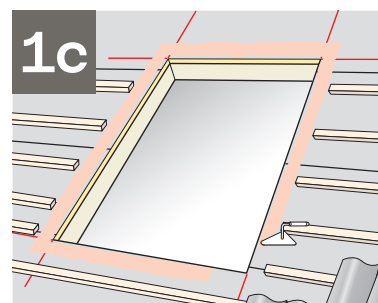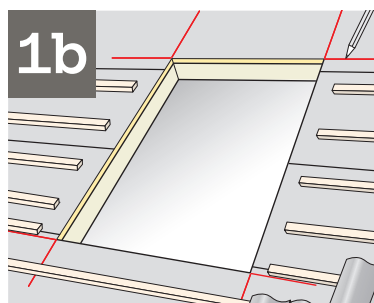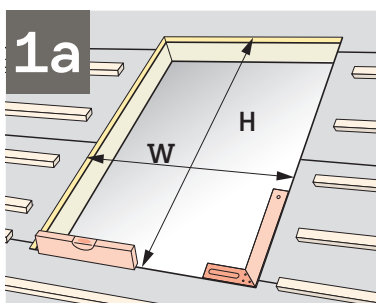

EN: For membrane
ES: Para membrana

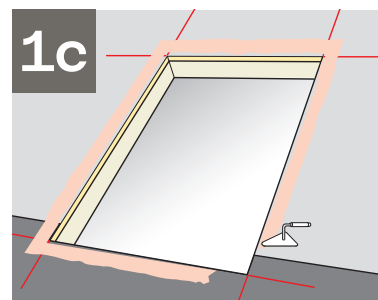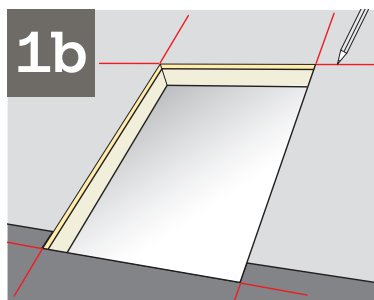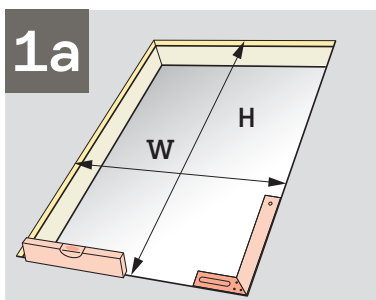

EN: Cut and frame the rough opening according to the measurements in the chart (a). Mark the corners of the rough opening (b). Apply roof cement around the rough opening (c).

ES: Corte y enmarque la abertura de acuerdo con las medidas de la tabla (a). Marque las esquinas de la abertura (b). Aplique cemento para techos alrededor de la abertura (c).





EN: For shingles
ES: Para tejas no perfiladas



EN: For tiles
ES: Para tejas perfiladas



EN: For membrane
ES: Para membrana

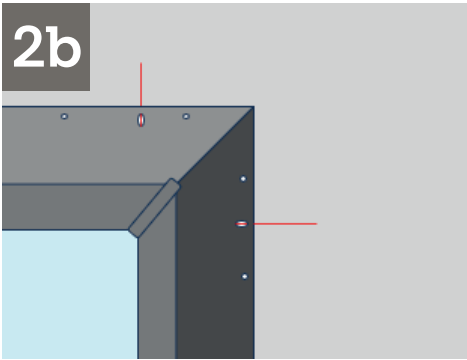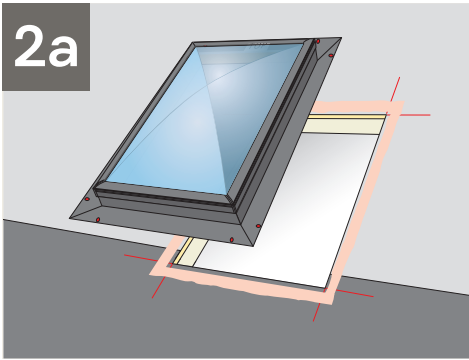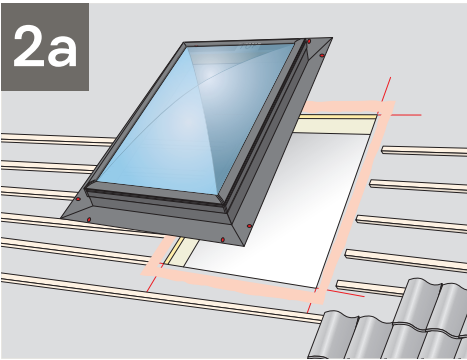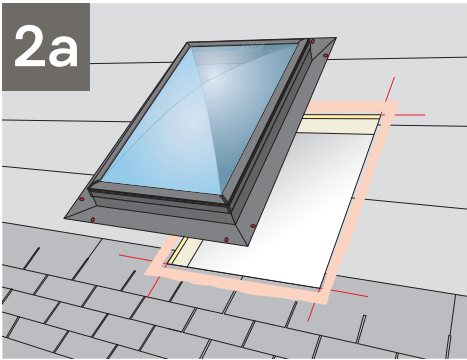


EN: Center the skylight over the rough opening **(a)** by aligning the alignment marks made in step 1 with the alignment notches in the flashing flange **(b)**.
Note: For shingles application, ensure that the bottom flashing flange rests on top of the last shingle course.







ES: Centre el tragaluz sobre la abertura **(a)** alineando las marcas de alineación realizadas en el paso 1 con las muescas de alineación en el reborde del tapajuntas **(b)**.
Nota: Para la aplicación de tejas no perfiladas, asegúrese de reborde del tapajuntas inferior descansa sobre la parte superior de la última hilera de tejas.

3		
	Nails	Nails
2222	4	20
2246	4	26
2270	4	32
3434	4	24
4646	4	32

EN: Anchor the skylight with the 2" nails to the rafters at each top and bottom corners and with the 1-1/4" nails in all pre-punched holes along the flashing flange.

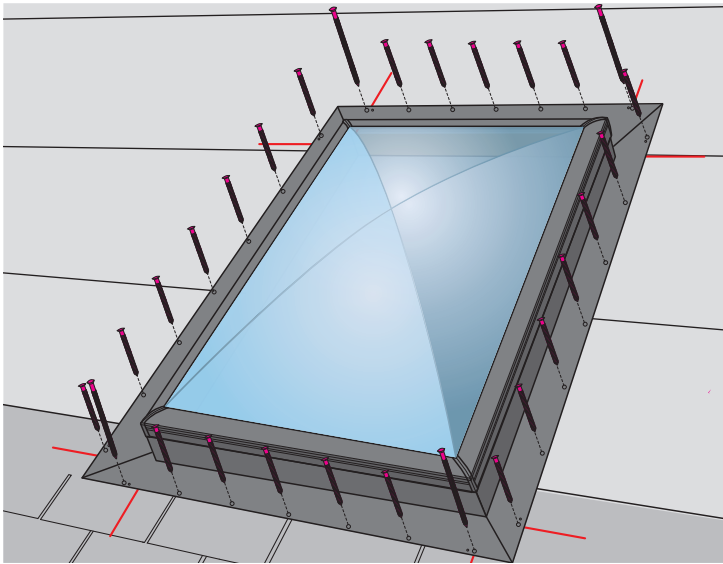

ES: Sujete el tragaluz con los clavos de 50 mm (2") a las vigas en las esquinas superiores e inferiores, y con los clavos de 30 mm (1-1/4") en todos los orificios previamente perforados a lo largo del tapajuntas.

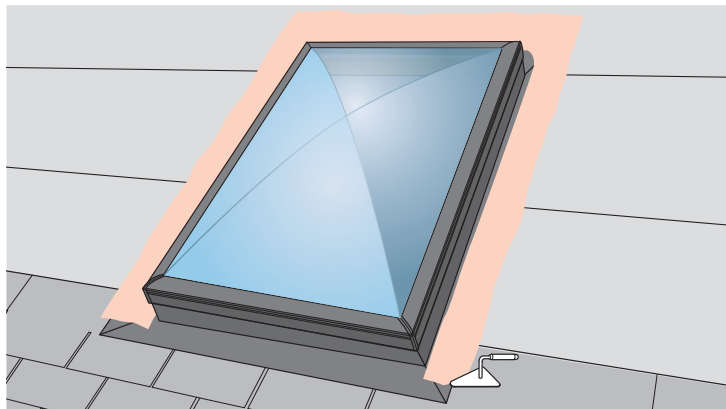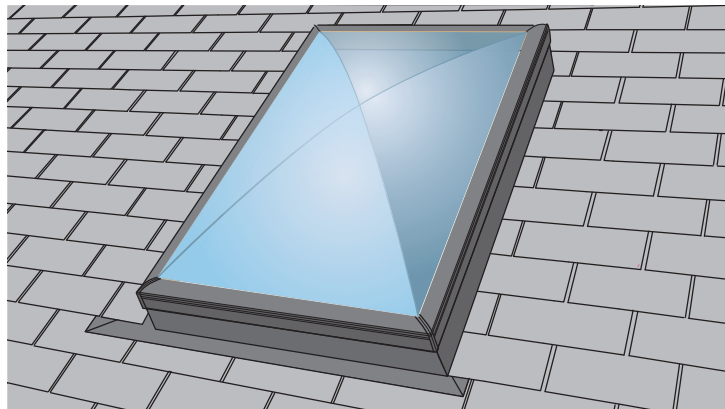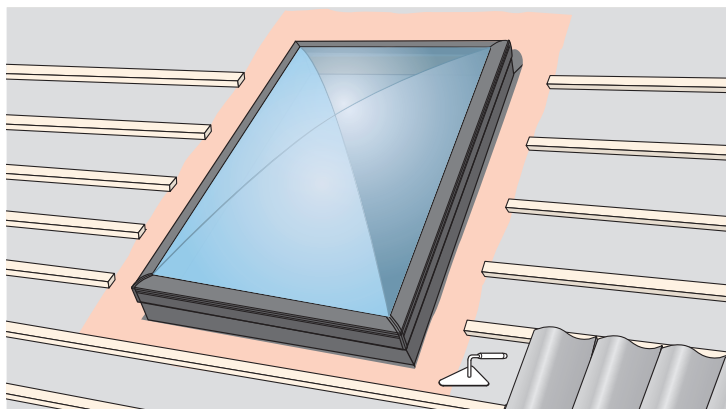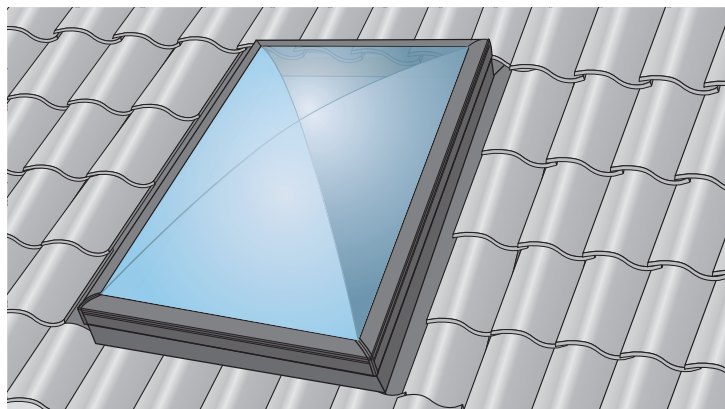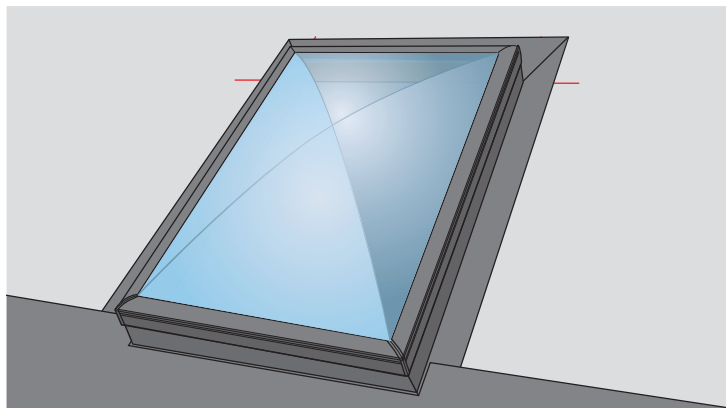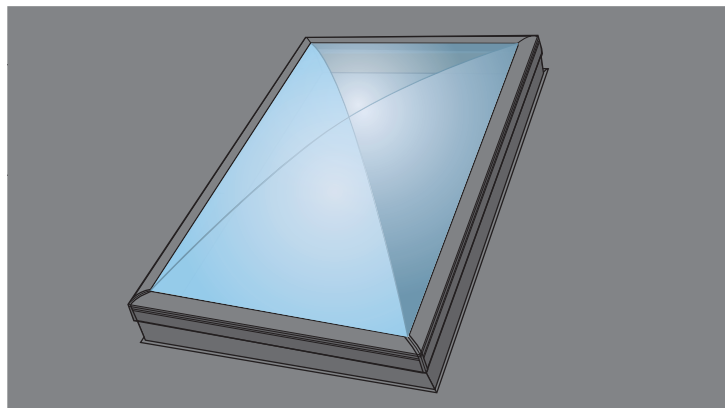4a**EN:** For shingles**ES:** Para tejas no perfiladas**4b****4a****EN:** For tiles**ES:** Para tejas perfiladas**4b****4a****EN:** For membrane**ES:** Para membrana**4b**

EN: for shingles - Apply roof cement on the flashing flange at the sides and top **(a)**. Install shingles tight to the sides and top of the skylight. Complete with shingles using standard roofing practices **(b)**.

For tiles - Apply roof cement on all sides **(a)**. Complete with tiles using standard roofing practices **(b)**.

For membrane - Do not apply roof cement **(a)**. Complete with membrane using standard roofing practices **(b)**.

ES: para tejas no perfiladas - Aplique cemento para techos sobre el reborde del tapajuntas por los lados y la parte superior **(a)**. Instale las tejas ajustadas a los lados y la parte superior del tragaluz. Complete con tejas utilizando prácticas estándar de techado **(b)**.

Para tejas perfiladas - Aplique cemento para techos en todos los lados **(a)**. Complete con tejas utilizando prácticas estándar de techado **(b)**.

Para membrana - No aplique cemento para techos **(a)**. Complete con membrana utilizando prácticas estándar de techado **(b)**.

www.veluxusa.com



VAS 455367-2024-12
PART NUMBER 320652

