

Millboard Composite Siding General Installation Instructions

1 Installation

- 1.1 Millboard Composite Siding products can be installed horizontally or vertically, for additional details on installation follow the corresponding manufacturer's installation instructions. If Millboard Composite Siding products are being installed in an HVHZ area installation shall follow the HVHZ specific installation instructions as well.
 - 1.1.1 **Table 2** through **Table 6** of TER 2304-117 are applicable to either orientation.
 - 1.1.2 For furred connections, all ends of Millboard Composite Siding shall be supported.
- 1.2 Fasteners shall be installed along the tongue of Millboard Composite Siding products. See **Figure 1** for an example.
 - 1.2.1 Fasteners used to install Millboard Composite Siding products are listed in **Table 1**.

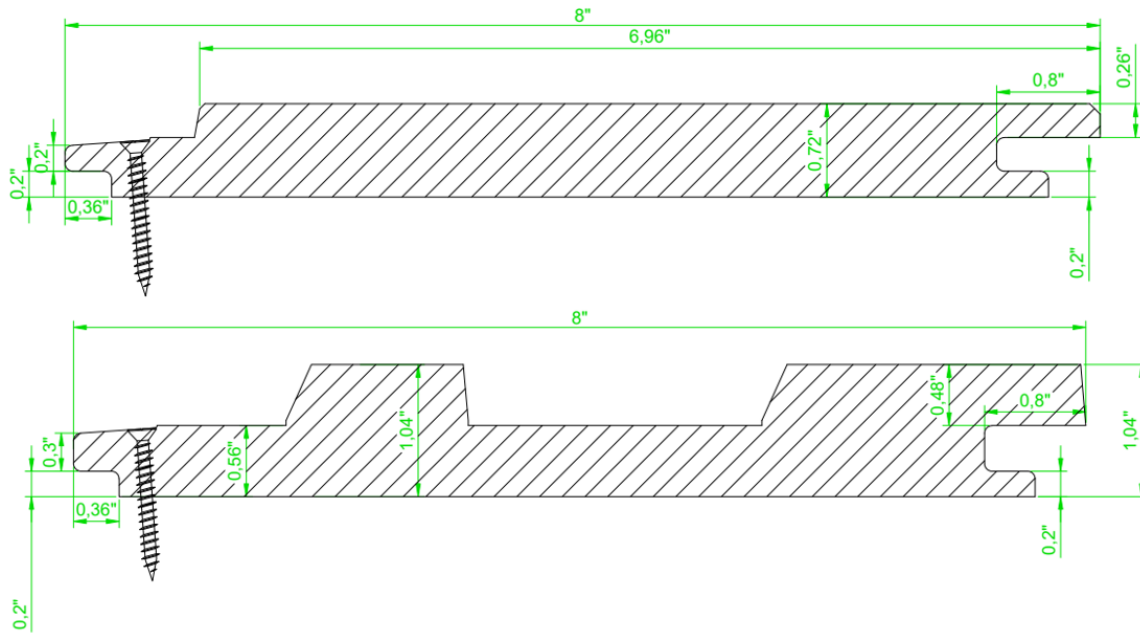


Figure 1. Millboard Composite Siding – Fastening Location (Screw Shown)

Table 1. Permitted Fasteners for Installation of Millboard Composite Siding

Fastener Type	Major Diameter (in)	Minor Diameter (in)	Head Diameter (in)
#8 x 2" Flat Head Wood Screw	0.164	0.113	0.299
#8 x 1 ⁵ / ₈ " Flat Head Wood Screw	0.164	0.131	0.312
#8 x 1 ¹ / ₂ " Flat Head Sheet Metal Screw	0.164	0.113	0.296
0.120" x 1 ¹ / ₂ " Galvanized Ring Shank Nail	0.120	-	0.438
0.092" x 2" Galvanized Ring Shank Nail	0.092	-	0.227

SI: 1 in = 25.4 mm

- 1.3 Installation shall comply with the approved construction documents, the manufacturer installation instructions, this report, and the applicable building code.
- 1.4 The Millboard Composite Siding shall be installed in accordance with the manufacturer published installation instructions and this report.

- 1.5 A copy of the manufacturer published installation instructions shall be available at all times on the jobsite during installation.