




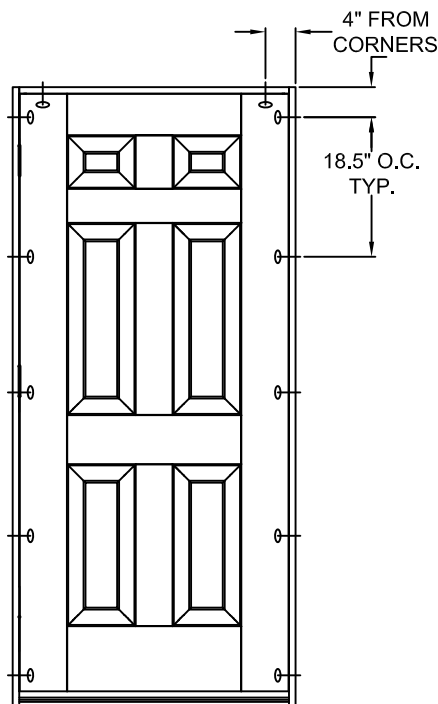

TYPICAL ELEVATION WITH FASTENER SPACING

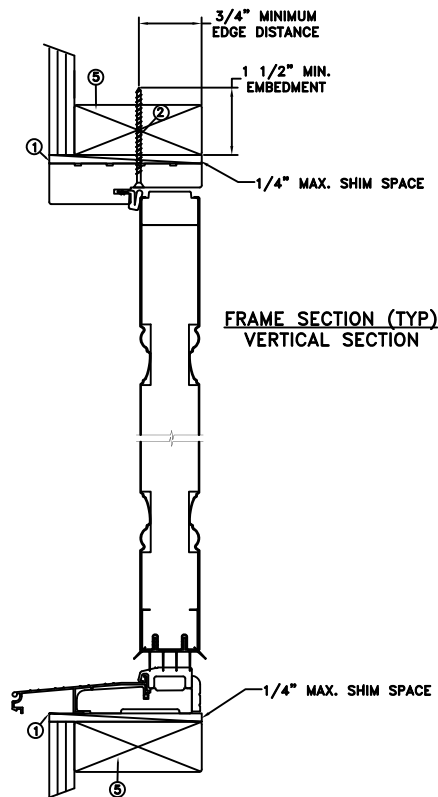

**FRAME SECTION (TYP)
VERTICAL SECTION**

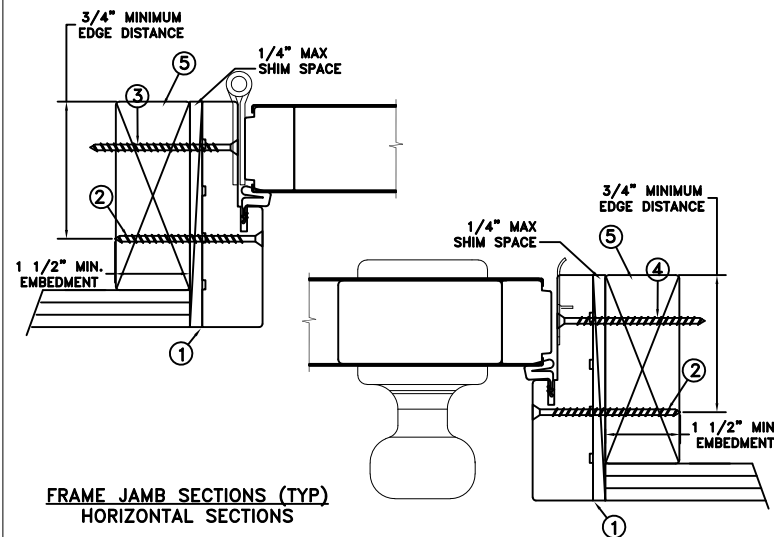

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

THROUGH FRAME INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025		3737 LAKEPORT BLVD.	
SCALE: NTS		KLAMATH FALLS OR, 97601	
DRAWN BY: M.HAM		PHONE: (800) 535-3936	
CHECKED BY: M.HAM		JELD-WEN Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel	
APPROVED BY: D.Vezo			
RECORD No.: D1000226			
REPORT No.: 30683.01-201-12		CAD DWG. No.: —	REV: B

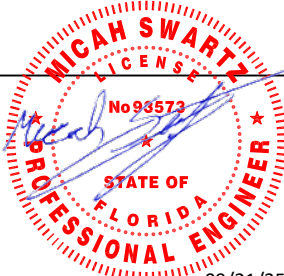

MICAH SWARTZ, P.E.
 PE No. 93573
 5134 Cambridge Ct.
 Klamath Falls, OR. 97603
 (541) 363-8075


09/21/25

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

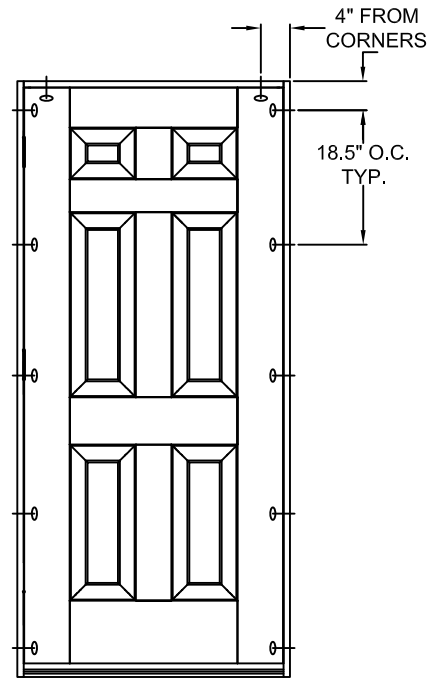

TYPICAL ELEVATION WITH FASTENER SPACING

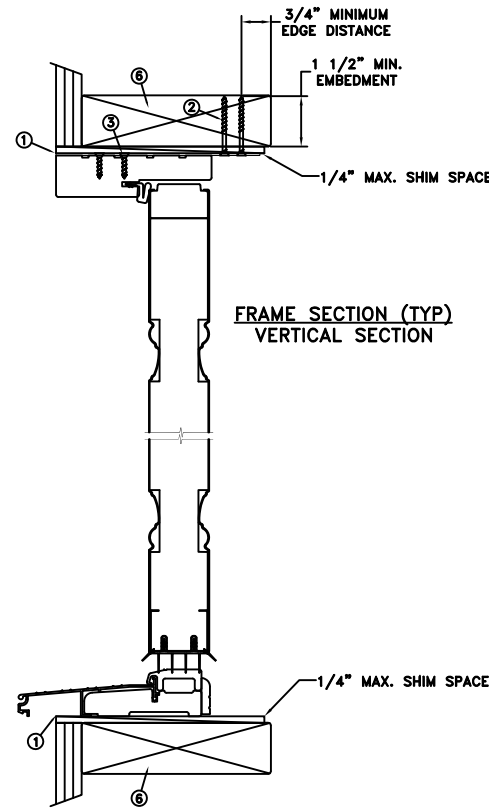

FRAME SECTION (TYP)
VERTICAL SECTION

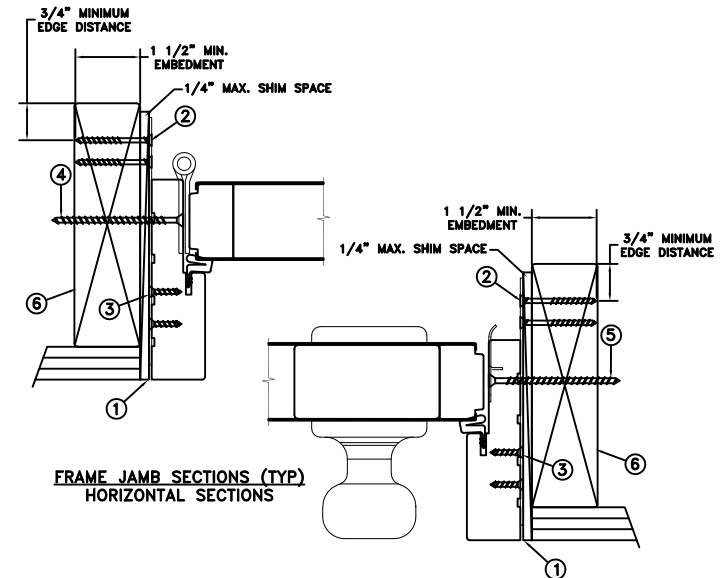

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

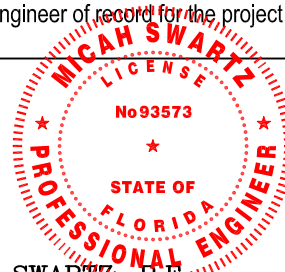

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	TITLE:		
APPROVED BY: D.Vezo			
RECORD No.: D1000226			
REPORT No.: 30683.01-201-12		CAD DWG. No.: —	REV: B SHEET 2 of 20


Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


CONCRETE/MASONRY INSTALLATION

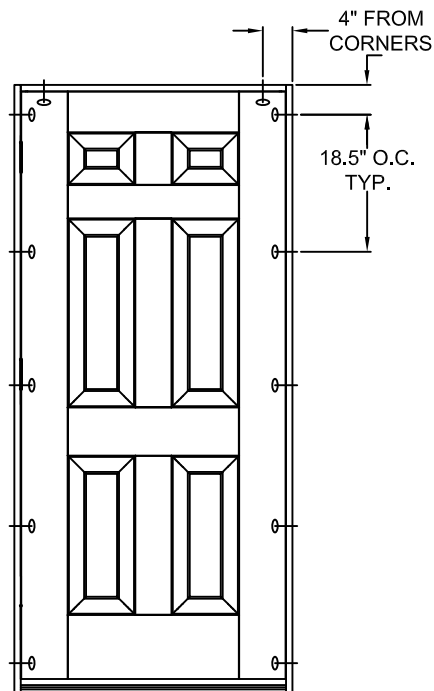

TYPICAL ELEVATION WITH FASTENER SPACING

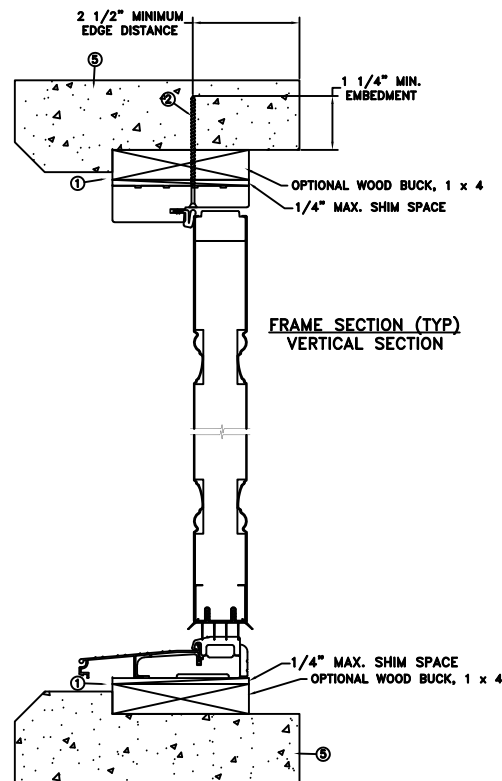

FRAME SECTION (TYP)
VERTICAL SECTION

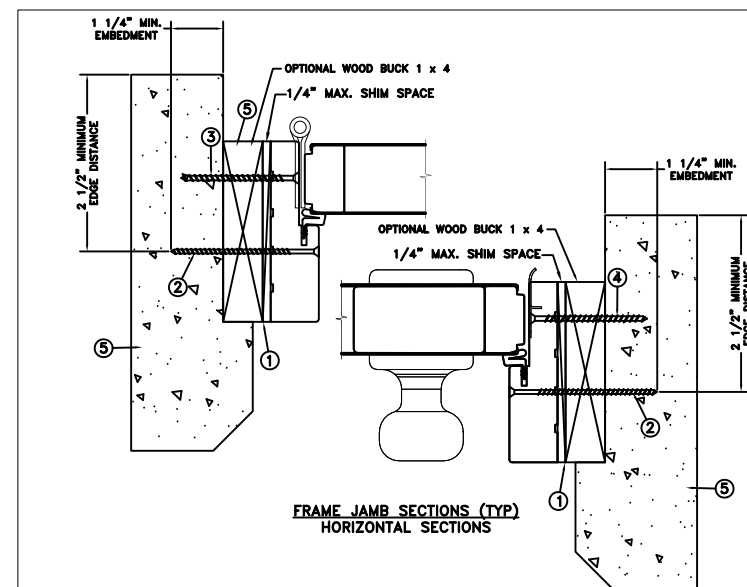

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025


DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: M.HAM	TITLE:
APPROVED BY: D.Vezo	
RECORD No.: D1000226	

Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

REPORT No.:
30683.01-201-12

CAD DWG. No.:
—

REV: B SHEET 3 of 20

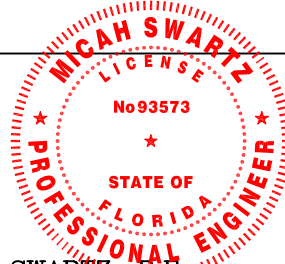


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

JELD-WEN
3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

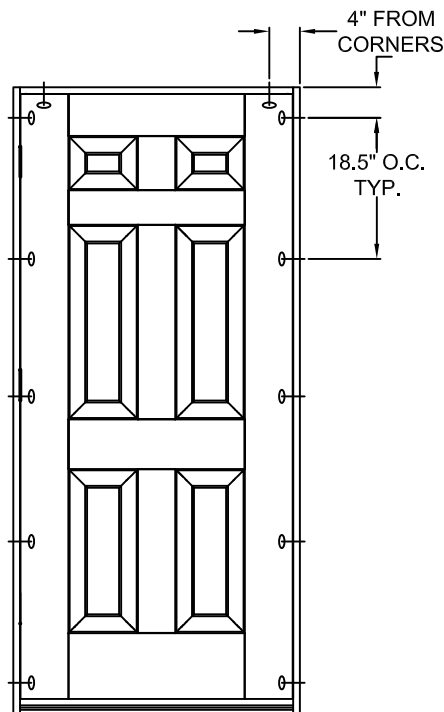

TYPICAL ELEVATION WITH FASTENER SPACING

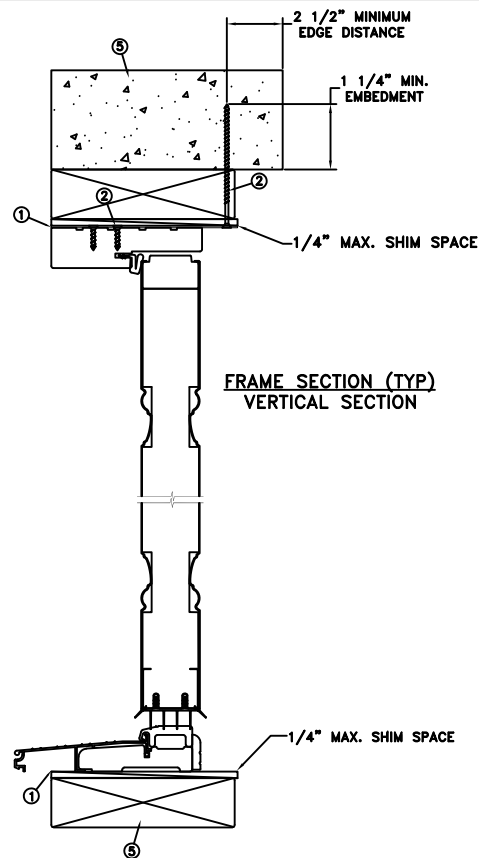

FRAME SECTION (TYP)
VERTICAL SECTION

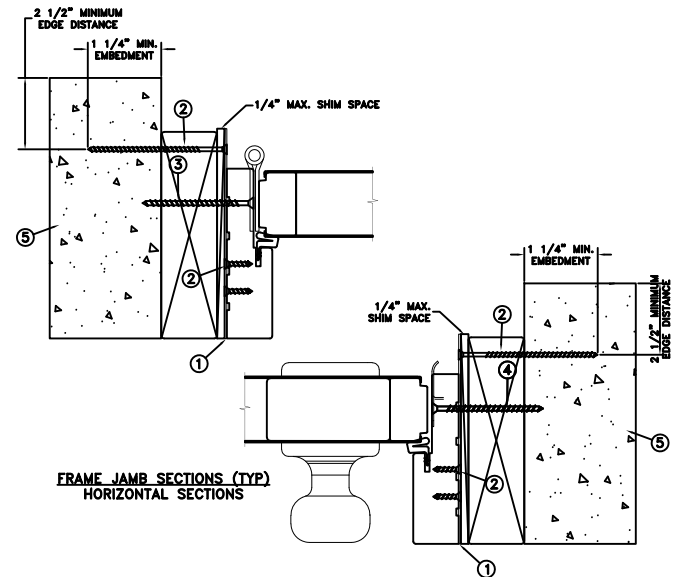

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

CONCRETE/MASONRY INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

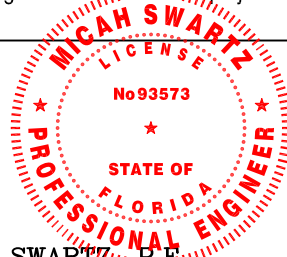

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
09/21/25

DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: M.HAM	TITLE:			
APPROVED BY: D.Vezo				
RECORD No.: D1000226				
REPORT No.: 30683.01-201-12		CAD DWG. No.: —	REV: B	SHEET 4 of 20


Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

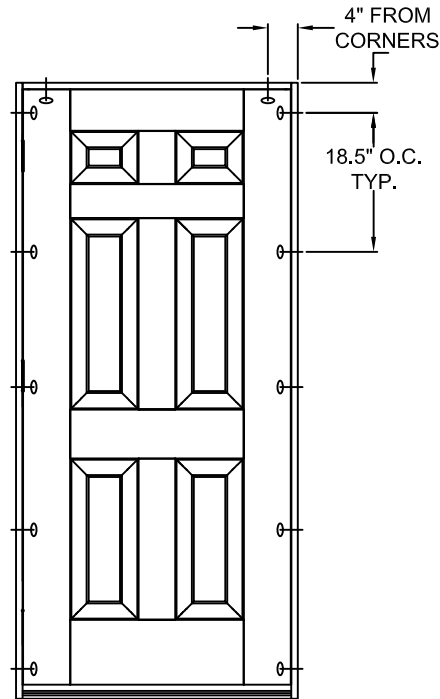

TYPICAL ELEVATION WITH FASTENER SPACING

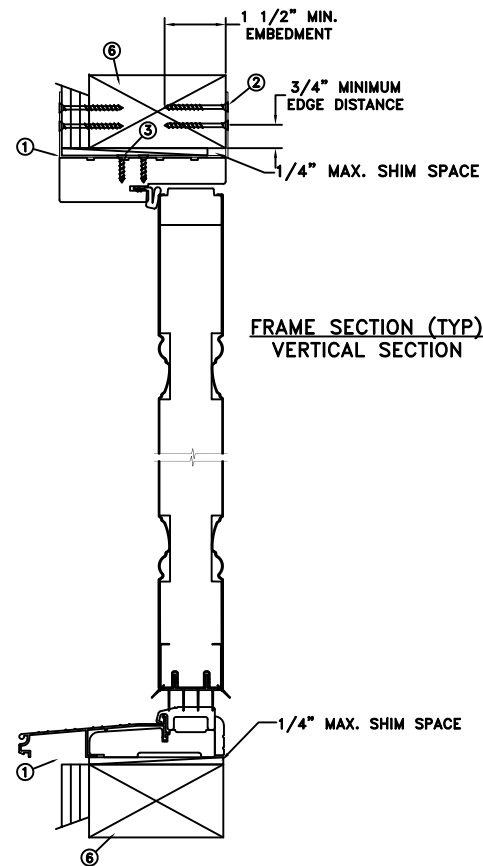

FRAME SECTION (TYP)
VERTICAL SECTION

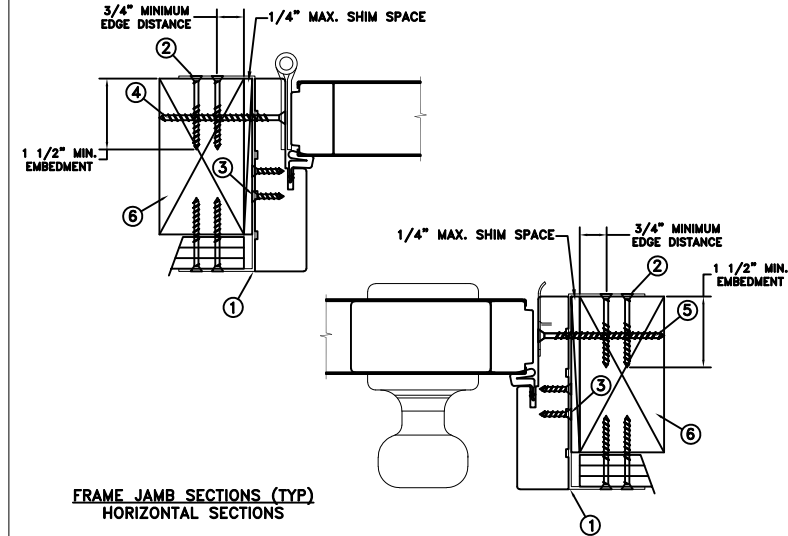

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

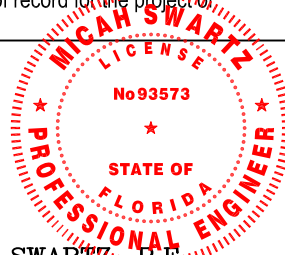

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
09/21/25


DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: M.HAM	TITLE:			
APPROVED BY: D.Vezo				
RECORD No.: D1000226				
REPORT No.: 30683.01-201-12		CAD DWG. No.: —	REV: B	SHEET 5 of 20

Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

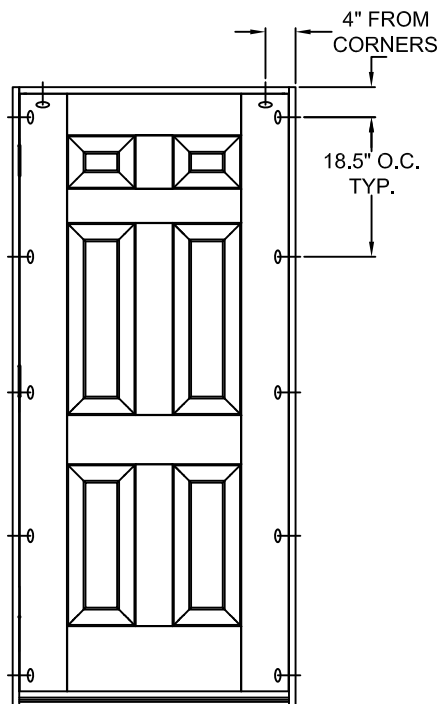

TYPICAL ELEVATION WITH FASTENER SPACING

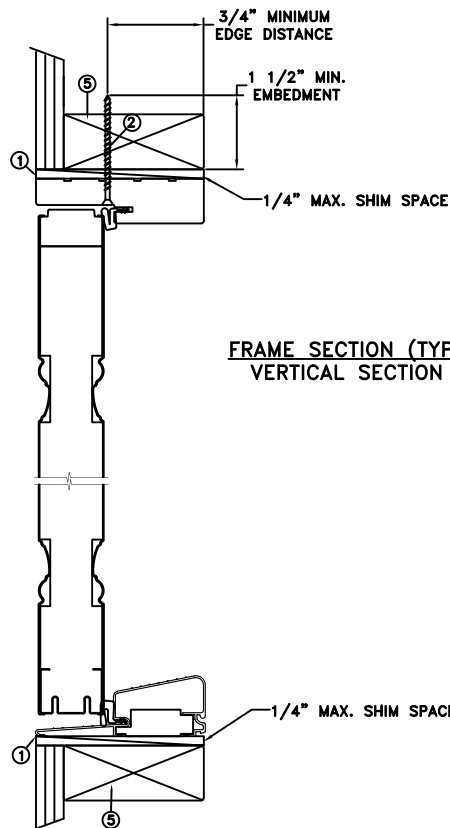

**FRAME SECTION (TYP)
VERTICAL SECTION**

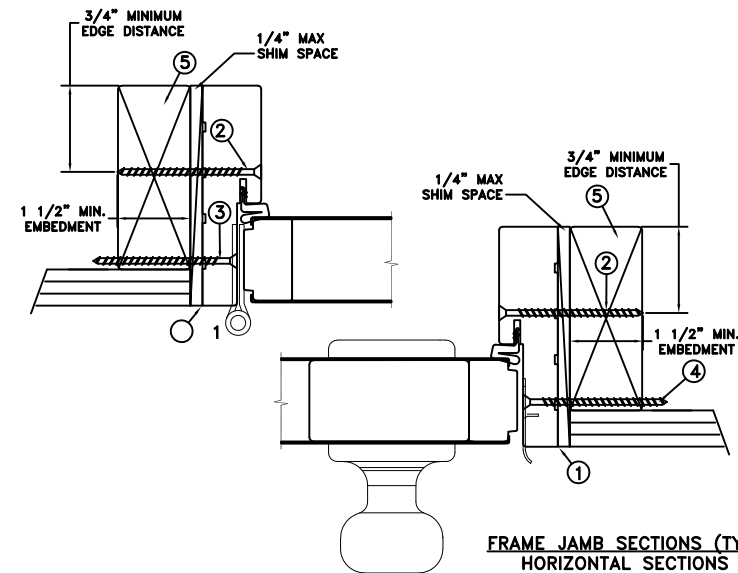

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

THROUGH FRAME INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025

DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: M.HAM	TITLE:
APPROVED BY: D.Vezo	
RECORD No.: D1000226	
REPORT No.: 30683.01-201-12	

JELD-WEN


3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

CAD DWG. No.:
—

REV: B

SHEET 6 of 20

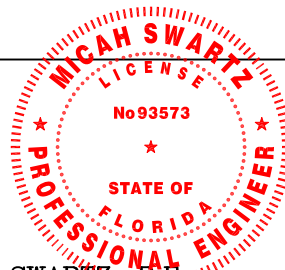


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

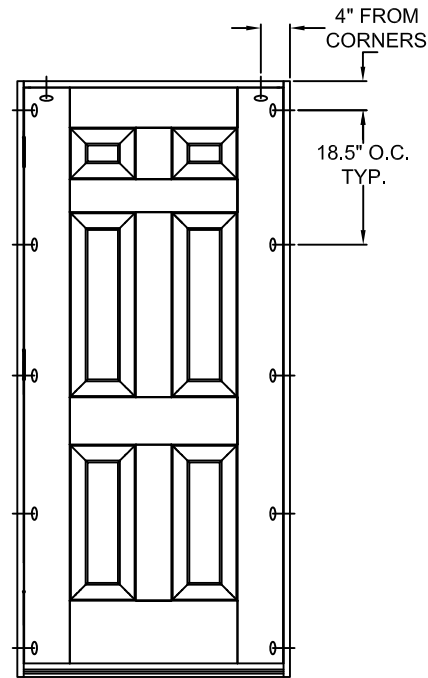

TYPICAL ELEVATION WITH FASTENER SPACING

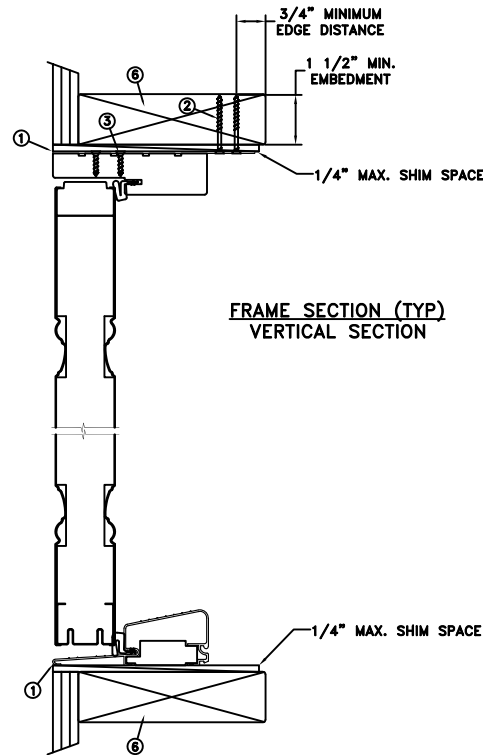

FRAME SECTION (TYP)
VERTICAL SECTION

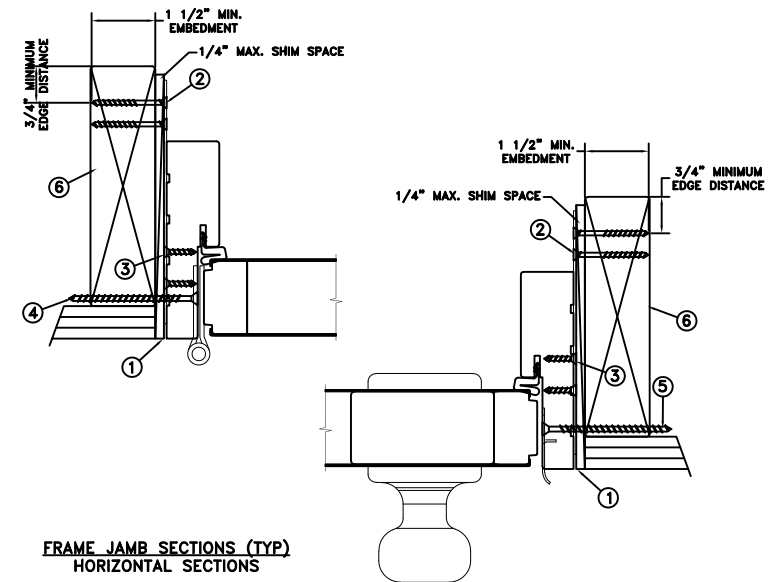

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

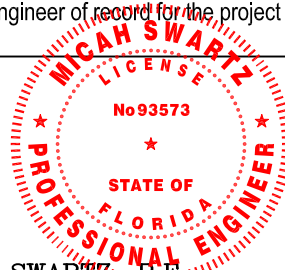


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS	JELD-WEN Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel	
CHECKED BY: M.HAM	TITLE:		
APPROVED BY: D.VEZO			
RECORD No.: D1000226			
REPORT No.: 30683.01-201-12	CAD DWG. No.: —	REV: B	SHEET 7 of 20


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

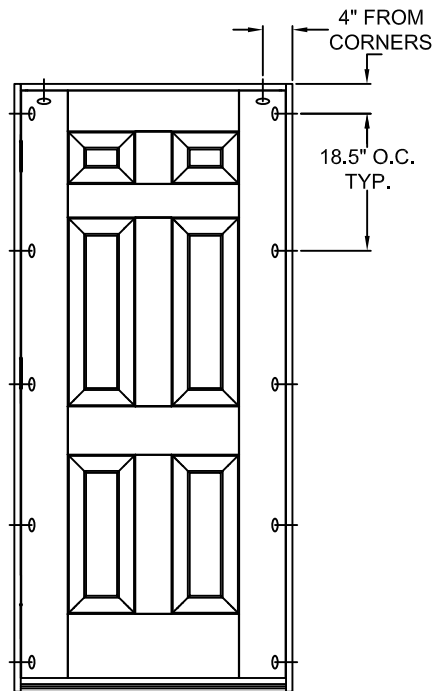

TYPICAL ELEVATION WITH FASTENER SPACING

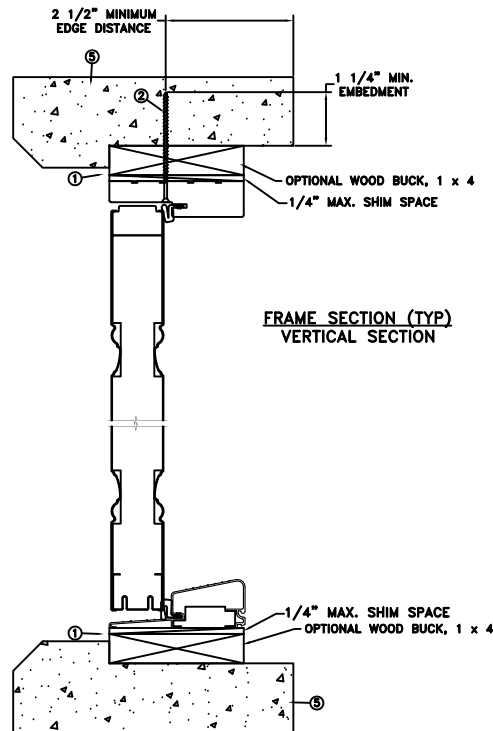

**FRAME SECTION (TYP)
VERTICAL SECTION**

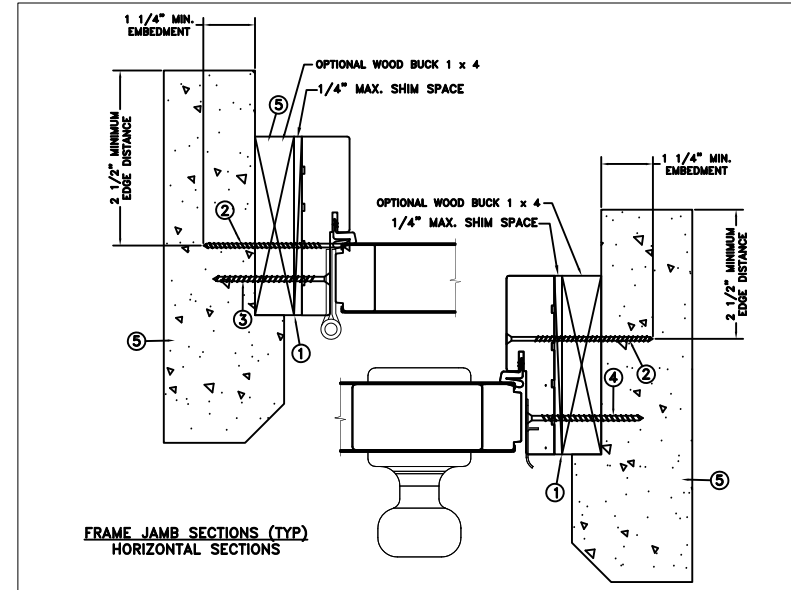

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

CONCRETE/MASONRY INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025


DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: M.HAM	TITLE:
APPROVED BY: D.Vezo	
RECORD No.: D1000226	
REPORT No.: 30683.01-201-12	

JELD-WEN

3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

CAD DWG. No.: —	REV: B	SHEET 8 of 20
--------------------	-----------	------------------

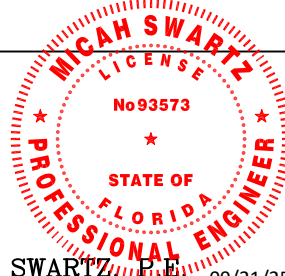


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


CONCRETE/MASONRY INSTALLATION

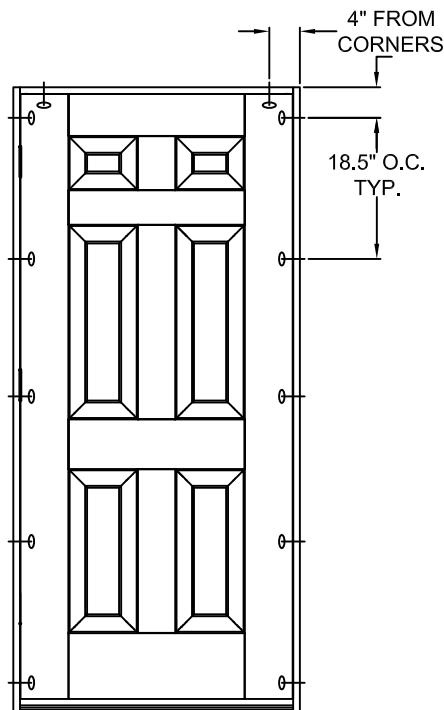

TYPICAL ELEVATION WITH FASTENER SPACING

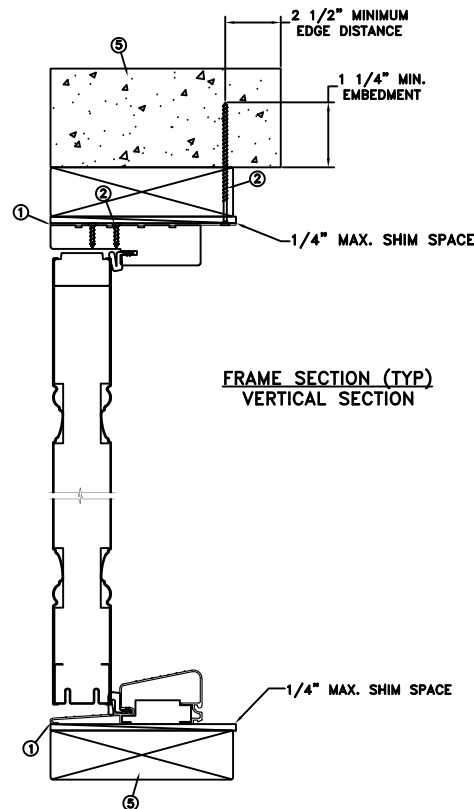

**FRAME SECTION (TYP)
VERTICAL SECTION**

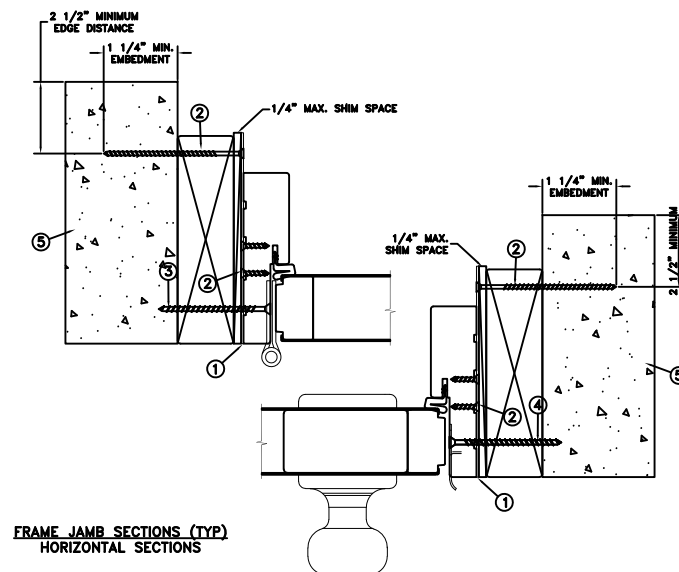

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025

DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: M.HAM	TITLE:
APPROVED BY: D.Vezo	
RECORD No.: D1000226	

Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

REPORT No.:
30683.01-201-12


JELD-WEN

3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

CAD DWG. No.:

REV:

SHEET
B 9 of 20

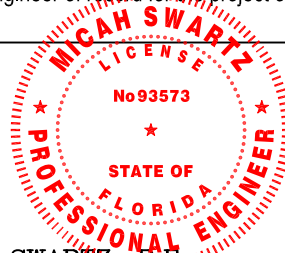


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

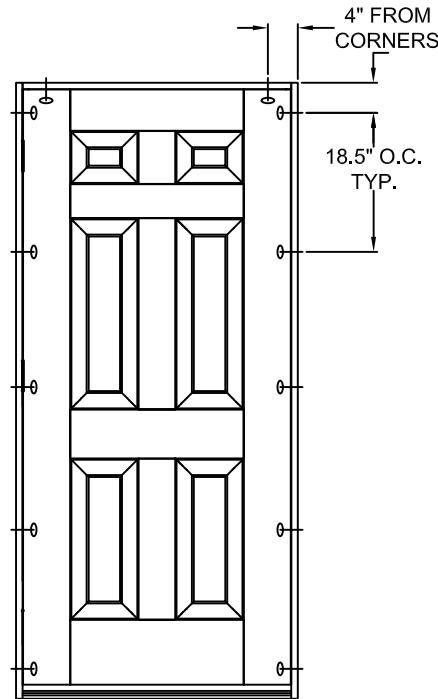

TYPICAL ELEVATION WITH FASTENER SPACING

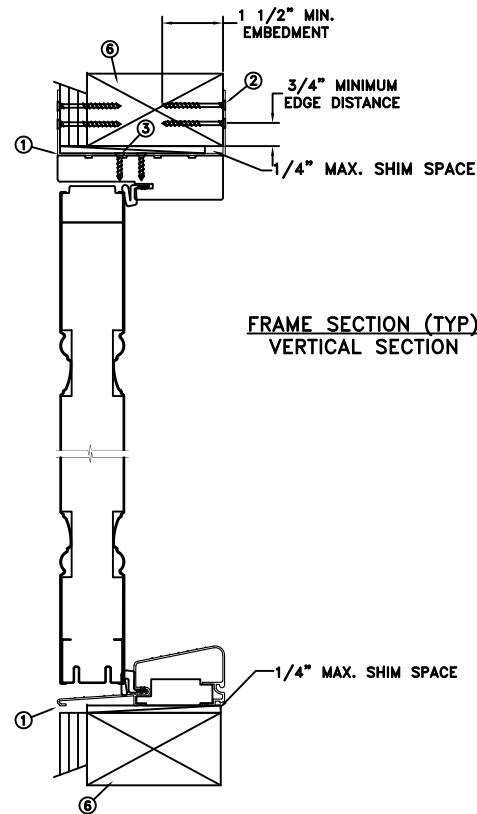

FRAME SECTION (TYP)
VERTICAL SECTION

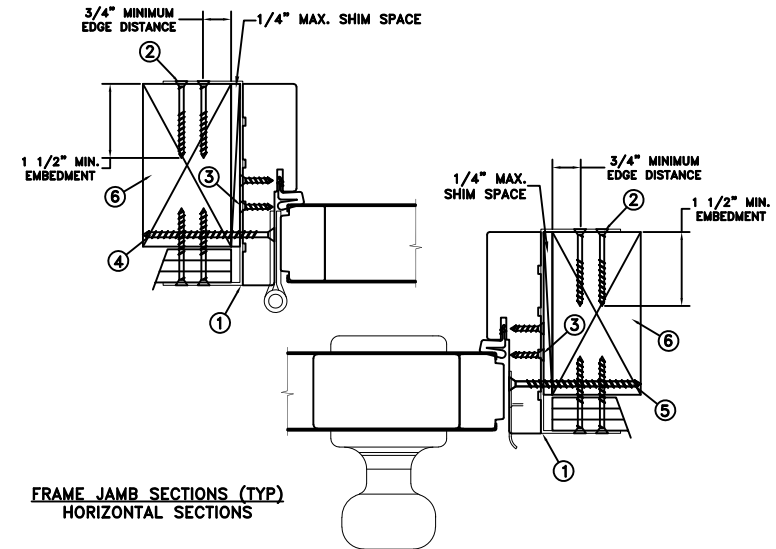

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

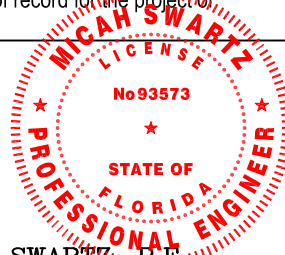


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DRAWN BY: M.HAM		DATE: 09/16/2025	3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
CHECKED BY: M.HAM		SCALE: NTS	JELD-WEN Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel	
APPROVED BY: D.VEZO		TITLE:		
RECORD No.: D1000226				
REPORT No.: 30683.01-201-12		CAD DWG. No.: —	REV: B	SHEET 10 of 20


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

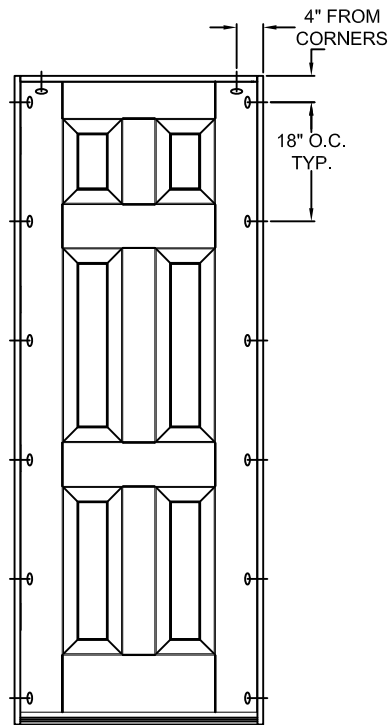

TYPICAL ELEVATION WITH FASTENER SPACING

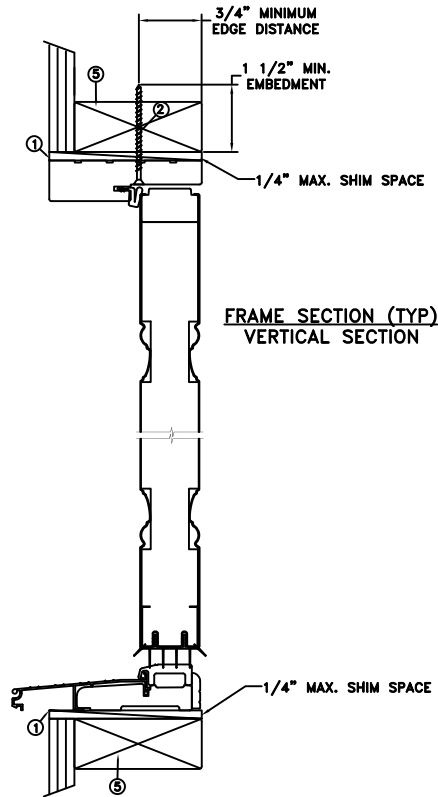

**FRAME SECTION (TYP)
VERTICAL SECTION**

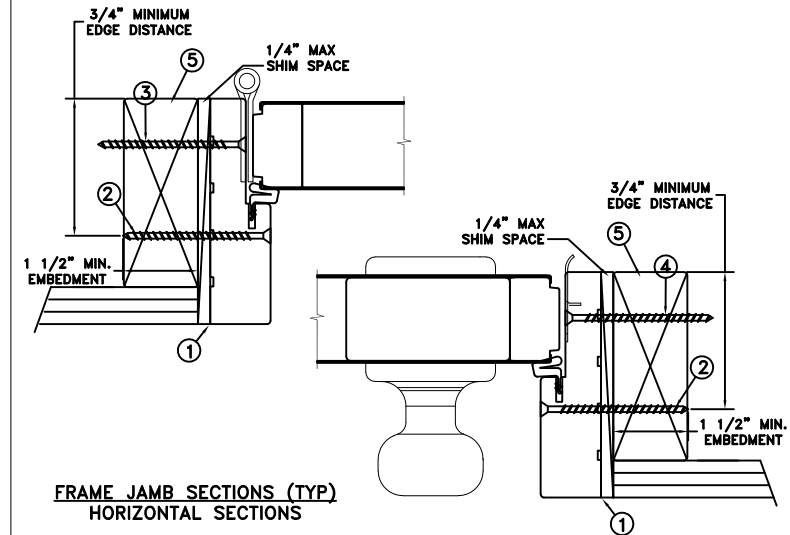

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

THROUGH FRAME INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025

DRAWN BY:
M.HAM

SCALE:
NTS

CHECKED BY:
M.HAM

APPROVED BY:
D.Vezo

RECORD No.:
D1000226

REPORT No.:
30439.01-201-12

JELD-WEN


3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

CAD DWG. No.:
—

REV: B

SHEET 11 of 20

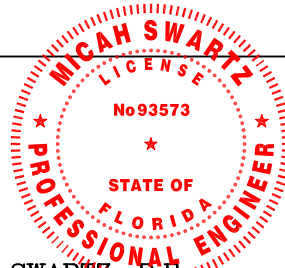


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

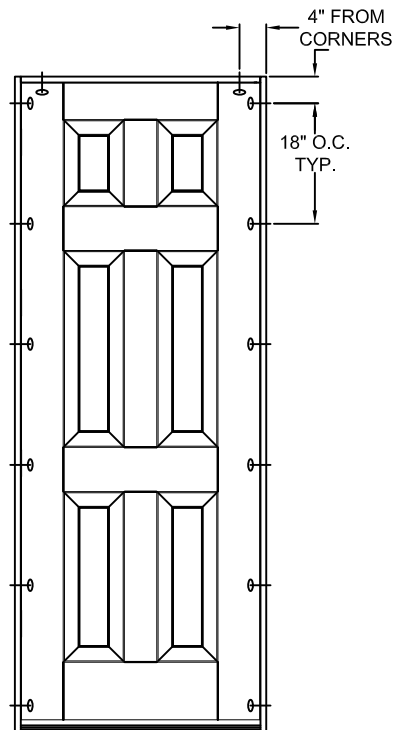

TYPICAL ELEVATION WITH FASTENER SPACING

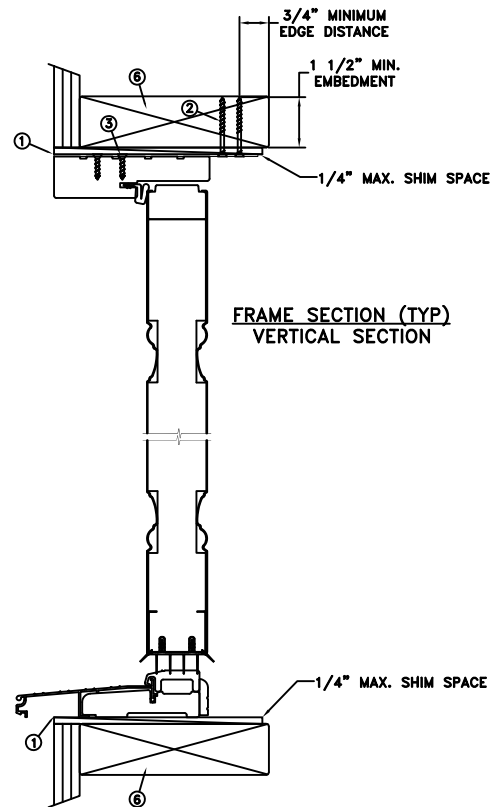

**FRAME SECTION (TYP)
VERTICAL SECTION**

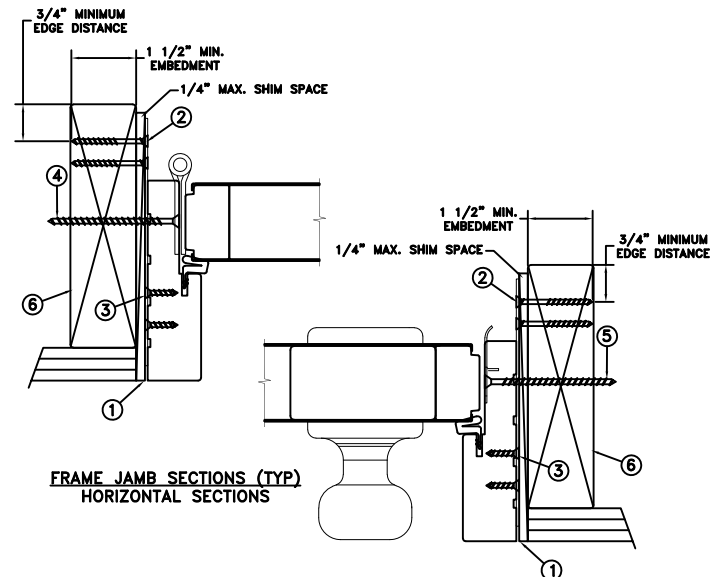

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MASONRY STRAP INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

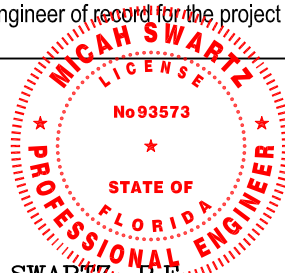

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DRAWN BY: M.HAM	DATE: 09/16/2025
CHECKED BY: M.HAM	SCALE: NTS
APPROVED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel
RECORD No.: D1000226	
REPORT No.: 30439.01-201-12	

JELD-WEN

3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

CAD DWG. No.:
—


REV:
B

SHEET
12 of 20


CONCRETE/MASONRY INSTALLATION

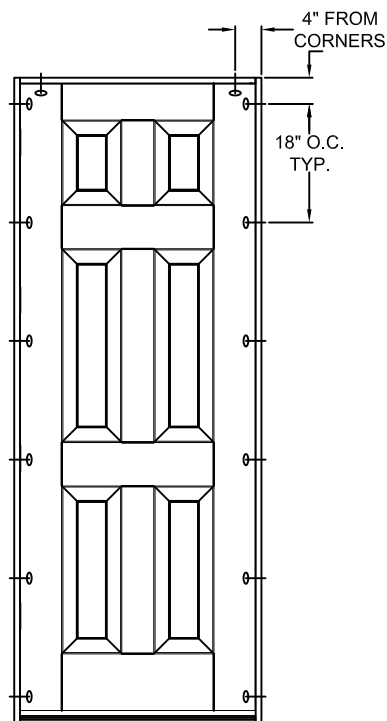

TYPICAL ELEVATION WITH FASTENER SPACING

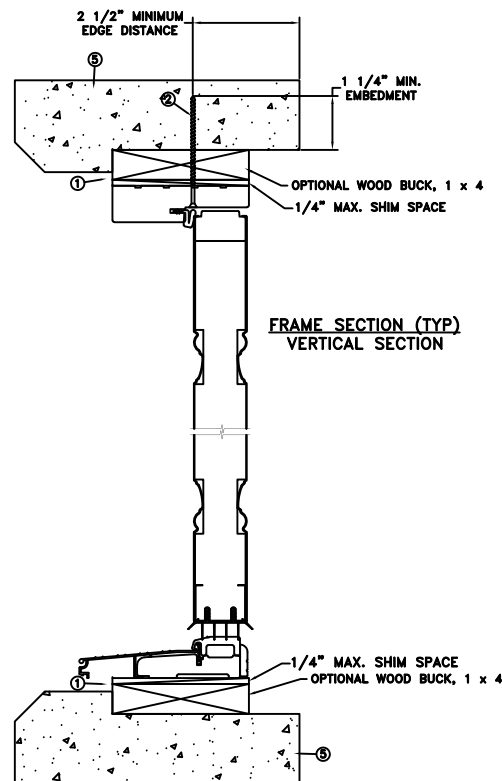

FRAME SECTION (TYP)
VERTICAL SECTION

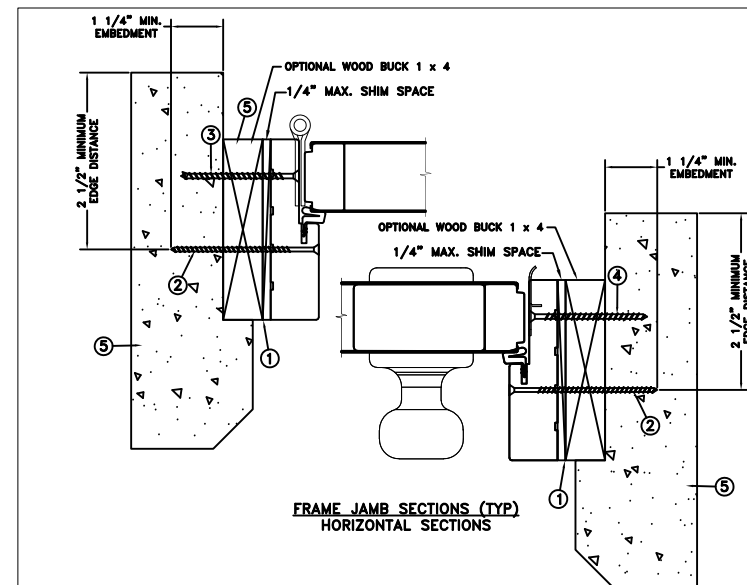

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025


DRAWN BY: M.HAM	SCALE: NTS
CHECKED BY: M.HAM	TITLE:
APPROVED BY: D.Vezo	
RECORD No.: D1000226	

Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

REPORT No.:
30439.01-201-12

CAD DWG. No.:
—

REV: B SHEET 13 of 20

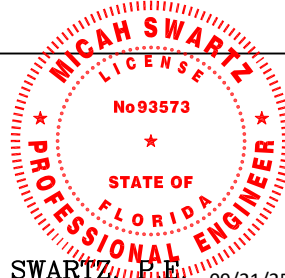


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

JELD-WEN
3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

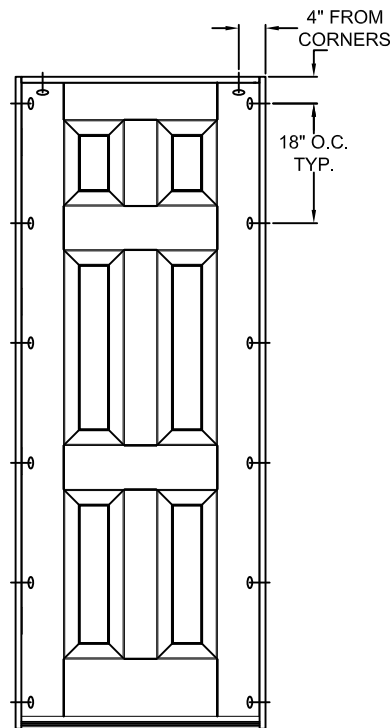

TYPICAL ELEVATION WITH FASTENER SPACING

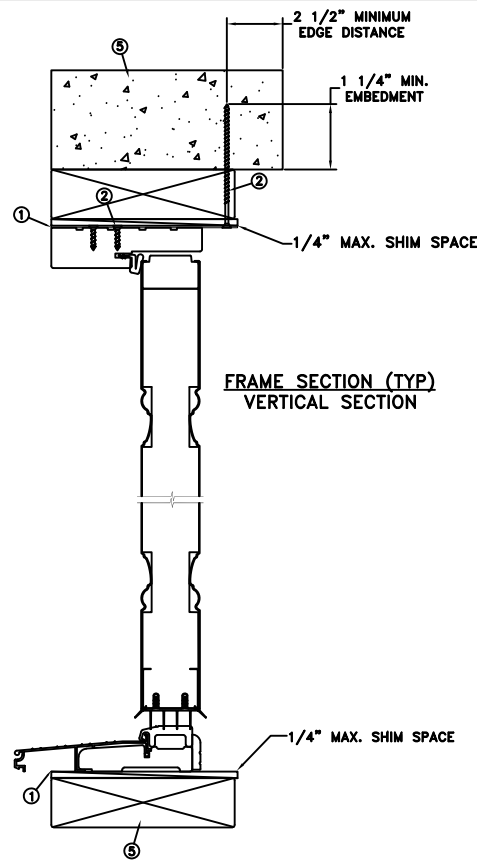

FRAME SECTION (TYP)
VERTICAL SECTION

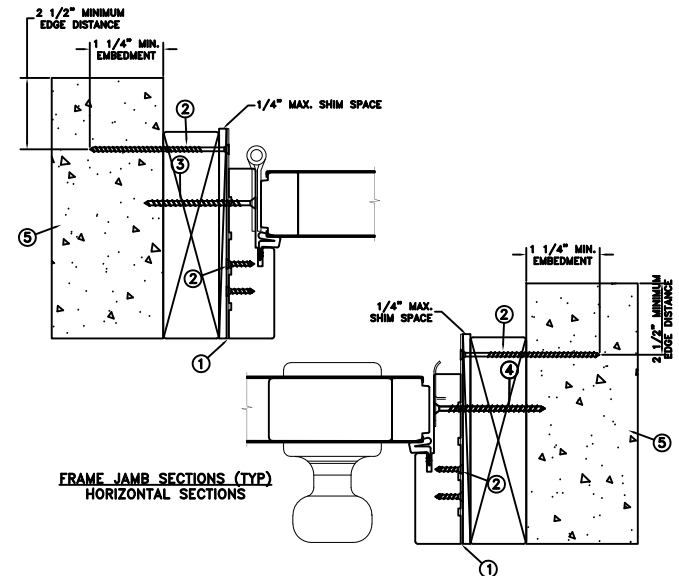

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

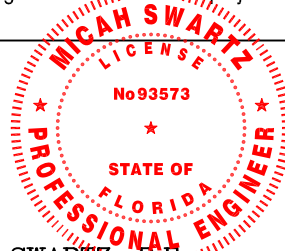

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
09/21/25

DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: M.HAM	TITLE:		
APPROVED BY: D.Vezo			
RECORD No.: D1000226			
REPORT No.: 30439.01-201-12		CAD DWG. No.: —	REV: B SHEET 14 of 20


Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

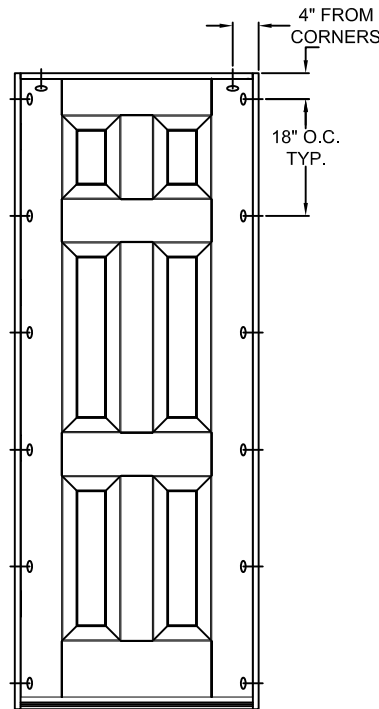

TYPICAL ELEVATION WITH FASTENER SPACING

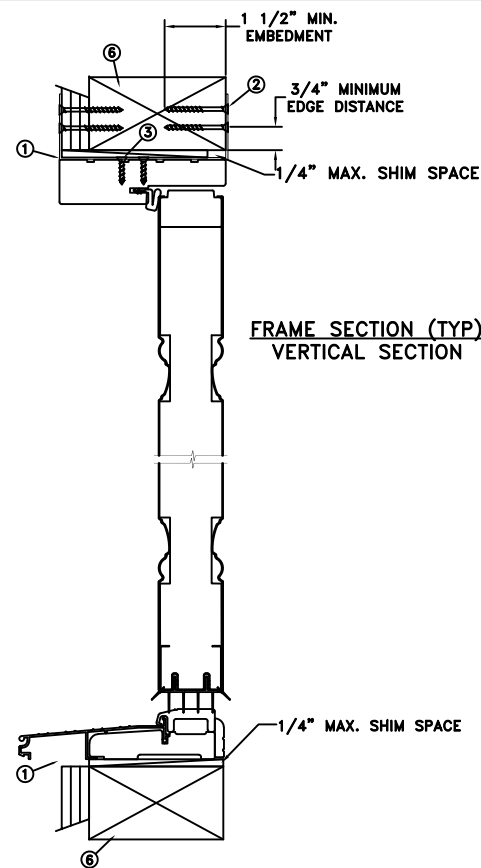

**FRAME SECTION (TYP)
VERTICAL SECTION**

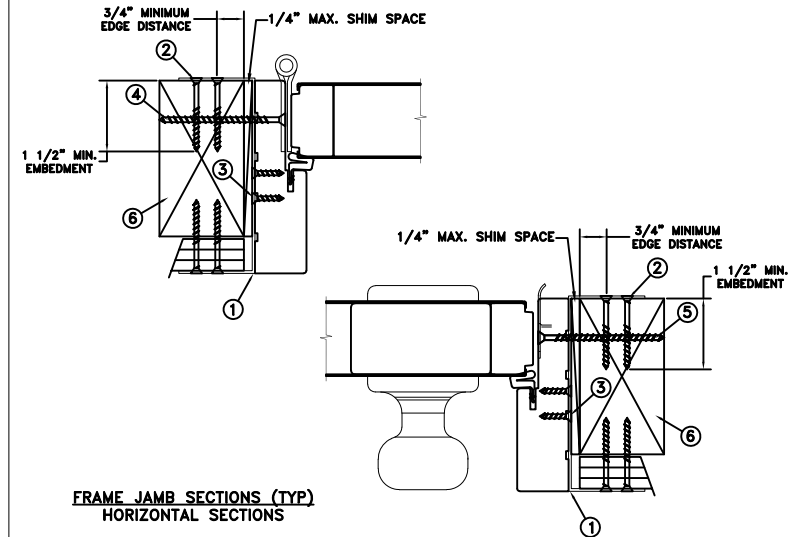

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

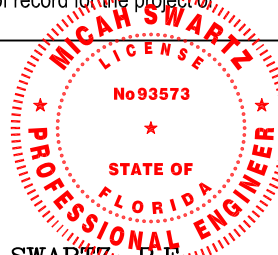


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS	JELD-WEN Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel	
CHECKED BY: M.HAM	TITLE:		
APPROVED BY: D.Vezo			
RECORD No.: D1000226			
REPORT No.: 30439.01-201-12	CAD DWG. No.: —	REV: B	SHEET 15 of 20


This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

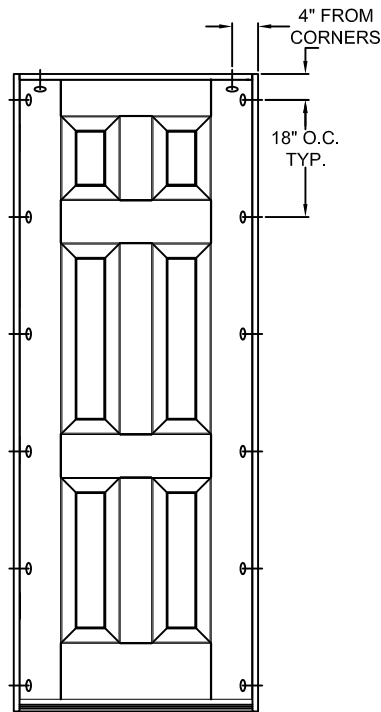

TYPICAL ELEVATION WITH FASTENER SPACING

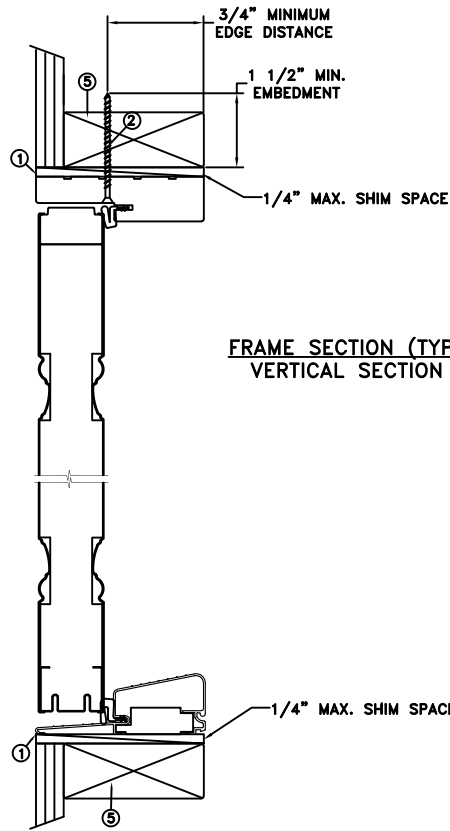

**FRAME SECTION (TYP)
VERTICAL SECTION**

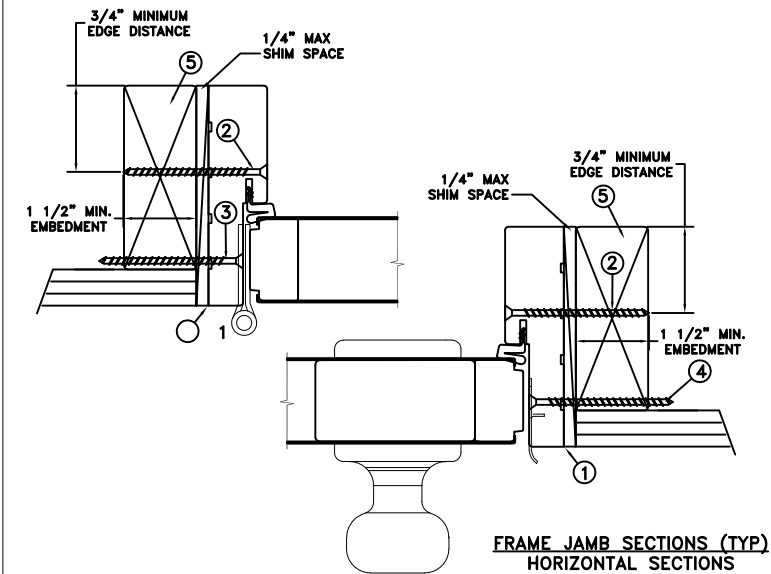

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

THROUGH FRAME INSTALLATION

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025

DRAWN BY:
M.HAM

SCALE:
NTS

CHECKED BY:
M.HAM

APPROVED BY:
D.Vezo

RECORD No.:
D1000226

REPORT No.:
30439.01-201-12

JELD-WEN


3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

CAD DWG. No.:
—

REV: B

SHEET 16 of 20

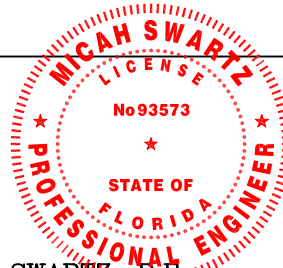


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

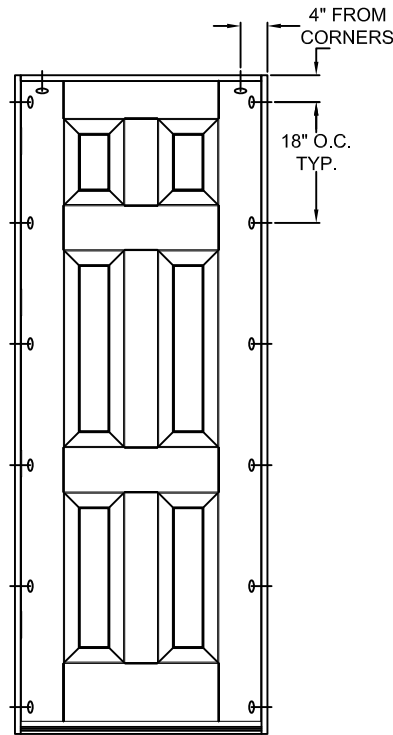

TYPICAL ELEVATION WITH FASTENER SPACING

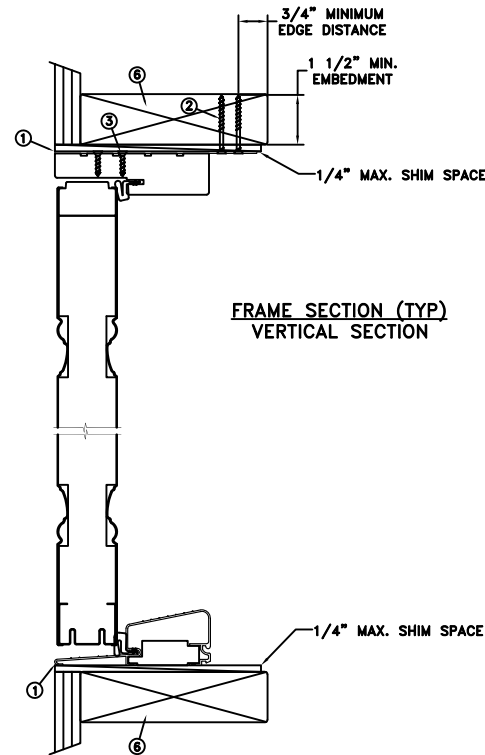

FRAME SECTION (TYP)
VERTICAL SECTION

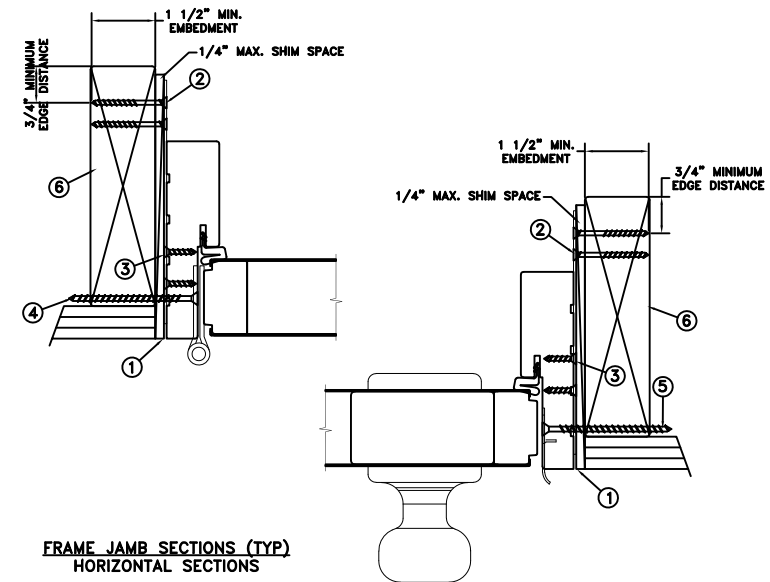

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

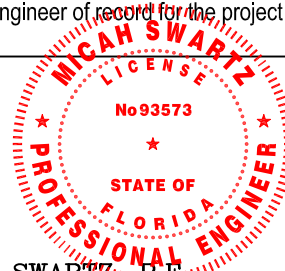


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: M.HAM	TITLE:			
APPROVED BY: D.VEZO				
RECORD No.: D1000226				
REPORT No.: 30439.01-201-12		CAD DWG. No.: —	REV: B	SHEET 17 of 20


Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:
This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

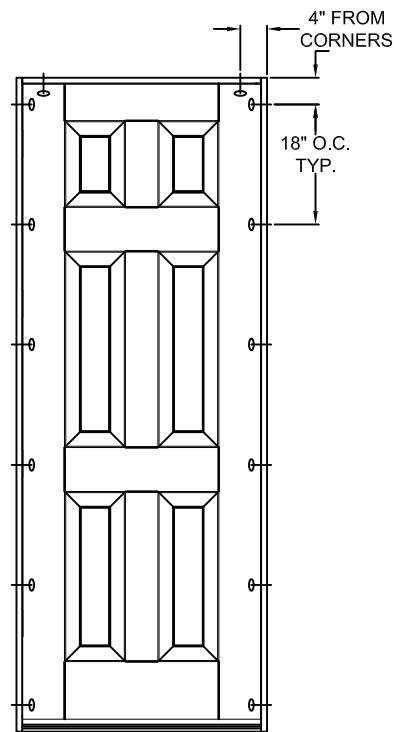

TYPICAL ELEVATION WITH FASTENER SPACING

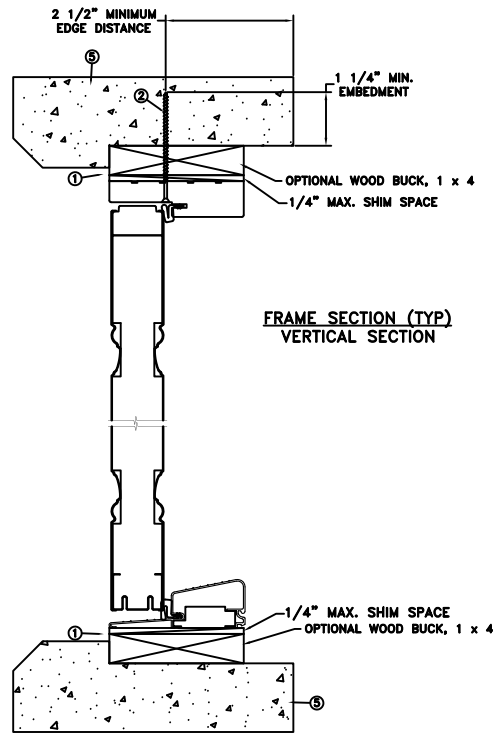

**FRAME SECTION (TYP)
VERTICAL SECTION**

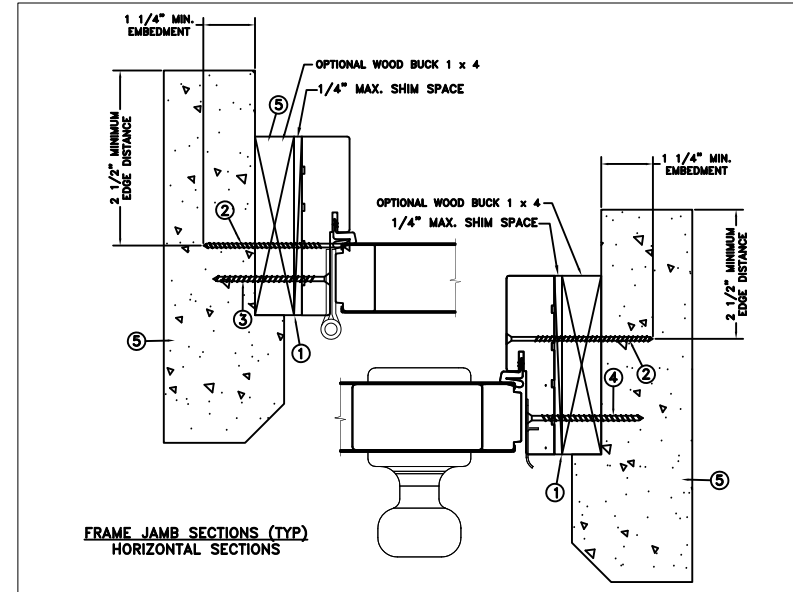

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

**CONCRETE/MASONRY
INSTALLATION**

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+65/-70	YES

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. TAS 201-94, TAS 202-94, TAS 203-94
5. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
6. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DATE: 09/16/2025

DRAWN BY: M.HAM
SCALE: NTS

CHECKED BY: M.HAM
TITLE:

APPROVED BY: D.Vezo

RECORD No.: D1000226


REPORT No.: 30439.01-201-12

JELD-WEN

3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

**Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel**

CAD DWG. No.: — REV: B SHEET 18 of 20

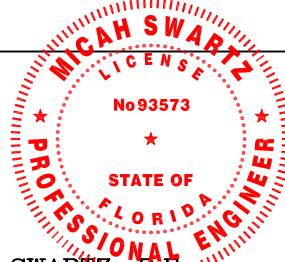


MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075
09/21/25

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


CONCRETE/MASONRY INSTALLATION

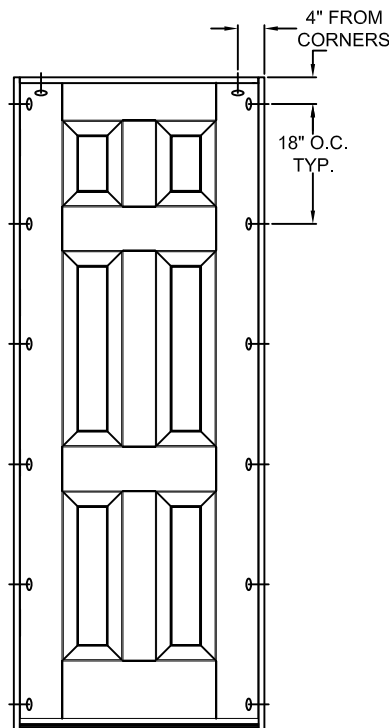

TYPICAL ELEVATION WITH FASTENER SPACING

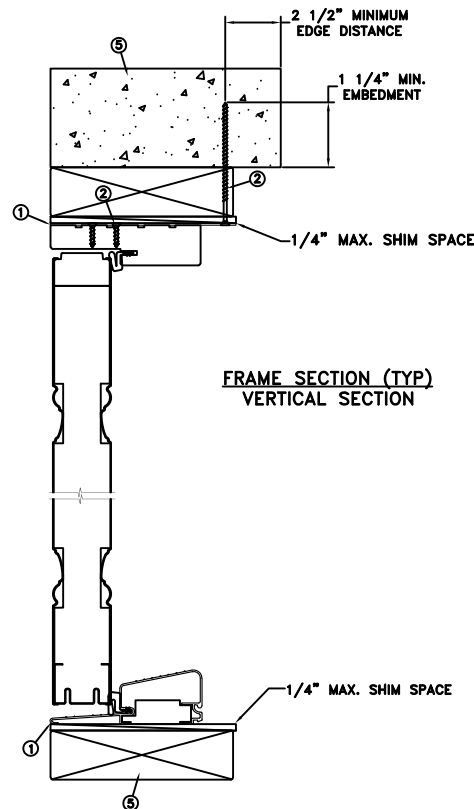

**FRAME SECTION (TYP)
VERTICAL SECTION**

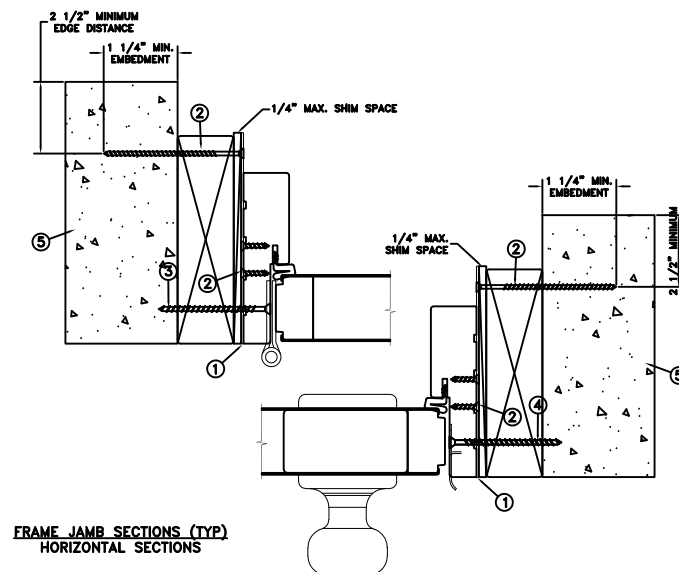

**FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS**

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use one (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install two (2) - 3/16" tapcons into each strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal.

Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

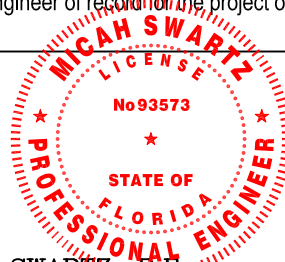

MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS	JELD-WEN Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel	
CHECKED BY: M.HAM	TITLE:		
APPROVED BY: D.Vezo	RECORD No.:		
REPORT No.: 30439.01-201-12		CAD DWG. No.: —	REV: B SHEET 19 of 20

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.


DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.


MASONRY STRAP INSTALLATION

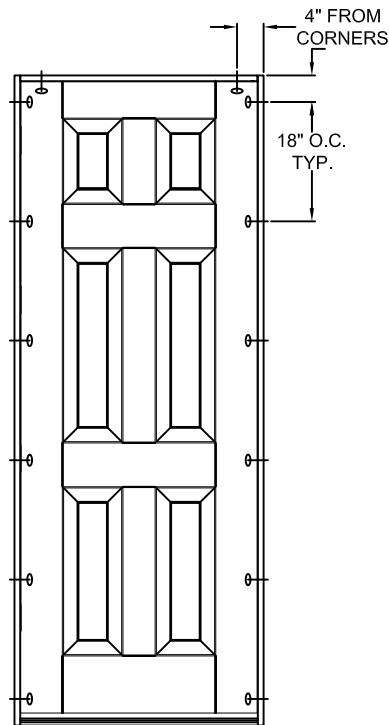

TYPICAL ELEVATION WITH FASTENER SPACING

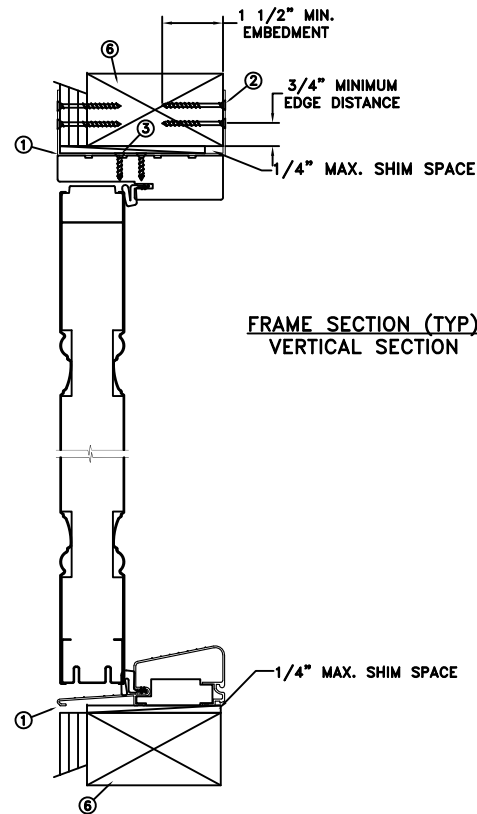

FRAME SECTION (TYP)
VERTICAL SECTION

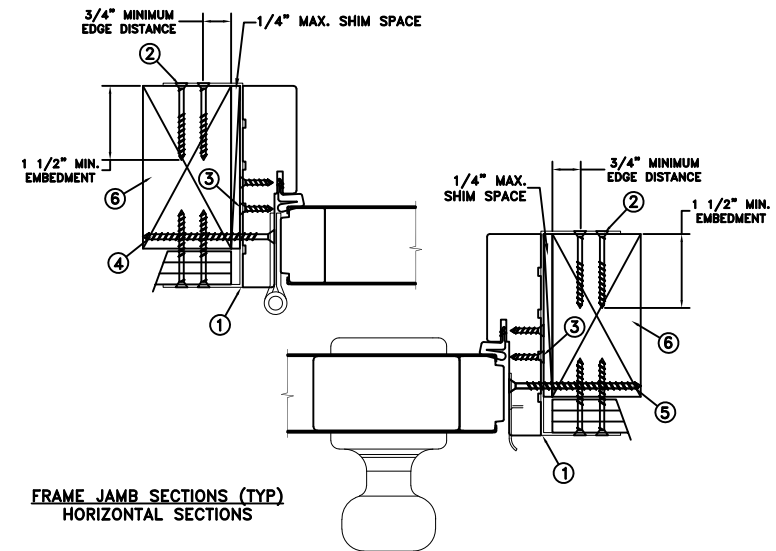

FRAME JAMB SECTIONS (TYP)
HORIZONTAL SECTIONS

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+65/-70	YES

Installation Notes:


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install two (2) - #8 x 2" PH fasteners into each strike plate, through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project or installation.

General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Use structural or composite shims where required.
4. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
5. TAS 201-94, TAS 202-94, TAS 203-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved impact protective system is not required on this product in areas requiring impact resistance.

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies.

DRAWN BY: M.HAM		SCALE: NTS	DATE: 09/16/2025		3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
CHECKED BY: M.HAM		JELD-WEN Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel				
APPROVED BY: D.VEZO						
RECORD No.: D1000226						
REPORT No.: 30439.01-201-12			CAD DWG. No.: —	REV: B	SHEET 20 of 20	

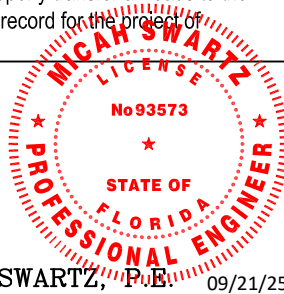

MICAH SWARTZ, P.E. 09/21/25
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.