




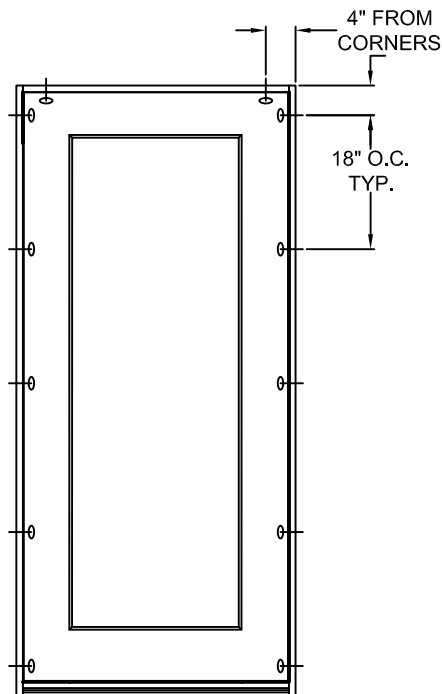

TYPICAL ELEVATION WITH FASTENER SPACING

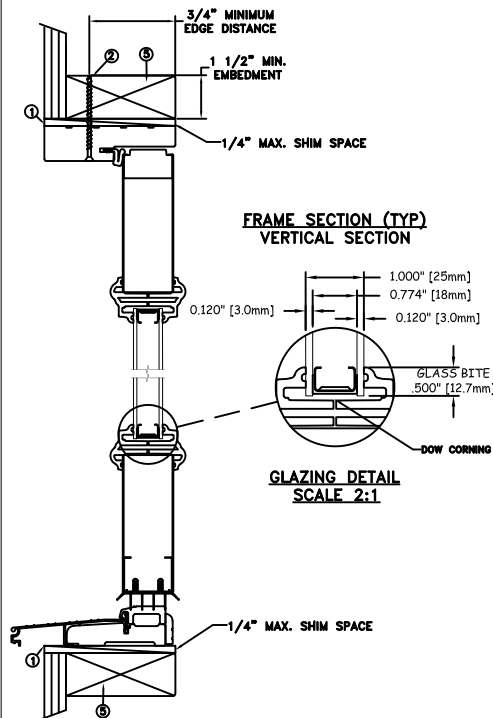

THROUGH FRAME INSTALLATION

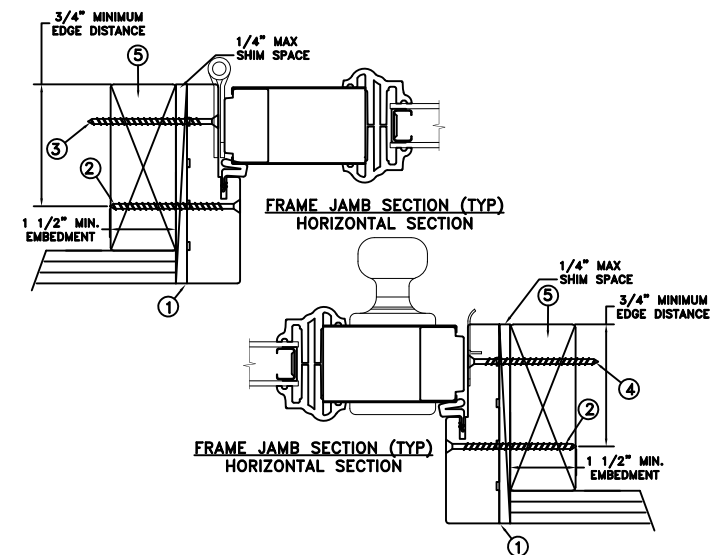

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

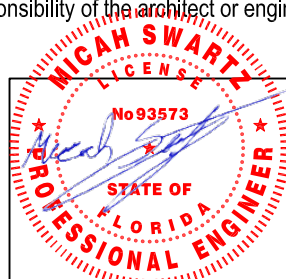

03/10/26


MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel		
APPROVED BY: D.VEZO			
RECORD No.: D1000238			
REPORT No.: 29703.01-201-12			
	CAD DWG. No.: —	REV: B	SHEET 1 of 20

MASONRY STRAP INSTALLATION

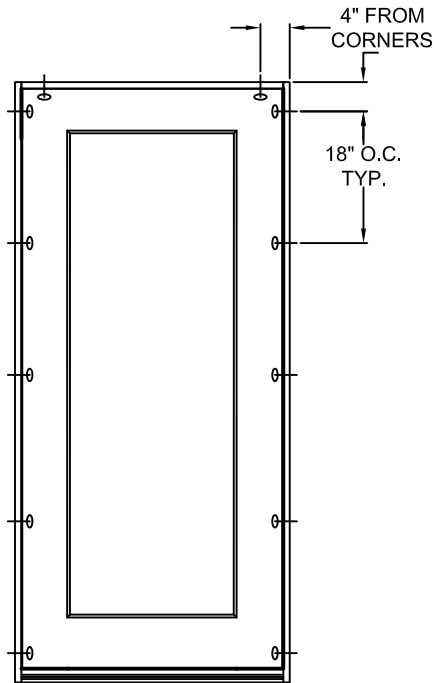


TYPICAL ELEVATION WITH FASTENER SPACING

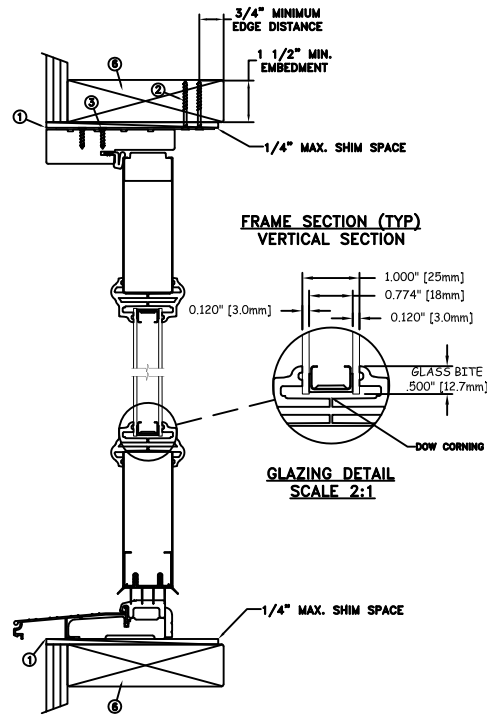

FRAME SECTION (TYP)
VERTICAL SECTION

GLAZING DETAIL
SCALE 2:1

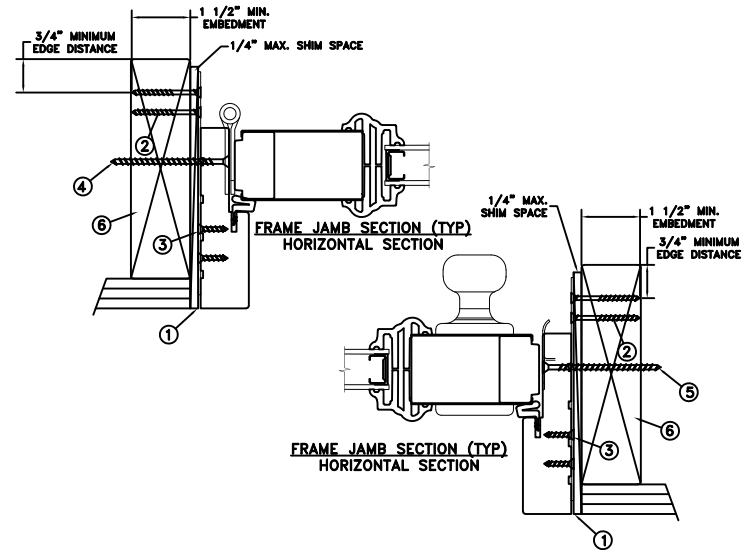

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

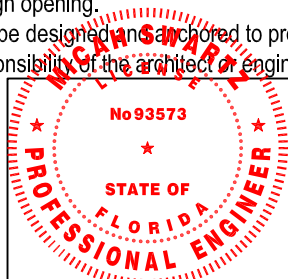

03/10/26


MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DATE: 02/09/2026		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS				
DRAWN BY: M.HAM	CHECKED BY: D.Vezo	Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel		
APPROVED BY: D.Vezo	RECORD No.:			
D1000238				
REPORT No.:		CAD DWG. No.:	REV:	SHEET
29703.01-201-12		—	B	2 of 20

CONCRETE/MASONRY INSTALLATION

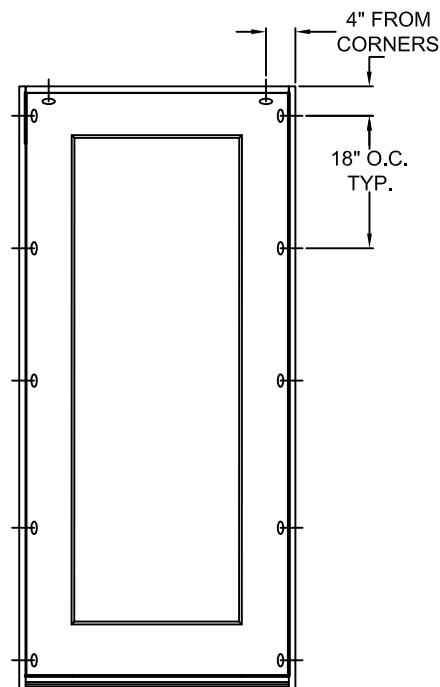

TYPICAL ELEVATION WITH FASTENER SPACING

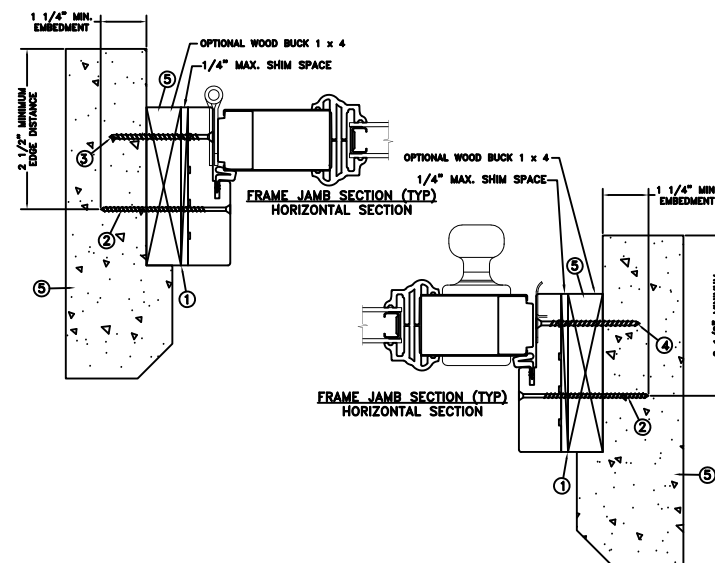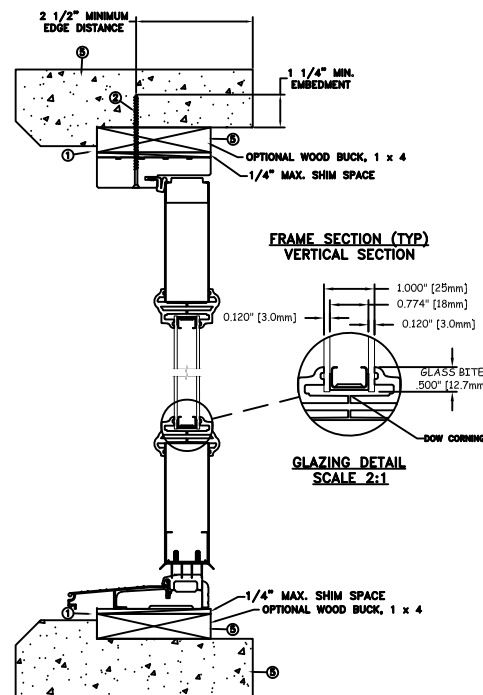

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

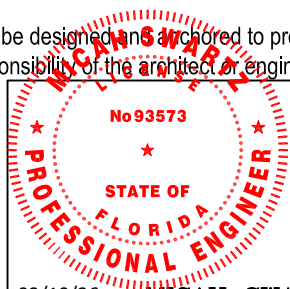

03/10/26


MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DATE: 02/09/2026		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS				
DRAWN BY: M.HAM	CHECKED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel		
APPROVED BY: D.Vezo	RECORD No.:			
	D1000238			
REPORT No.:		CAD DWG. No.:	REV:	SHEET
29703.01-201-12		—	B	3 of 20

CONCRETE/MASONRY INSTALLATION

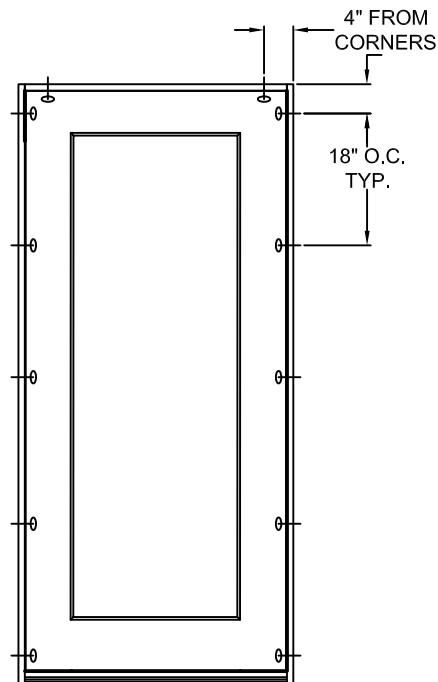

TYPICAL ELEVATION WITH FASTENER SPACING

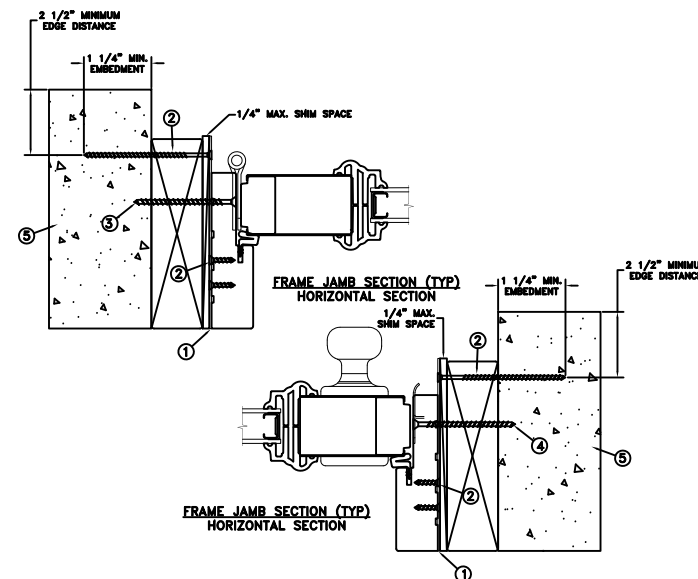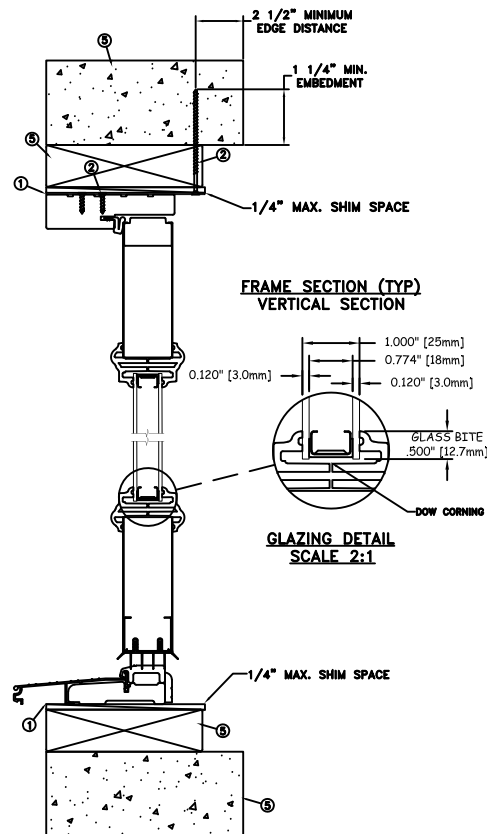

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

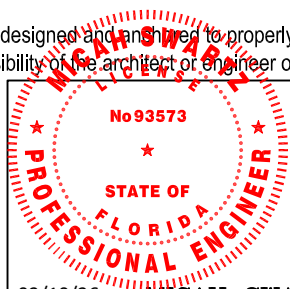


03/10/26 MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies



DRAWN BY: M.HAM	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
CHECKED BY: D.Vezo	SCALE: NTS	
APPROVED BY: D.Vezo	TITLE:	
RECORD No.: D1000238		
REPORT No.: 29703.01-201-12	CAD DWG. No.: —	REV: B SHEET 4 of 20

Contours (S-2500) Steel Wood Swinging Door
Inswing 1 Panel

MASONRY STRAP INSTALLATION

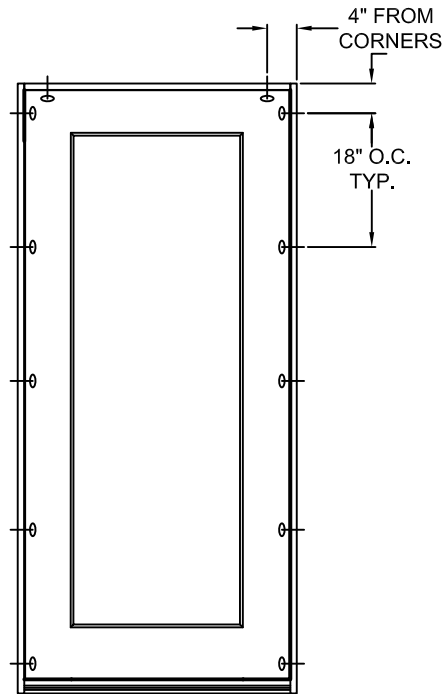

TYPICAL ELEVATION WITH FASTENER SPACING

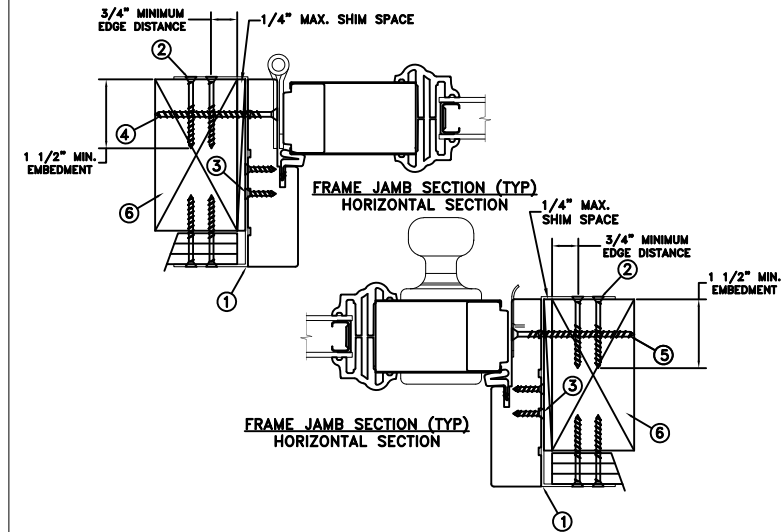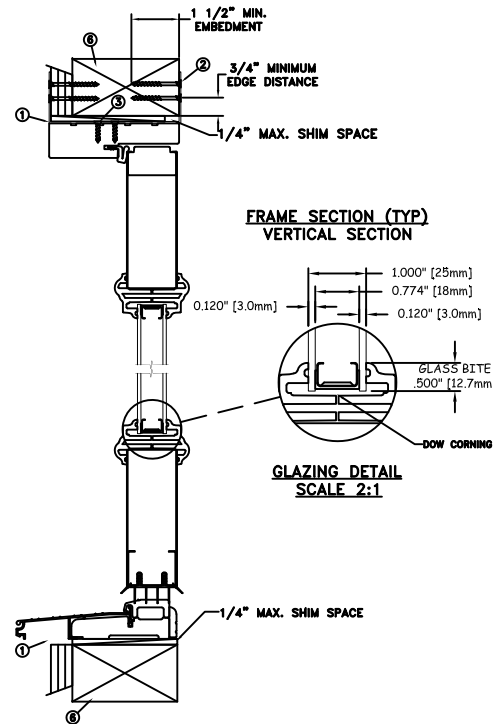

MAXIMUM FRAME	DP	IMPACT
37.5" x 81.75"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and installed to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

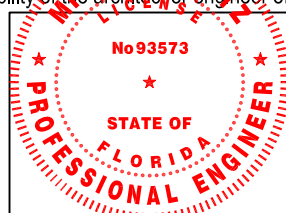


03/10/26 **MICAH SWARTZ, P.E.**
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000238	
REPORT No.: 29703.01-201-12	CAD DWG. No.: —
	REV: B SHEET 5 of 20

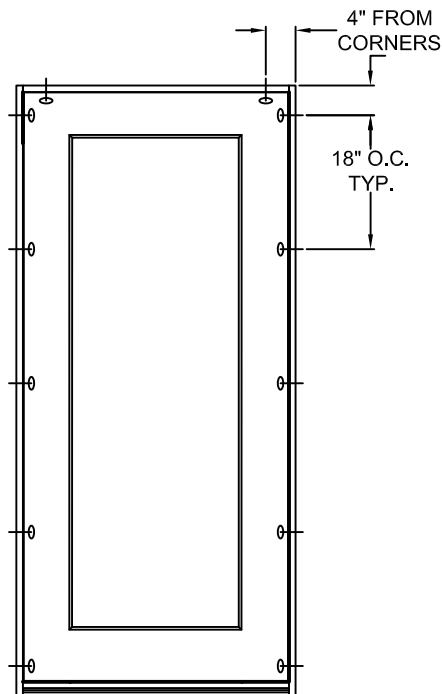


TYPICAL ELEVATION WITH FASTENER SPACING

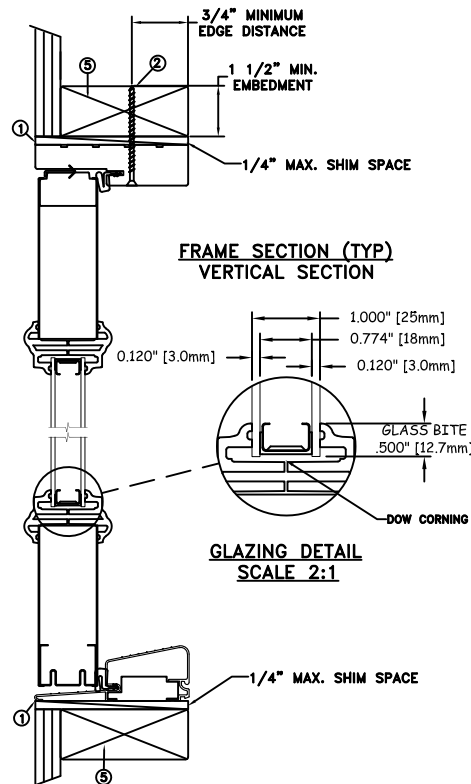

**FRAME SECTION (TYP)
VERTICAL SECTION**

**GLAZING DETAIL
SCALE 2:1**

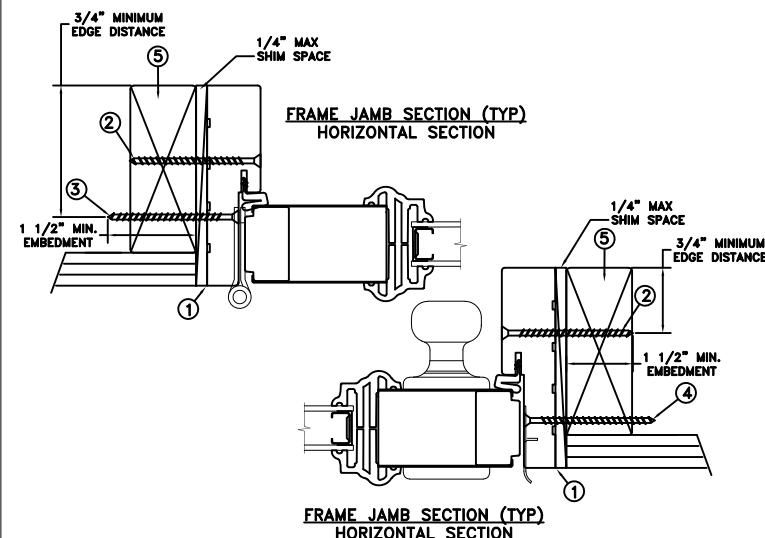

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

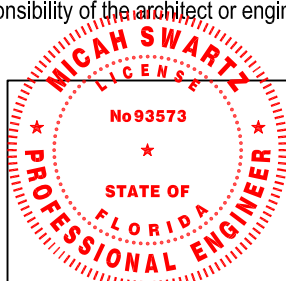

03/10/26

MICAH SWARTZ, P.E.


PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies


DRAWN BY: M.HAM	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
CHECKED BY: D.Vezo	SCALE: NTS	
APPROVED BY: D.Vezo	TITLE:	
RECORD No.: D1000238		
REPORT No.: 29704.01-201-12	CAD DWG. No.: —	REV: B SHEET 6 of 20

Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

MASONRY STRAP INSTALLATION

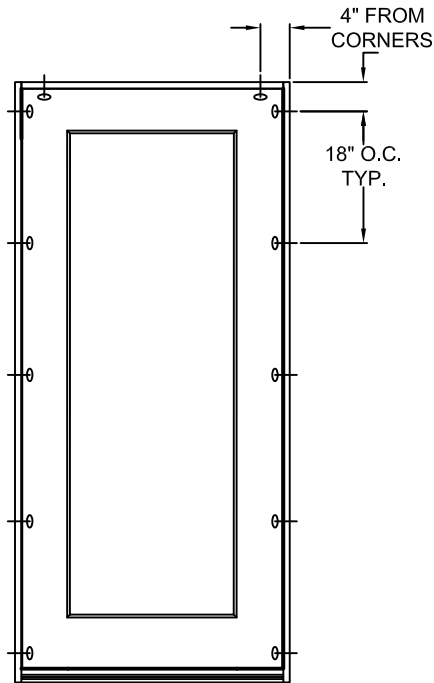


TYPICAL ELEVATION WITH FASTENER SPACING

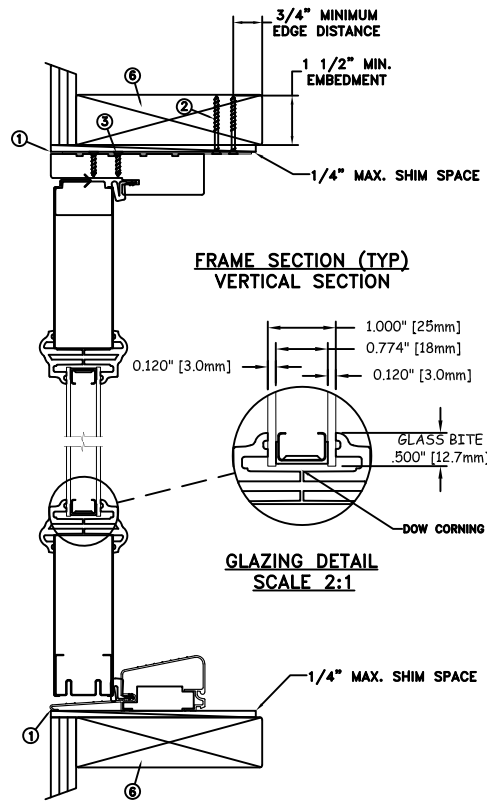

FRAME SECTION (TYP)
VERTICAL SECTION

GLAZING DETAIL
SCALE 2:1

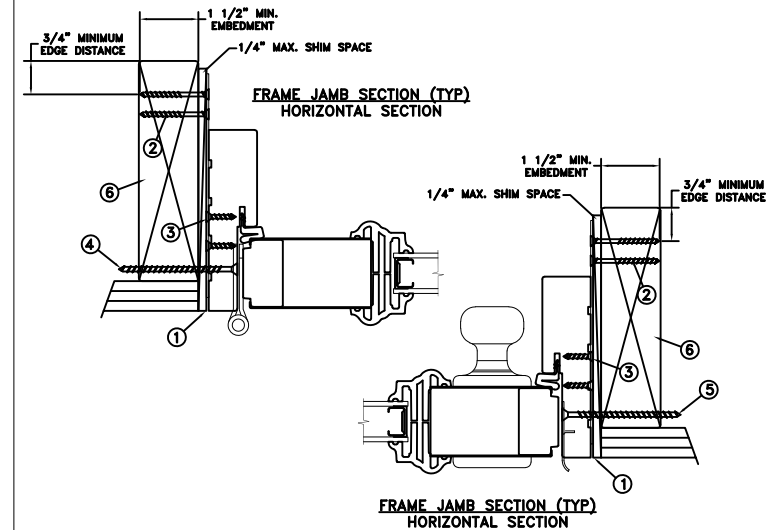

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

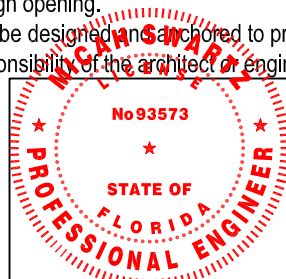

03/10/26

MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DRAWN BY: M.HAM	DATE: 02/09/2026
CHECKED BY: D.Vezo	SCALE: NTS
APPROVED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel
RECORD No.: D1000238	
REPORT No.: 29704.01-201-12	



JELD-WEN 3737 LAKEPORT BLVD.
KLAMATH FALLS OR, 97601
PHONE: (800) 535-3936

CAD DWG. No.: —	REV: B	SHEET 7 of 20
--------------------	-----------	------------------

CONCRETE/MASONRY INSTALLATION

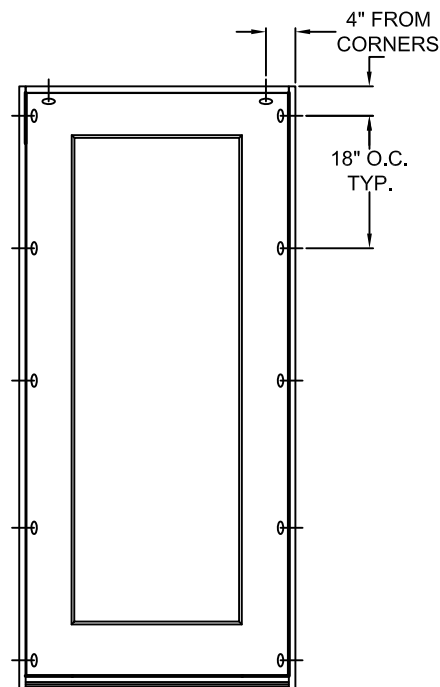

TYPICAL ELEVATION WITH FASTENER SPACING

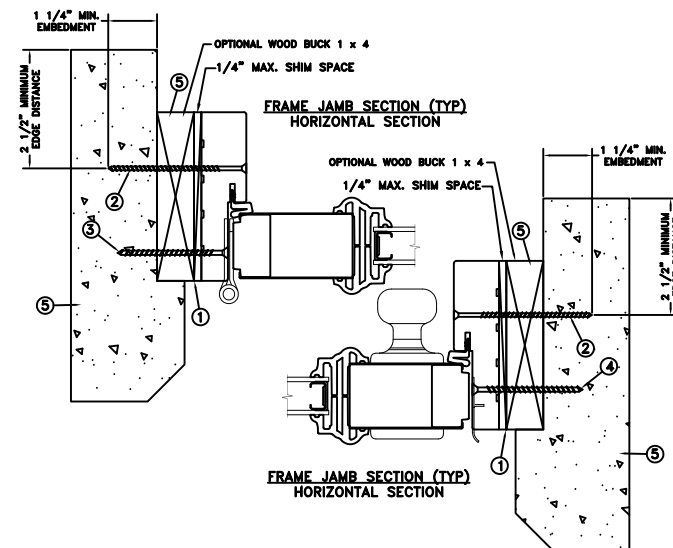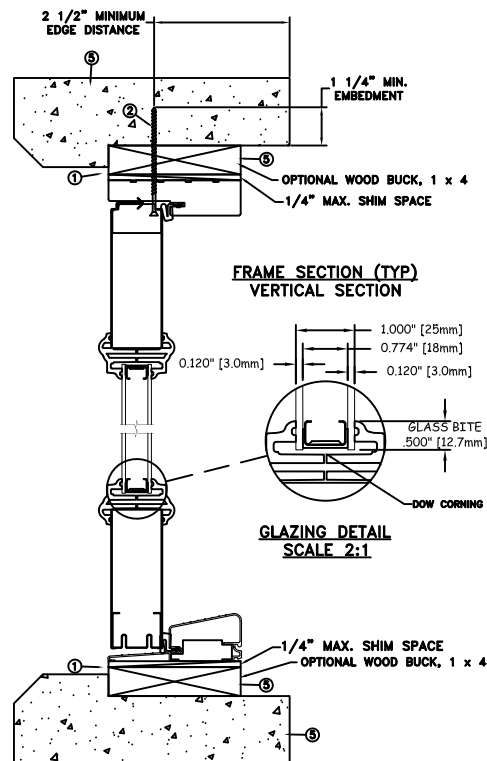

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

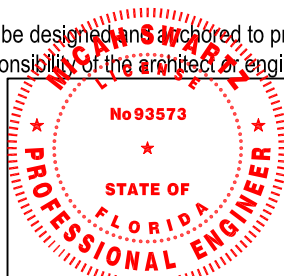


03/10/26 MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel		
APPROVED BY: D.VEZO			
RECORD No.: D1000238			
REPORT No.: 29704.01-201-12			
	CAD DWG. No.: —	REV: B	SHEET 8 of 20

CONCRETE/MASONRY INSTALLATION

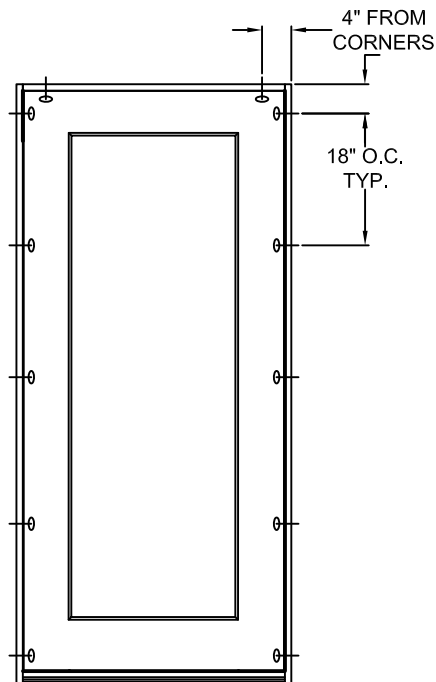

TYPICAL ELEVATION WITH FASTENER SPACING

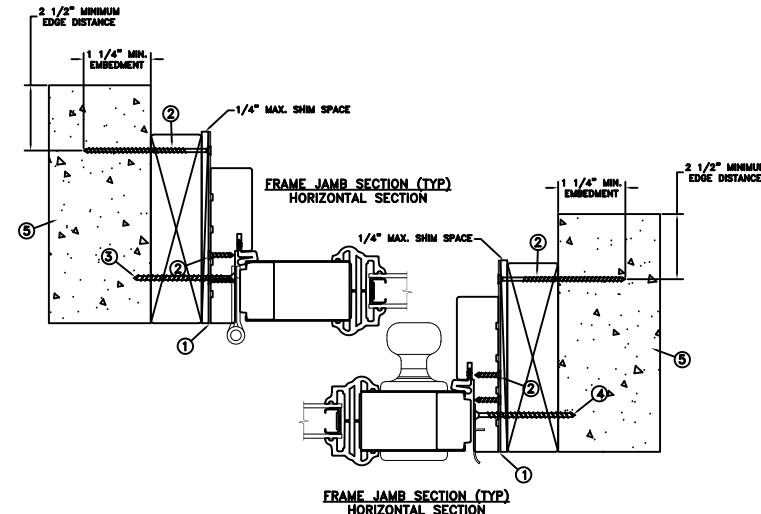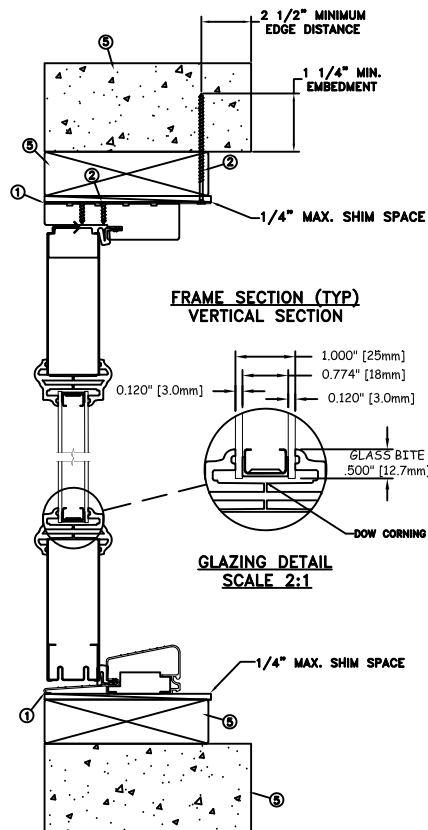

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

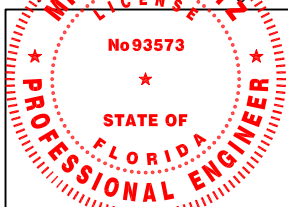

03/10/26


MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel		
APPROVED BY: D.VEZO			
RECORD No.: D1000238			
REPORT No.: 29704.01-201-12			
	CAD DWG. No.: —	REV: B	SHEET 9 of 20

MASONRY STRAP INSTALLATION

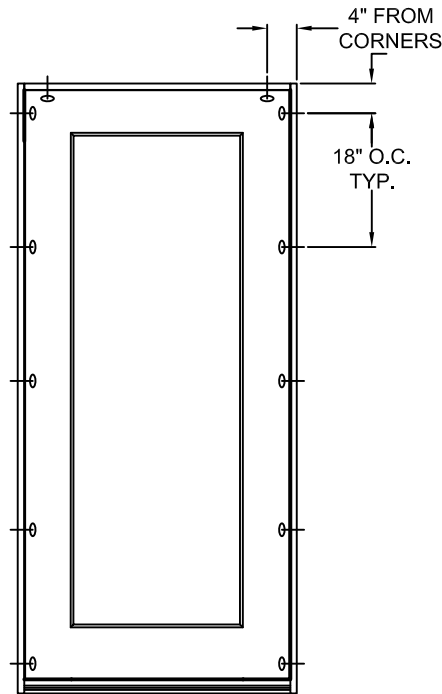

TYPICAL ELEVATION WITH FASTENER SPACING

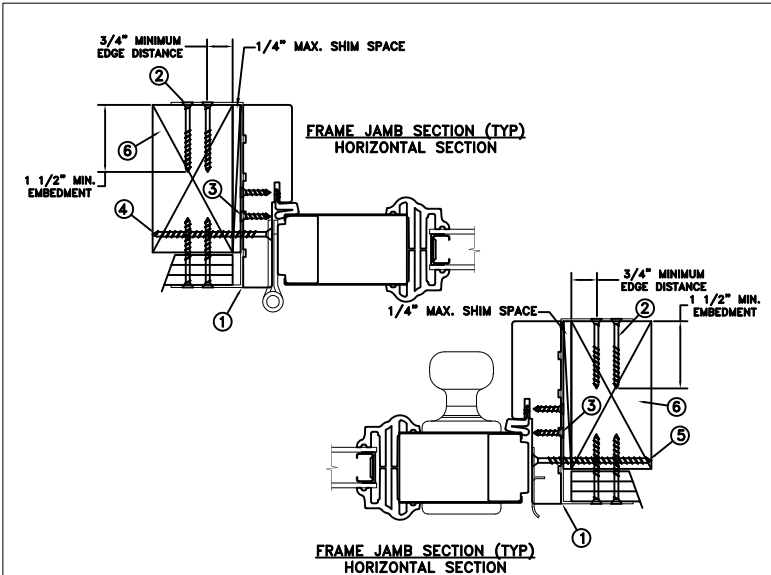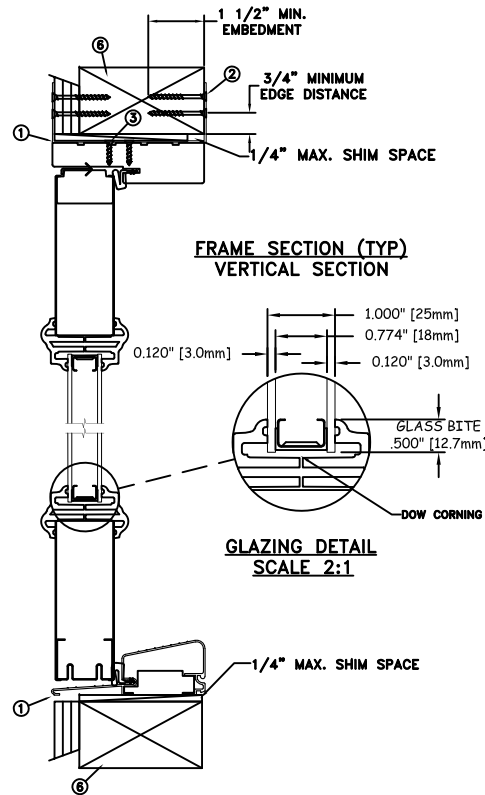

MAXIMUM FRAME	DP	IMPACT
37.5" x 80.5"	+65/-70	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

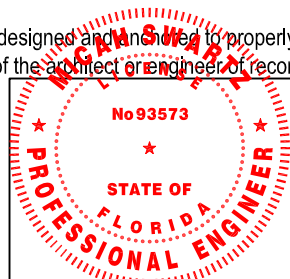

03/10/26


MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075


This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DRAWN BY: M.HAM	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
CHECKED BY: D.Vezo	SCALE: NTS	
APPROVED BY: D.Vezo	TITLE:	
RECORD No.: D1000238		
REPORT No.: 29704.01-201-12	CAD DWG. No.: —	REV: B SHEET 10 of 20


Contours (S-2500) Steel Wood Swinging Door
Outswing 1 Panel

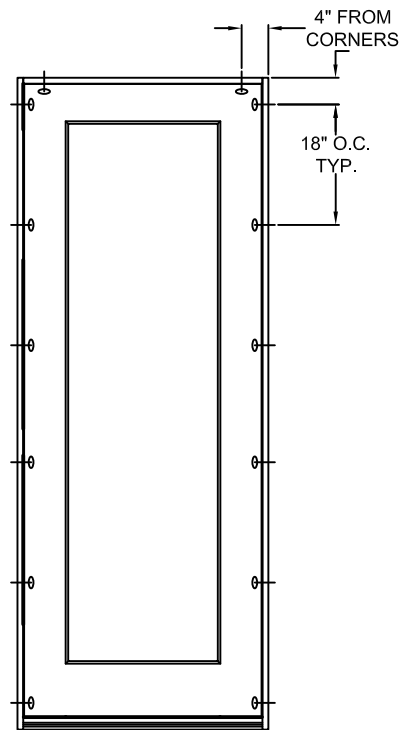

TYPICAL ELEVATION WITH FASTENER SPACING

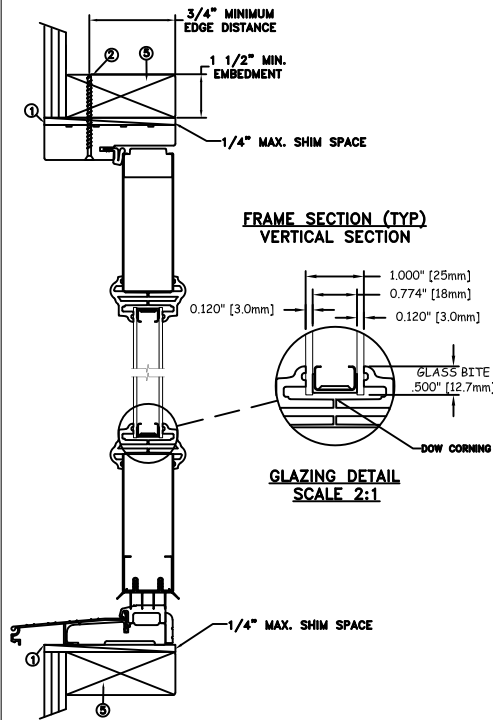

THROUGH FRAME INSTALLATION

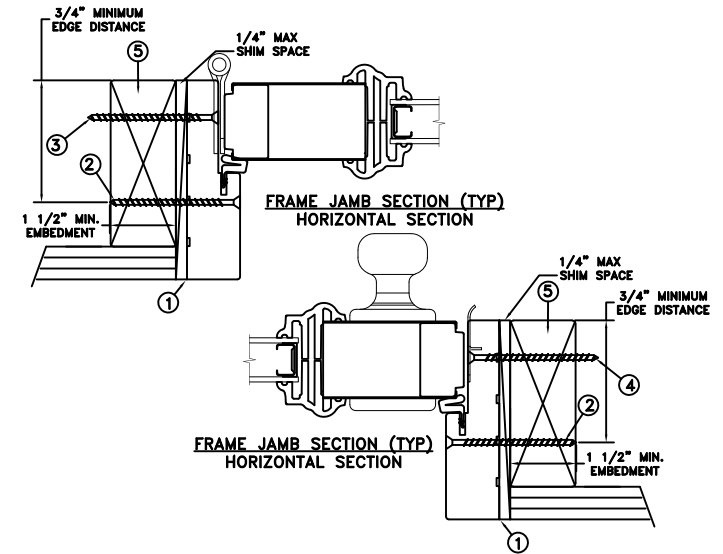

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

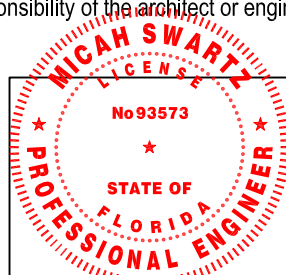


03/10/26

MICAH SWARTZ, P.E.



PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
SCALE: NTS	
DRAWN BY: M.HAM	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel
CHECKED BY: D.VEZO	
APPROVED BY: D.VEZO	
RECORD No.: D1000238	
REPORT No.: ---	CAD DWG. No.: ---
	REV: B SHEET 11 of 20

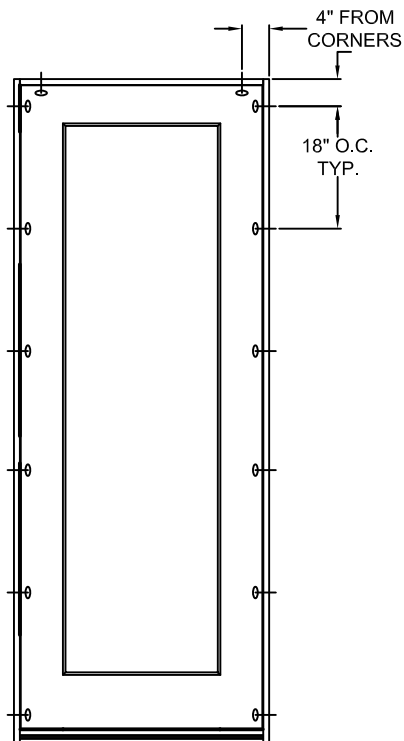

TYPICAL ELEVATION WITH FASTENER SPACING

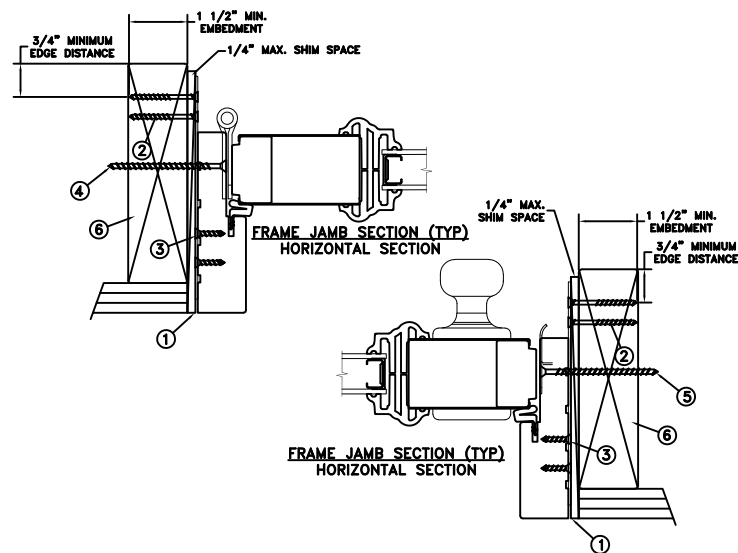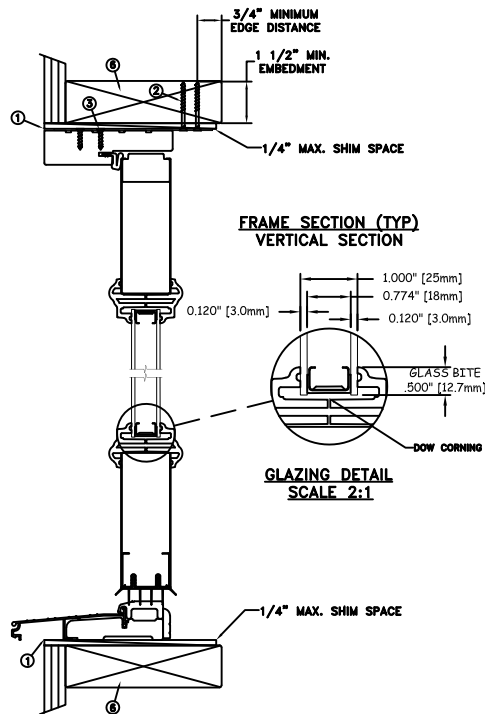

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

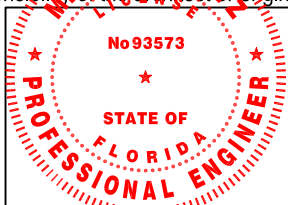



03/10/26 **MICAH SWARTZ, P.E.**
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel		
APPROVED BY: D.VEZO			
RECORD No.: D1000238			
REPORT No.: ---	CAD DWG. No.: —	REV: B	SHEET 12 of 20

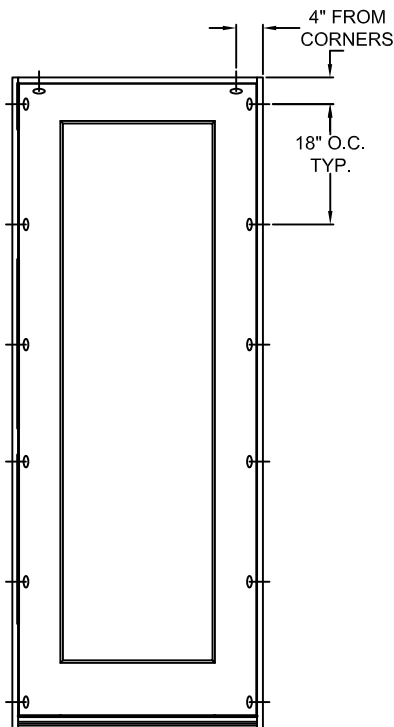

TYPICAL ELEVATION WITH FASTENER SPACING

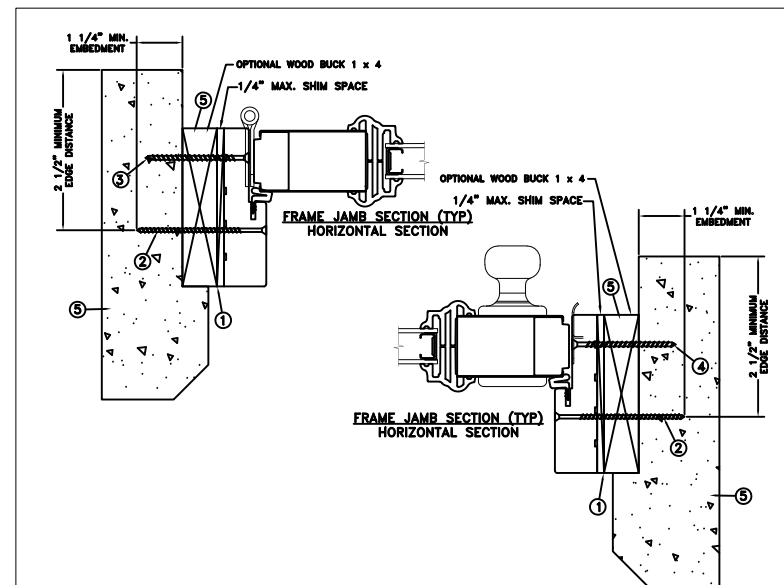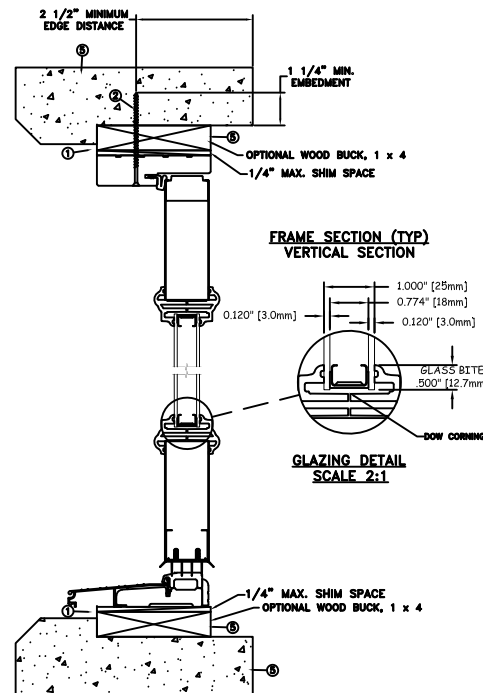

**CONCRETE/MASONRY
INSTALLATION**

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

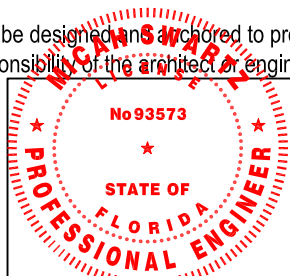


03/10/26 **MICAH SWARTZ, P.E.**
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies


	DATE: 02/09/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel		
APPROVED BY: D.Vezo			
RECORD No.: D1000238			
REPORT No.: ---		CAD DWG. No.: —	REV: B SHEET 13 of 20

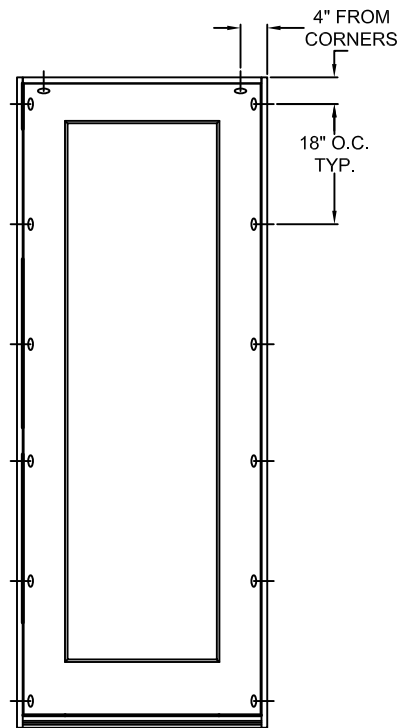

TYPICAL ELEVATION WITH FASTENER SPACING

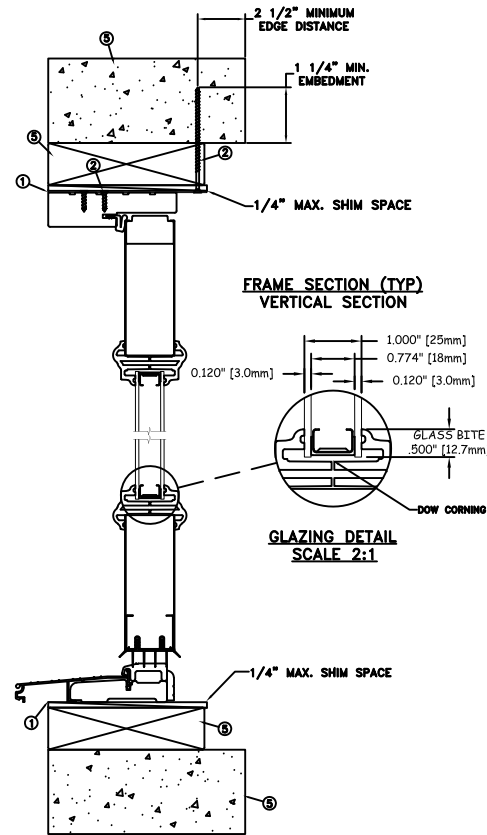

CONCRETE/MASONRY INSTALLATION

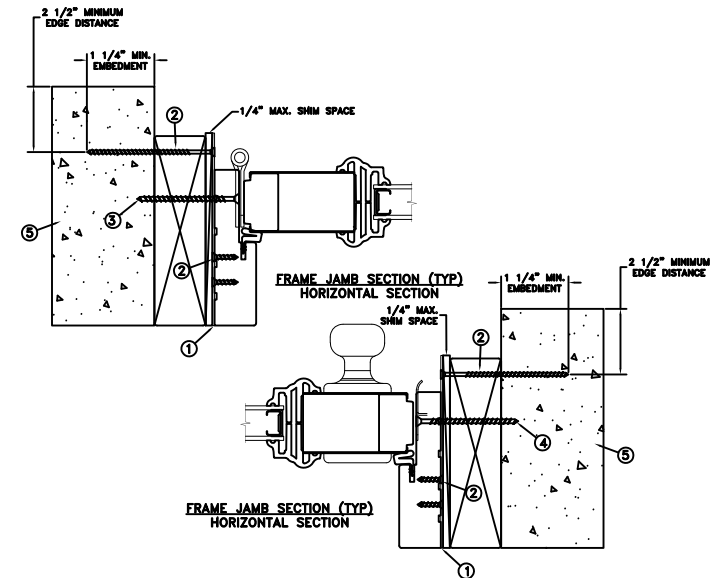

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and installed to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

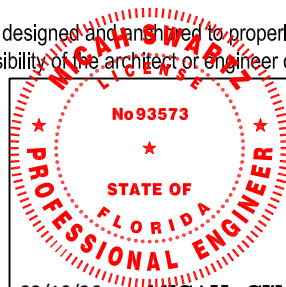


03/10/26

MICAH SWARTZ, P.E.


PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DRAWN BY: M.HAM	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
CHECKED BY: D.Vezo	SCALE: NTS	
APPROVED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel	
RECORD No.: D1000238		
REPORT No.: ---	CAD DWG. No.: ---	REV: B SHEET 14 of 20

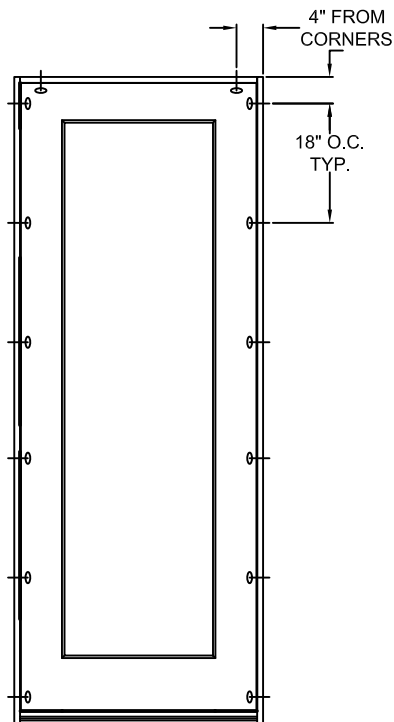


TYPICAL ELEVATION WITH FASTENER SPACING

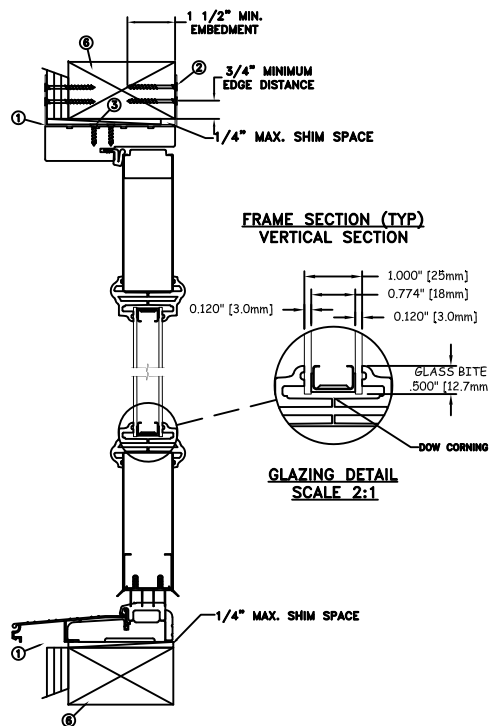

**FRAME SECTION (TYP)
VERTICAL SECTION**

**GLAZING DETAIL
SCALE 2:1**

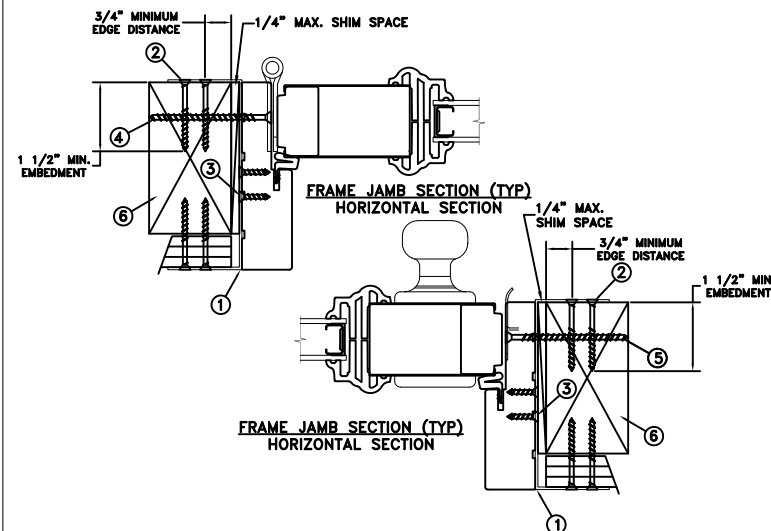

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

MAXIMUM FRAME	DP	IMPACT
37.375" x 97.75"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and installed to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

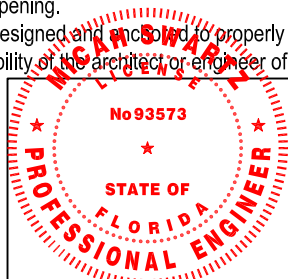

03/10/26


MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DATE: 02/09/2026		JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
SCALE: NTS				
DRAWN BY: M.HAM		Contours (S-2500) Steel Wood Swinging Door Inswing 1 Panel		
CHECKED BY: D.Vezo				
APPROVED BY: D.Vezo				
RECORD No.: D1000238				
REPORT No.: ---		CAD DWG. No.: ---	REV: B	SHEET 15 of 20

THROUGH FRAME INSTALLATION

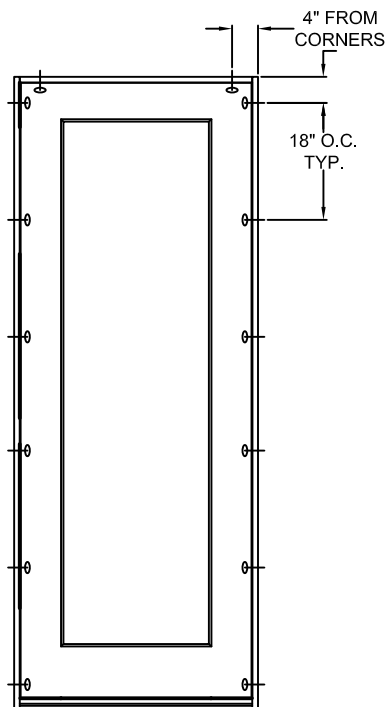

TYPICAL ELEVATION WITH FASTENER SPACING

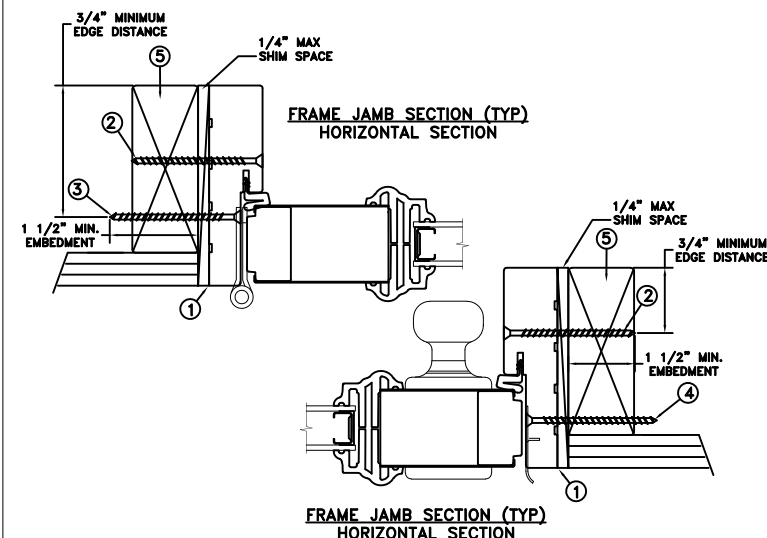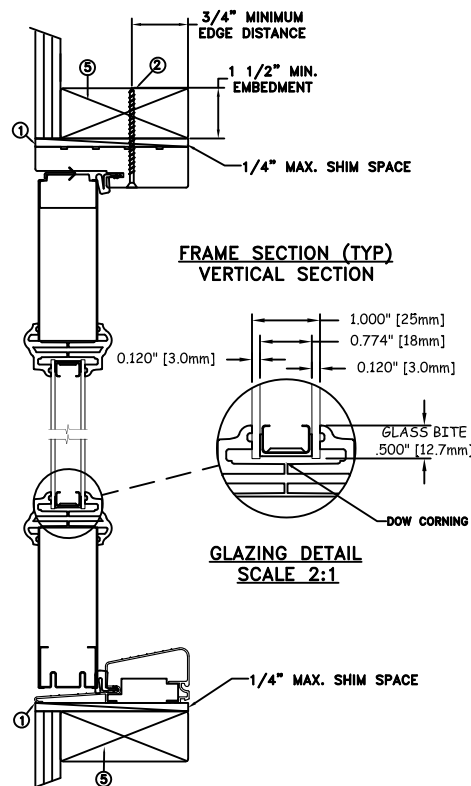

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use #8 PH or greater fastener through the head & side jambs with sufficient length to penetrate a minimum of 1-1/2" into the wood framing. For 2x wood frame substrate (min. S.G. = 0.42).
3. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
4. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

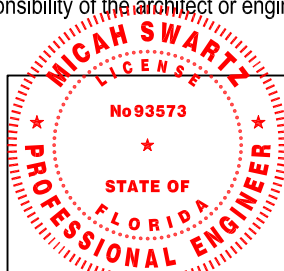

03/10/26

MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel		
APPROVED BY: D.VEZO			
RECORD No.: D1000238			
REPORT No.: ---	CAD DWG. No.: —	REV: B	SHEET 16 of 20

4" FROM CORNERS

18" O.C. TYP.

This diagram shows a vertical window frame. The frame has a double-line border. On the right side, there are dimension lines indicating a 4-inch offset from the corners and a typical 18-inch on-center spacing for the frame members. The window opening is a large rectangle in the center.

[illegible]

The image contains two technical drawings of a frame jamb section, labeled (TYP) for typical use.

FRAME JAMB SECTION (TYP) HORIZONTAL SECTION

This drawing shows a cross-section of a frame jamb installed in a wall. Key dimensions and components include:

- 1 1/2" MIN. EMBEDMENT:** The minimum depth the jamb must be set into the wall.
- 3/4" MINIMUM EDGE DISTANCE:** The minimum distance from the edge of the wall to the center of the jamb.
- 1/4" MAX. SHIM SPACE:** The maximum allowable gap between the jamb and the wall, filled with shims.
- Callouts:**
 - 1: Points to the bottom flange of the jamb.
 - 2: Points to the top flange of the jamb.
 - 3: Points to the jamb body.
 - 4: Points to the jamb body.
 - 5: Points to the jamb body.
 - 6: Points to the jamb body.

FRAME JAMB SECTION (TYP) VERTICAL SECTION

This drawing shows a cross-section of a frame jamb installed in a wall. Key dimensions and components include:

- 1 1/2" MIN. EMBEDMENT:** The minimum depth the jamb must be set into the wall.
- 3/4" MINIMUM EDGE DISTANCE:** The minimum distance from the edge of the wall to the center of the jamb.
- 1/4" MAX. SHIM SPACE:** The maximum allowable gap between the jamb and the wall, filled with shims.
- Callouts:**
 - 1: Points to the bottom flange of the jamb.
 - 2: Points to the top flange of the jamb.
 - 3: Points to the jamb body.
 - 4: Points to the jamb body.
 - 5: Points to the jamb body.
 - 6: Points to the jamb body.

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+55/-55	NO


1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1-1/2" into the buck. For 2x wood frame substrate (min. S.G. = 0.42).
3. Use two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
4. Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
5. Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
6. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.

The seal is circular with a red border. Inside the border, the text "MECHANICAL ENGINEER" is written in a semi-circle at the top. In the center, the number "No 93573" is displayed above a single star, which is above the text "STATE OF FLORIDA". At the bottom, the text "PROFESSIONAL ENGINEER" is written in a semi-circle. The entire seal is surrounded by a dashed circular line.


03/10/26 MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

		DATE: 02/09/2026	 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel			
APPROVED BY: D.Vezo				
RECORD No.: D1000238				
REPORT No.: ---	CAD DWG. No.: ---	REV: B	SHEET 17 of 20	

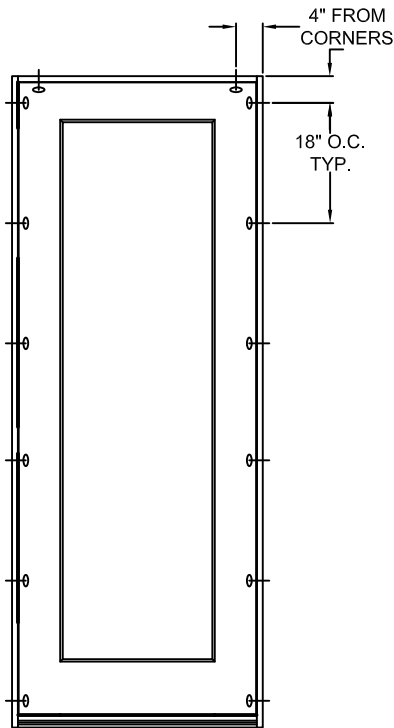


TYPICAL ELEVATION WITH FASTENER SPACING

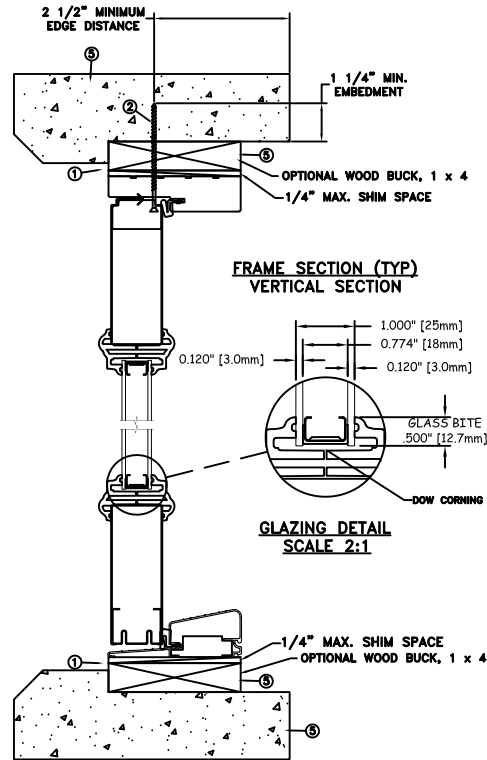

**FRAME SECTION (TYP)
VERTICAL SECTION**

**GLAZING DETAIL
SCALE 2:1**

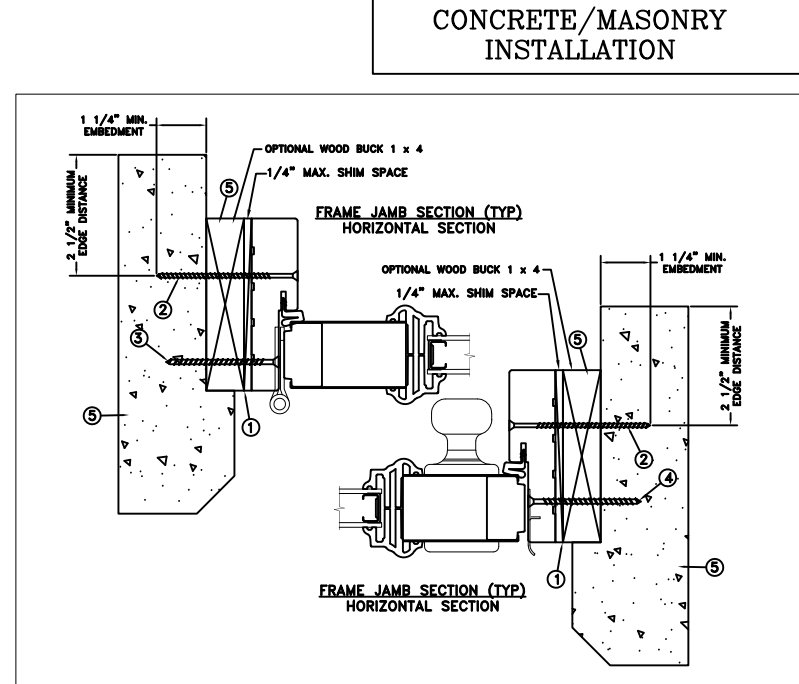

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

**FRAME JAMB SECTION (TYP)
HORIZONTAL SECTION**

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use 3/16" tapcon or equivalent fasteners through frame with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete or masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. Glazing shall be 3.0mm tempered - 18.0mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. TAS 202-94
6. Product meets High Velocity Hurricane Zone (HVHZ) Requirements.
7. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:


This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

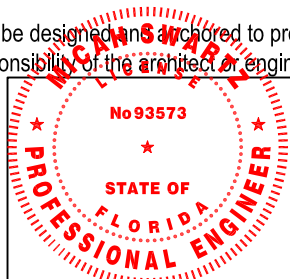



03/10/26 **MICAH SWARTZ, P.E.**
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936		
DRAWN BY: M.HAM	SCALE: NTS			
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel			
APPROVED BY: D.VEZO				
RECORD No.: D1000238				
REPORT No.: ---		CAD DWG. No.: —	REV: B	SHEET 18 of 20

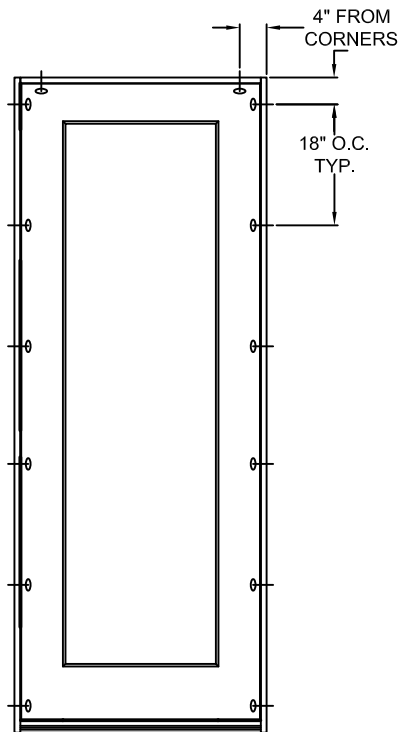

TYPICAL ELEVATION WITH FASTENER SPACING

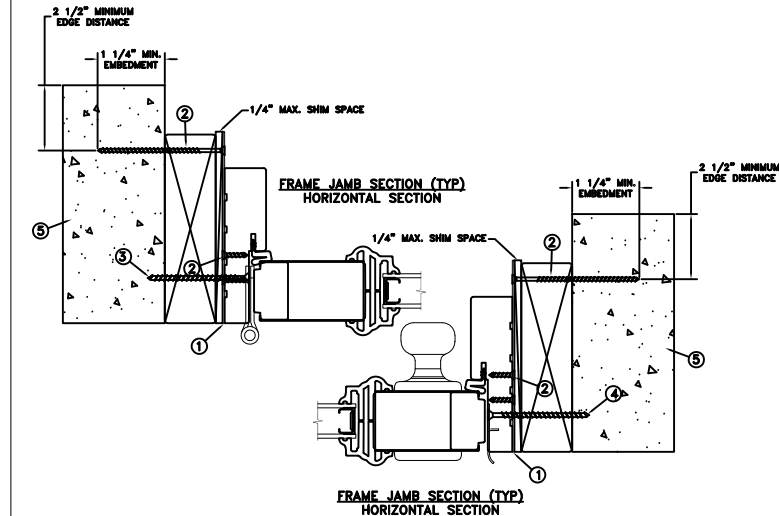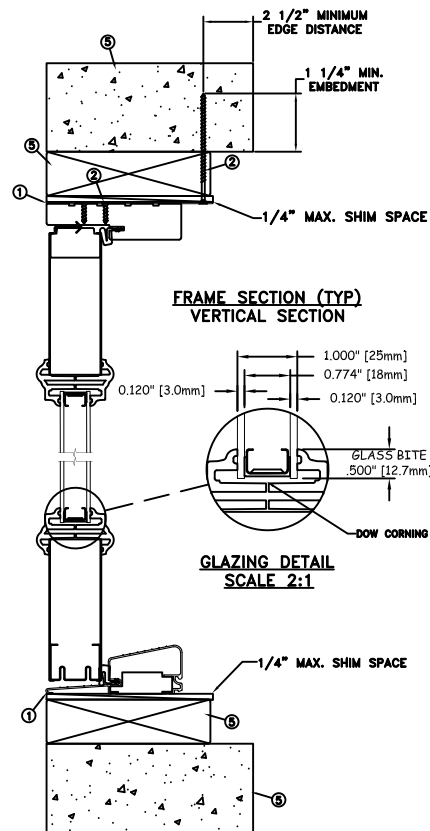

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+55/-55	NO

Installation Notes:

1. Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
2. Use two (1) - 3/16" Tapcon or equivalent fasteners through strap with sufficient length to penetrate a minimum of 1-1/4" into concrete or masonry at each location with a 2-1/2" min. from edge distance. Use two (2) - #8 PFH fasteners through masonry strap into frame. For concrete (min. fc = 3000 psi) or masonry substrate (CMU shall adhere to ASTM C90).
3. Install one (1) - 3/16" tapcon through each hinge plate with 1-1/4" min. embedment into concrete masonry.
4. Install one (1) - 3/16" tapcon through each deadbolt and latch strike plate with 1-1/4" min. embedment into concrete or masonry.
5. Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

1. The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
2. All glazing shall conform to ASTM E1300.
3. At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
4. Use structural or composite shims where required.
5. Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
6. TAS 202-94
7. Product meets High Velocity Hurricane Zone (HVHZ) requirements.
8. Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

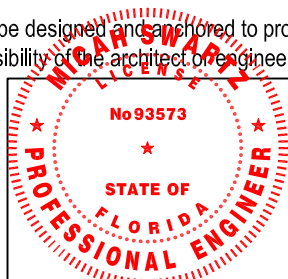


03/10/26 MICAH SWARTZ, P.E.
PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075



This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936
DRAWN BY: M.HAM	
CHECKED BY: D.VEZO	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel
APPROVED BY: D.VEZO	
RECORD No.: D1000238	CAD DWG. No.: ---
REPORT No.: ---	
REV: B	SHEET 19 of 20

MASONRY STRAP INSTALLATION

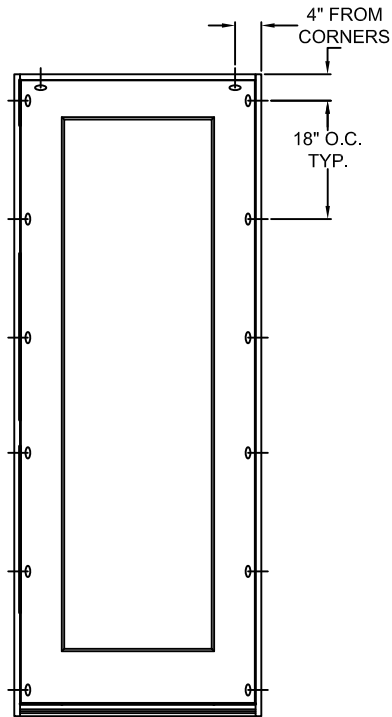

TYPICAL ELEVATION WITH FASTENER SPACING

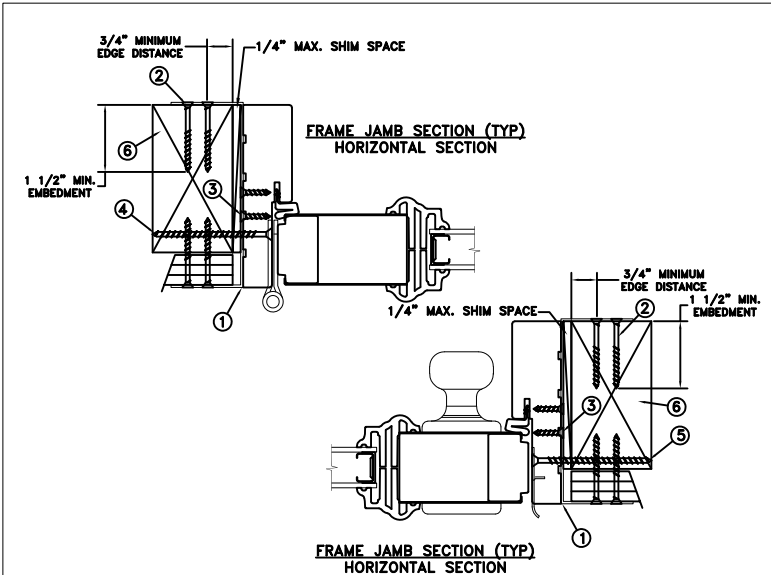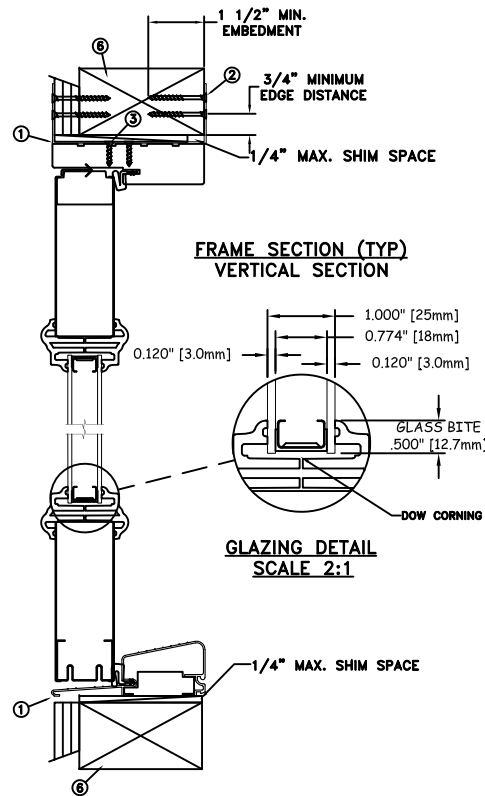

MAXIMUM FRAME	DP	IMPACT
37.375" x 96.5"	+55/-55	NO

Installation Notes:

- Seal flange/frame to substrate. Sill shall be set on a continuous serpentine bead of structural grade silicone caulk when no fastener is used to anchor the sill (typical).
- Use min. two (2) - #8 PFH or larger fasteners through masonry strap with sufficient length to penetrate a minimum of 1 1/2" into the buck. Bend straps around both sides of the buck. For 2x wood frame substrate (min. S.G. = 0.42).
- Use min. two (2) - #8 PFH or larger fasteners through masonry strap into jamb without penetrating through the jamb into product causing visibility or collateral damage to product.
- Install one (1) - #8 x 3" PH fastener through each hinge plate into rough opening.
- Install one (1) - #8 x 3" PH fastener into deadbolt strike plate, and one (1) - #8 x 2" PH fastener into latch strike plate through the jamb into the rough opening.
- Host structure (wood buck, masonry, steel) to be designed and anchored to properly transfer all loads to the structure. The host structure is the responsibility of the architect or engineer of record for the project of installation.


General Notes:

- The product shown herein is designed, tested and manufactured to comply with the wind load criteria of the adopted International Building Code (IBC), the International Residential Code (IRC), the current Florida Building Code (FBC) and the industry requirement for the stated conditions.
- All glazing shall conform to ASTM E1300.
- At minimum, glazing shall be 3.0mm tempered - 18mm airspace - 3.0mm tempered glass.
- Use structural or composite shims where required.
- Masonry strap specifications: 20 Ga. galvanized steel, .036" min. thickness x 1.5" min. width.
- TAS 202-94
- Product meets High Velocity Hurricane Zone (HVHZ) requirements.
- Approved Impact Protective system is required on this product in areas requiring impact resistance.

This schedule addresses only the fasteners required to anchor the unit to achieve the rated design pressure and impact performance (where applicable) up to the size limitations noted. It is not intended as a guide to the installation process and does not address the sealing consideration that may arise in different wall conditions. For the complete installation procedure, see the instructions packaged with the unit or go to www.jeld-wen.com.

DISCLAIMER:

This drawing and its contents are confidential and are not to be reproduced or copied in whole or in part or used or disclosed to others except as authorized by JELD-WEN Inc.

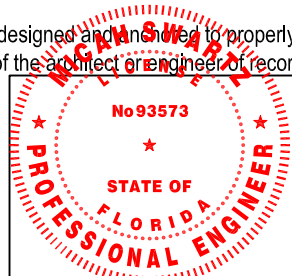

03/10/26

MICAH SWARTZ, P.E.

PE No. 93573
5134 Cambridge Ct.
Klamath Falls, OR. 97603
(541) 363-8075

This item has been digitally signed and sealed by Micah Swartz, P.E. on the date adjacent to the seal. Printed copies of this document are not considered signed and sealed and the signature must be verified on any electronic copies

	DATE: 02/09/2026	JELD-WEN 3737 LAKEPORT BLVD. KLAMATH FALLS OR, 97601 PHONE: (800) 535-3936	
DRAWN BY: M.HAM	SCALE: NTS		
CHECKED BY: D.Vezo	TITLE: Contours (S-2500) Steel Wood Swinging Door Outswing 1 Panel		
APPROVED BY: D.Vezo			
RECORD No.: D1000238			
REPORT No.: ---	CAD DWG. No.: —	REV: B	SHEET 20 of 20