



Corle Building Systems R or PBR Panel Installation Details

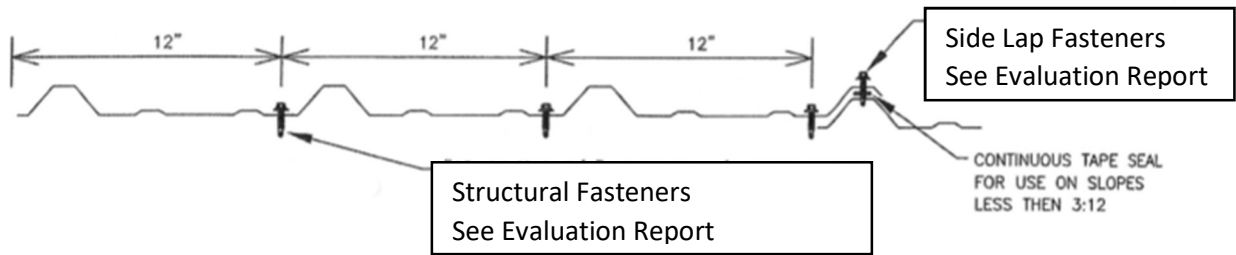

FASTENER PATTERN AT PANEL ENDS

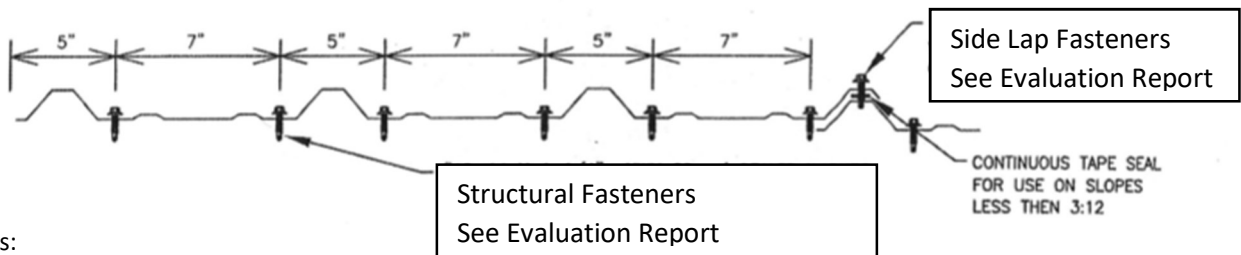

Notes:

1. Fastener Pattern 5-7-5 is to be used at the ends of all panels
2. Fastener Pattern 12-12 and 5-7-5 are to be used at the intermediate supports as indicated in the span load tables to achieve the required uplift load capacity.
3. Structural Support Fasteners may be either fastener A or B as indicated in the Evaluation Report.

R / PBR Installation Detail

